

1388 Parts - 1388 dc servo drive for use with the 1326DP motor

<u>Catalog Number</u>	<u>Part #</u>	<u>Description</u>
<i>replacement drives:</i>		
1388B-AV10	112123	10 amp DC Servo Controller
1388B-AV10-A	113570	10 amp, w/ Aux Contact
1388B-AV10-A02	113569	10 amp, w/ Overload Compensation
1388B-AV10-A07	145203	10 amp, w/ Transistor Enable & Current Feedback
1388B-AV10-A07-D	145208	10 amp, w/ A07 & External Shunt
1388B-AV10-C	119798	10 amp, w/ Torque Block Option
1388B-AV20	111812	20 amp DC Servo Controller
1388B-AV20-A	113572	20 amp, w/ Aux Contact
1388B-AV20-A02	113571	20 amp, w/ Overload Compensation
1388B-AV20-A07	145202	20 amp, w/ Transistor Enable & Current Feedback
1388B-AV20-A07-D	145209	20 amp, w/ A07 & External Shunt Resistor
1388B-AV20-C	119799	20 amp, w/ Torque Block Option
1388B-AV20-D	126071	20 amp, w/ External Shunt Resistor
1388B-AV40	112184	40 amp DC Servo Controller
1388B-AV40-A	113574	40 amp, w/ Aux Contact
1388B-AV40-A02	113573	40 amp, w/ Overload Compensation
1388B-AV40-A07	145204	40 amp, w/ Transistor Enable & Current Feedback
1388B-AV40-A07-D	145210	40 amp, w/ A07 & External Shunt
1388B-AV40-C	119800	40 amp, w/ Torque Block Option
1388B-AV40-D	126072	40 amp, w/ External Shunt Resistor
1388-AV60	109357	60 amp DC Servo Controller
1388-AV60-A	112192	60 amp, w/ Aux Contact
1388-AV60-A-A03	163728	60 amp, w/ Aux Contact & Current Feedback
1388-AV60-A-D	*****	60 amp, w/ Aux Contact & External Shunt
1388-AV60-A07-D	145211	60 amp, w/ A07 & External Shunt
1388-AV60-C	119801	60 amp, w/ Torque Block Option
1388-AV60-D	126073	60 amp, w/ External Shunt Resistor
<i>control boards:</i>		
*****	112360	Standard 10 amp
*****	113325	Standard 20/40/60 amp
*****	113319	10 amp, w/ A01 Aux Plug Option
*****	113488	20/40/60 amp, w/ A01 Aux Plug Option
*****	113320	10 amp, w/ A02 Overload Comp Option
*****	113489	20/40/60 amp, w/ A02 Overload Comp
*****	113805	10 amp, w/ Torque Block
*****	113810	20/40/60 amp, w/ Torque Block
*****	114663	10 amp, w/ A03 Current Feedback Option
*****	116327	20/40/60 amp, w/ A03 Current Feedback
*****	117684	20/40/60 amp, w/ A05 Anti-Backlash
*****	122933	10 amp, w/A06 Transistor Enable option
*****	122934	20/40/60 amp, w/ A06 Transistor Enable Option
*****	126686	10 amp, w/ A07 Transistor Enable & Current Feedback
*****	126684	20/40/60 amp, w/ A07 Transistor Enable & Crnt Fdbk
<i>connectors:</i>		
*****	108828	A3TB1, 4-pin Phoenix connector
*****	110838	A3TB2, 15-pin Phoenix connector
<i>modification kits:</i>		
1388-K-A06	135235	A06 Transistor Enable Option (soldering required)
1388-MOD-SR88A	129316	External Shunt Resistor Kit, 675 watt, w/ Fuse
<i>inductors:</i>		
1388-L10-10	113212	Inductor--1.0 mH, use with 1388B-AV10
1388-L20-5	109826	Inductor--0.5 mH, use with 1388B-AV20

1388-L40-2	109828	Inductor--0.2 mH, use with 1388B-AV40
1388-L60-2	109833	Inductor--0.2 mH, use with 1388B-AV60

miscellaneous:

*****	106950	Cooling fan, all drive sizes
-------	--------	------------------------------

*****	117639	60 amp shunt fuse
-------	--------	-------------------

Notes:

- 1) The only drive components that are field replaceable are the control boards.
- 2) Series B control boards can be used on the Series A drives.
- 3) The A06 option can only be used on drives without other options (A07 includes A06 already).

7/8/97