



Bulletin 1395

346A - 980A Power Stage Interface Board Replacement Instructions

Description The primary function of the Power Stage Interface Board is to provide interface between the Main Control Board, and the Power Bridge boards such as the Pulse Transformer and Snubber boards and the Feedback Board. The primary functions performed include:

- Distribution of DC Control power to the Main Control Board.
- Provide 3 phase line synchronization signals to the Main Control Board.
- Produce all Armature and Field bridge SCR gate signals from control signals provided from the Main Control Board.
- Contactor and other logic control with interface to Main Control Board for these functions.

Installation The following procedure describes the removal and replacement of the Bulletin 1395 Power Stage Interface Board.



WARNING: To avoid an electrical shock hazard, **REMOVE POWER** before attempting to perform the following procedure.

1. Ensure that power to the Drive is removed.
2. The Power Stage Interface is located above the Power Supply Board and Adapter Boards on the first layer of boards inside the front door.
3. Disconnect the 10 ribbon and wire connectors (J1 thru J10) located on the board (refer to Figure 1).
4. Disconnect the wires connected to the TB1 screw terminal on the board.
5. Loosen the 5 screws securing the board to the panel, noting the board orientation. Remove the board.
6. Position the new Power Stage Interface Board on the panel and secure.
7. Reconnect the various wires and cables, checking for correct placement. Verify correct connections have been made using Table 1-1.
8. Verify voltage selection for the Reset and Motor Thermo inputs is correct per Table 1-2. Jumpers J11 and J12 on the Power Stage Interface determine whether the voltage used for the Reset and Motor Thermo inputs to the drive can be 24 VDC or 115 VAC. Both jumpers should be in the same position. Position 1-2 is for 115 VAC and position 2-3 is for 24 VDC.
9. Check the Drive for proper operation.

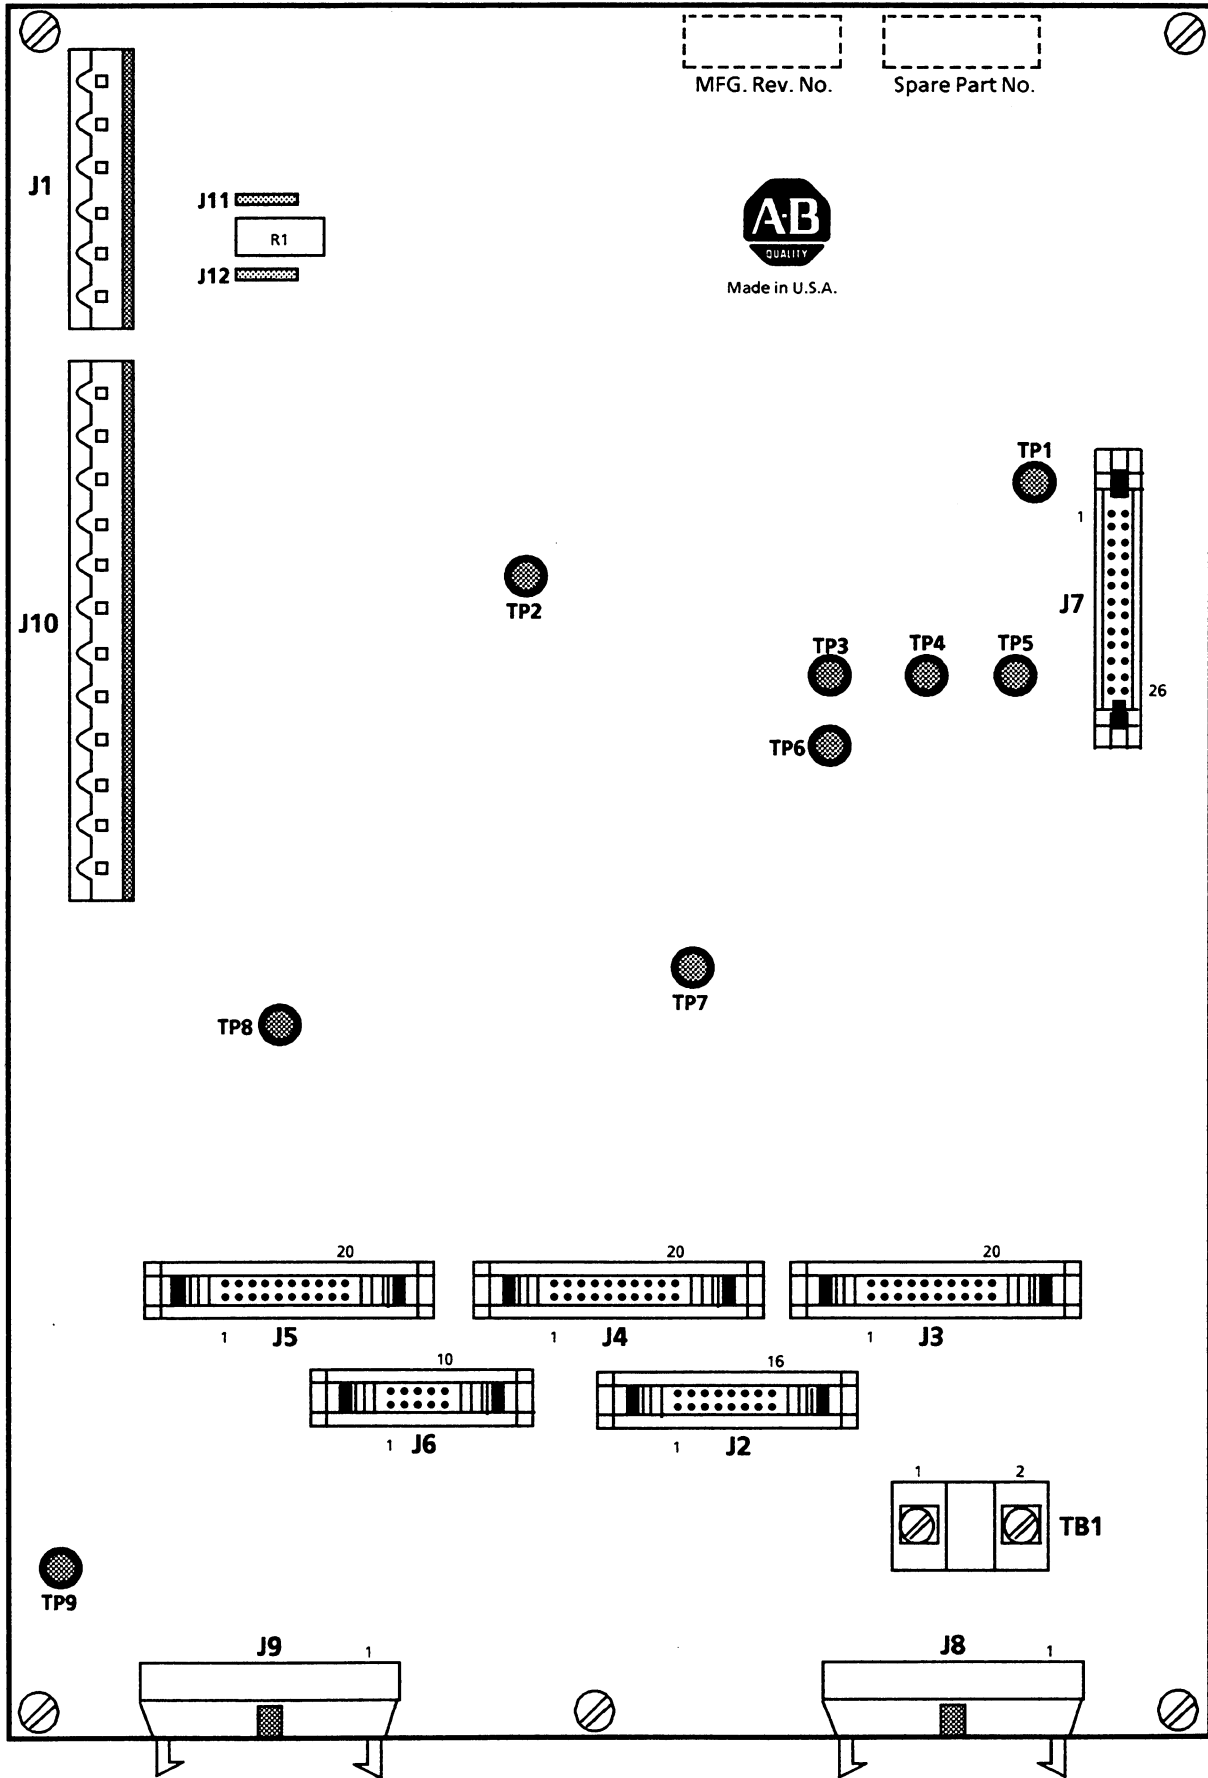


Figure 1-1. Bulletin 1395 Power Stage Interface Board (346A - 980A) Overview

Table 1-1. Power Stage Interface Connections

CONN	TYPE	PURPOSE
TB1	2 TERM SCREW	Connection to control common. Control common is connected to signal ground TE
A7 - 61	6 PIN PLUG	Provides hard wiring for : <ul style="list-style-type: none"> - Pilot Relay (PR) coil control voltage - Main contactor auxiliary contact feedback - 115 VAC control voltage input to Power Stage Interface
J2	16 PIN RIBBON	Connection for feedback signals from Feedback Board
J3	20 PIN RIBBON	Connection to Armature Pulse Transformer and Snubber Board A2
J4	20 PIN RIBBON	Connection to Armature Pulse Transformer and Snubber Board A3
J5	20 PIN RIBBON	Connection to Armature Pulse Transformer and Snubber Board A4
J6	10 PIN RIBBON	Connection to Field Pulse Transformer and Snubber Board A5
J7	26 PIN RIBBON	Connection to Unit Power Supply. All DC control voltages enter the Power Stage Interface thru J7.
J8	34 PIN RIBBON	Connection to Main Control Board to send DC control voltages and 3 phase synchronization signals to Main Control Board.
J9	34 PIN RIBBON	Connection to Main Control Board for logic and firing control signals.
J10	12 PIN PLUG	Connection for external logic control hardware devices. Actual wiring is from J10 to terminals 1-12 of drive terminal TB3. External devices are connected directly to TB3.

Table 1-2. Power Stage Interface Jumpers

JUMPER	POSITION	PURPOSE
J11	*1-2	115 VAC Motor Thermoguard Input
	2-3	24 VDC Motor Thermoguard Input
J12	*1-2	115 VAC Reset input
	2-3	24 VDC Reset input

* Indicates Normal Jumper Position

Table 1-3 lists the 9 test points which are provided to monitor signal values on the Power Stage Interface Board.

Table 1-3. Power Stage Interface Test Points

TP	NORMAL VALUE	SIGNAL
1	- 12 ± 0.48 VDC	- 12 VDC power supply
2	0 VDC when field relay K3 is energized.	Control Signal to K3
3	± 0 VDC	Control Common (TE Signal Ground)
4	+ 5 ± 0.15 VDC	+ 5 VDC power supply
5	+ 12 ± 0.48 VDC	+ 12 VDC power supply
6	+ 24 ± 6.0 VDC	+ 24 VDC Power Supply
7	+ 5 VDC when armature firing is enabled.	AFIREEN signal from Main Control Board
8	Not Used	Not Used
9	+ 5 VDC when field firing is enabled.	FFIREEN signal from Main Control Board



With offices in major cities worldwide.

WORLD HEADQUARTERS
 1201 South Second Street
 Milwaukee, WI 53204 USA
 Tel: (414) 382-2000
 Telex: 43 11 016
 FAX: (414) 382-2400

**EUROPE/INDIA/MIDDLE EAST/
 AFRICA HEADQUARTERS**
 Allen-Bradley
 International Limited
 Chiltern House
 45 Station Road
 Henley-on-Thames
 Oxon, RG9 1AT England
 Tel: (44) 491-577013
 Telex: 851 849782
 FAX: (44) 491-578933

ASIA/PACIFIC HEADQUARTERS
 Allen-Bradley(Hong Kong) Limited
 2901 Great Eagle Center
 23 Harbour Road
 G.P.O. Box 9797
 Wanchai, Hong Kong
 Tel: (852) 5-739391
 Telex: 780 64347
 FAX: (852) 5-745326

CANADA HEADQUARTERS
 Allen-Bradley Canada Limited
 135 Dundas Street
 Cambridge, Ontario N1R 5X1
 Canada
 Tel: (519) 623-1810
 Telex: 069 59317
 FAX: (519) 623-8930

**LATIN AMERICA
 HEADQUARTERS**
 1201 South Second Street
 Milwaukee, WI 53204 USA
 Tel: (414) 382-2000
 Telex: 43 11 016
 FAX: (414) 382-2400

MOTION CONTROL DIVISION
 4300 West Brown Deer Road
 Brown Deer, WI 53223