



# Installation Instructions

## Instructions pour l'Installation


## Installationsbeschreibung

## Procedura di Installazione

## Instrucciones de Instalación


(Bulletin 1492-ASPА, -ASPU)

**SHUNT TRIP**  
**DÉCLENCHEUR SHUNT**  
**ARBEITSSTROMAUSLÖSER**  
**SGANCIATORE DI APERTURA**  
**CONMUTADOR REMOTO**

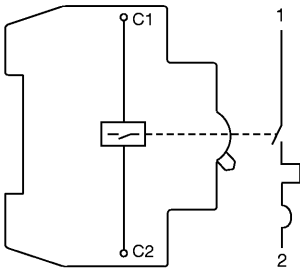
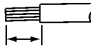




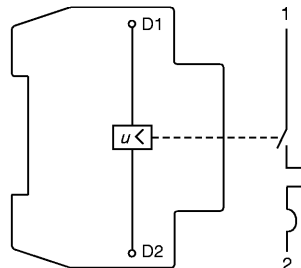

**1492-ASPА ...**

**UNDervOLTAGE RELEASE**  
**DÉCLENCHEMENT À MINIMUM**  
**UNTERSpannungSAUSLÖSER**  
**SGANCIATORE DI MINIMA TENSIONE**  
**INTERRUPTOR DE SUBTENSION**



**1492-ASPU ...**

	Cu 			  		
	mm <sup>2</sup>	AWG				
1492-ASPА ...	1 x 1 - 25	1 x #18 - 8	13 mm (.52")	Z2	1.0 x 6.5mm (.040 x .25 in)	2.4 Nm (21 lb-in)
	2 x 1 - 2 x 4	2 x #18 - 2 x #12				
1492-ASPU ...	1 x 0.5 - 4	1 x #18 - 14	12 mm (.47")	Z2	0.8 x 5.0mm (.030 x .200 in)	1.1 Nm (10 lb-in)
	2 x 0.5 - 2 x 2.5	2 x #18 - 2 x #14				



**ATTENTION:** To prevent electrical shock, disconnect from power source before installing or servicing.


**ATTENTION:** Avant le montage et la mise en service, couper l'alimentation secteur pour éviter toutes décharges.

**ACHTUNG:** Vor Installations- oder Servicearbeiten Stromversorgung unterbrechen, um Elektroschocks zu vermeiden.

**ATTENZIONE:** Per prevenire infortuni, togliere tensione prima dell'installazione o manutenzione.

**ATENCIÓN:** Desconéctese de la corriente eléctrica, antes de la instalación o del servicio, a fin de impedir sacudidas eléctricas.


**Allowable Combinations and Positions**  
**Combinaisons et Positions Possible**  
**Zulaessige Kombinationen und Positionen**  
**Combinazioni e Posizioni Accettabili**  
**Combinaciones y Posiciones Válidas**

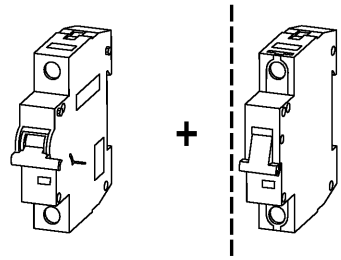

Maximum  
 Massimo  
 Máximo

1492- ASPH3	1492- ASPHH3	1492- ASPHS3	1492- ASPA...	1492- ASPU...	1492- SP...
X					X
	X				X
		X			X
			X		X
				X	X
X			X		X
	X		X		X
		X	X		X

**1492-SP ... + 1492-ASPA ...**

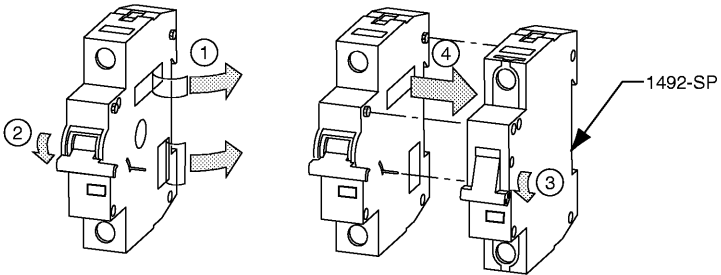

**1492-SP ... + 1492-ASPU ...**

