

 


Chassis Interface Module for 1746 Local I/O

Read this document along with the installation instructions (pub. no. 1747-5.32) to install and use the Chassis Interface module (1747-PCIL/A) for 1746 Local I/O.

Using the Watchdog Jumper with the External Watchdog Connector

To meet cUL Hazardous Class I Div 2 certifications, the Chassis Interface module's watchdog connector must be connected to the 1746-IG16 module. In this application, you cannot use a cable longer than 10 feet.



Worldwide representation.

Argentina • Australia • Austria • Bahrain • Belgium • Brazil • Bulgaria • Canada • Chile • China, PRC • Colombia • Costa Rica • Croatia • Cyprus • Czech Republic • Denmark • Ecuador • Egypt • El Salvador • Finland • France • Germany • Greece • Guatemala • Honduras • Hong Kong • Hungary • Iceland • India • Indonesia • Ireland • Israel • Italy • Jamaica • Japan • Jordan • Korea • Kuwait • Lebanon • Malaysia • Mexico • Netherlands • New Zealand • Norway • Pakistan • Peru • Philippines • Poland • Portugal • Puerto Rico • Qatar • Romania • Russia-CIS • Saudi Arabia • Singapore • Slovakia • Slovenia • South Africa, Republic • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey • United Arab Emirates • United Kingdom • United States • Uruguay • Venezuela • Yugoslavia

Allen-Bradley Drives

Allen-Bradley Headquarters, 1201 South Second Street, Milwaukee, WI 53204 USA,
Tel: (1) 414 382-2000 Fax: (1) 414 382-4444

Publication 1747-5.32-RN1- July 1998

PN 955133-80

© 1998 Rockwell International. All Rights Reserved. Printed in USA