




Packing Data

1747 Open Controller Serial Adapter Cable (1747-OCS92)

What's In This Package

The open controller serial adapter cable connects an open controller CPU (1747-OCExxxA) to a serial cable or device. Make sure that you have two of these cables before you discard any packing material.

RJ-45 connector
←
*to open
controller
serial port*

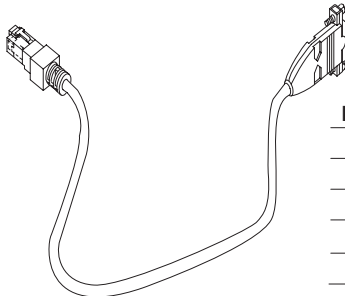

1747-OCS92 cable

9-pin, male D-shell adapter
→ *to serial device*

Pin	RS-232	RS-422	RS-485
1	DCD	422 TXD	TRXD
2	RXD	422 RXD	
3	TXD		
4	DTR		
5	common	common	common
6	DSR	422 RXD	
7	RTS		
8	CTS	422 TXD	TRXD
9	N/C	N/C	N/C

20765-M

