 





Transfer PROM → RAM




Transfer RAM → PROM



 Define/Clear Quick Recall Functions



Quick Recall Function

 

Module Setup



Module Reset



## Engineer's Reference

 
Attach to Processor




Start Processor [Run Mode]



Stop Processor [Halt Mode]



View Processor Fault

 

Clear Processor Fault




## Data Files


Default Data Files		
File Type	Identifier	File Number
Output	O	0
Input	I	1
Bit	B	3
Timer	T	4
Counter	C	5
Control	R	6
Integer	N	7

User Defined Data Files		
File Type	Identifier	File Number
Bit	B	10-255
Timer	T	
Counter	C	
Control	R	
Integer	N	


## Changing Data Values

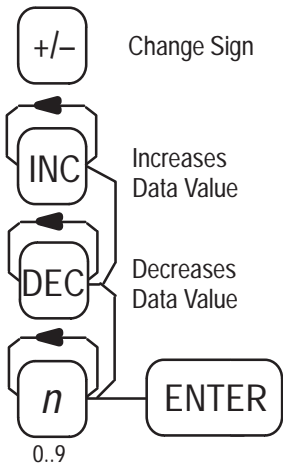


## Changing Addresses

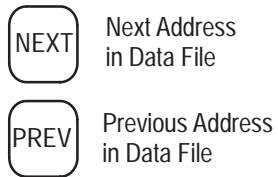


## Accessing Inputs and Outputs

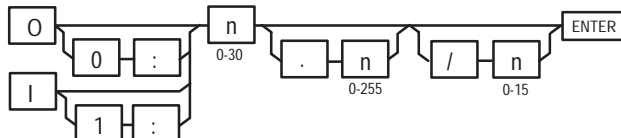


## Accessing Bit Data

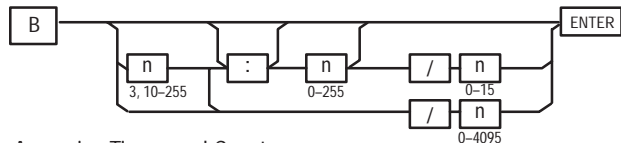

## Accessing Timers and Counters

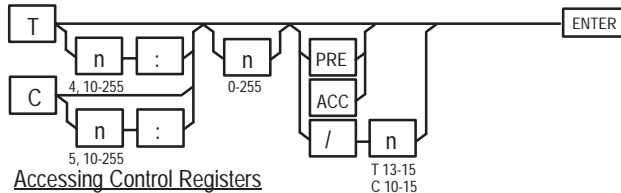

## Accessing Control Registers

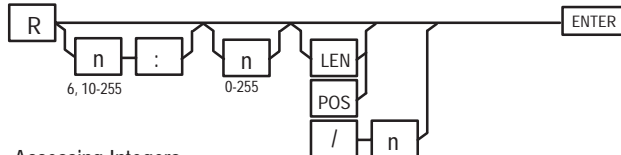

## Accessing Integers

