



Allen-Bradley PC DH-485 Interface Module (Cat. No. 1784-KR)

To the Installer

If you are using the 1784-KR module with the 1747-PA2E Advanced Programming Software (APS), you need to install the Host PC Software used to interface the 1784-KR to the APS. Follow the instructions below to help you do this.

Installing the 1784-KR Module Host Software

The 1784-KR Host Software lets the APS software communicate over the DH-485 using the 1784-KR module instead of the PC's serial communication port. It replaces the APS software file that interfaces the APS through the PC serial communication port. To install the 1784-KR Host Software:

1. Complete the hardware installation of the 1784-KR hardware in your PC system (See the PC DH-485 Interface Module Installation Guide, publication 1784-2.23, for details).
2. Complete the software installation of the 1747-PA2E Advanced Programming Software (See the 1747-PA2E Advanced Programming Software (APS), publication 1747-801, for details).
3. Change to the following directory for the APS package by typing:

```
cd \ipds\attach\slc500 [RETURN]
```

4. Rename the **lldriver.exe** file to **comport.exe** (or some other non-conflicting name). To do this, type:

```
ren lldriver.exe comport.exe [RETURN]
```

Release Notes
PC DH-485 Interface Module
(Cat. No. 1784-KR)

5. Place the 1784-KR Host Software diskette in your system's floppy disk drive and copy the **dh485cdl.exe** file from the disk to the **lldriver.exe** file. To do this, type:

```
copy a:dh485cdl.exe lldriver.exe [RETURN]
```

This completes the installation of the 1784-KR host software using the APS. When you start the APS, it will use the 1784-KR card as the DH-485 interface device.



With offices in major cities worldwide

**WORLD
HEADQUARTERS**
1201 South Second Street
Milwaukee, WI 53204 USA
Tel: (414)382-2000
Telex: 43 11 016
FAX: (414)382-4444

**EUROPE/INDIA/
MIDDLE EAST/AFRICA
HEADQUARTERS**
Allen-Bradley Europa B.V.
Amsterdamseweg 15
1422 AC Uithoorn
The Netherlands
Tel: (31)2975/68811
Telex: 884 18042
FAX: (44)2975/60222

**ASIA/PACIFIC
HEADQUARTERS**
Allen-Bradley (Hong Kong)
Limited
2901 Great Eagle Center
23 Harbour Road
G.P.O. Box 9797
Wanchai, Hong Kong
Tel: (852)5-739391
Telex: 780 64347
FAX: (852)5-745326

**CANADA
HEADQUARTERS**
Allen-Bradley Canada Limited
135 Dundas Street
Cambridge, Ontario N1R 5X1
Canada
Tel: (519)623-1810
Telex: 069 59317
FAX: (519)623-8930

**LATIN AMERICA
HEADQUARTERS**
1201 South Second Street
Milwaukee, WI 53204 USA
Tel: (414)382-2000
Telex: 43 11 016
FAX: (414)382-2400