

FLEX Ex 8 Output Analog Module

About this Release Note

Read this release note for the correct 1797-OE8 CE, CENELEC I/O entity parameters. For more information, refer to page 10 of the FLEX Ex 8 Output Analog Module Installation Instructions, publication 1797-5.3.

CE, CENELEC I/O Entity Parameters

Signal output (+ to -) for ch 0 to ch 7 (terminals: 0-1; 4-5; 8-9; 12-13; 17-18; 21-22; 25-26; 29-30)

	Protection	Group	Allowed Capacitance	Allowed Inductance
$U_o = 21V$ $I_o = 100mA$ $P_o = 150mW$	EEx ia	IIB	1.27 μ F	8mH
		IIC	188nF	2mH
If concentrated capacitance and/or inductance are available, use the following values.	EEx ia	IIB	400nF	10mH
		IIC	80nF	2mH

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846