



Kinetix 6000 Slot Filler Module

(Catalog Number 2094-PRF)

Introduction

This publication provides installation instructions for the Allen-Bradley® Bulletin 2094 Slot Filler module. Use these instructions for mounting your Slot Filler module to the power rail. For further Kinetix™ 6000 installation instructions refer to the *Kinetix 6000 Multi-Axis Servo Drive Installation Manual* (publication 2094-IN001x-EN-P).

ATTENTION

To avoid personal injury due to electrical shock, place a Slot Filler module (catalog number 2094-PRF) in any empty slot on the power rail.

Any power rail connector without a module installed will cause an error and disable the Kinetix 6000, however AC power is still present.

Mounting Your Slot Filler(s)

This procedure assumes you have mounted your power rail, integrated axis module, axis module(s), and shunt module.

To mount your Slot Filler module:

1. Determine which power rail connector requires a slot filler module.

2. Remove the protective boot from the power rail connector.
3. Hang the slot filler mounting bracket into the corresponding slot on the power rail.
4. Align the guide pin on the power rail with the guide pin hole in the back of the slot filler module.
5. Gently push the module against the power rail connector.
6. Use 2.26 N-m (20 lb-in.) torque to tighten the mounting screw (located bottom center of slot filler module).
- 7.

If you:	Then:
Have additional empty slot(s) in your power rail	Go to step 1 (above) and complete installation on your next slot filler.
Do not have empty slot(s) in your power rail	You have completed mounting your Slot Filler module(s).

Note: For removal and replacement procedures, refer to the *Kinetix 6000 Multi-Axis Servo Drive Integration Manual* (publication 2094-IN002~~x~~-EN-P).

For more information refer to our web site: www.ab.com/motion

For Allen-Bradley Technical Support information refer to: www.ab.com/support or Tel: (1) 440.646.5800

Allen-Bradley is a registered trademark of Rockwell Automation.
Kinetix is a trademark of Rockwell Automation.

www.rockwellautomation.com

Corporate Headquarters

Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36-BP 3A/B, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, 27/F Citicorp Centre, 18 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products

Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4800, Fax: (1) 864.281.2433
Europe: Rockwell Automation, Brühlstraße 22, D-74834 Elztal-Dallau, Germany, Tel: (49) 6261 9410, Fax: (49) 6261 17741
Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 351 6723, Fax: (65) 351 1733