





Installation Instructions
Installationsanleitung
Installation
Installazione
Instalación
Instructies
Instalação


PowerFlex 70 Replacement Cover
Ersatz-Frontdeckel für PowerFlex 70
Capot de rechange du PowerFlex 70
Coperchio di ricambio PowerFlex 70
Tapa de reemplazo del PowerFlex 70
PowerFlex 70 vervangdeksel
Tampa de Reposição do PowerFlex 70

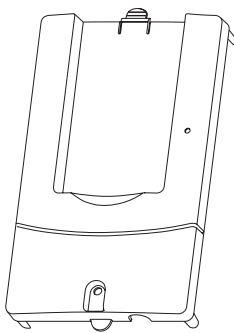


SK-M1-CVR1-A1
SK-M1-CVR1-B1
SK-M1-CVR1-C1
SK-M1-CVR1-D1

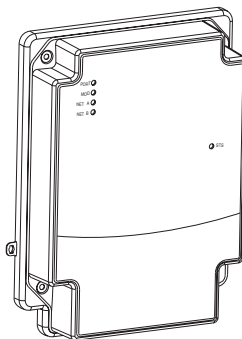


SK-M1-CVR0-B4
SK-M1-CVR0-D4

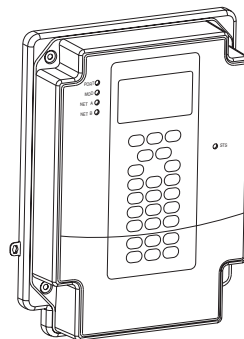

SK-M1-CVR3-B4
SK-M1-CVR3-D4


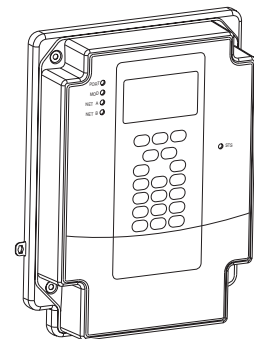


SK-M1-CVR5-B4
SK-M1-CVR5-D4


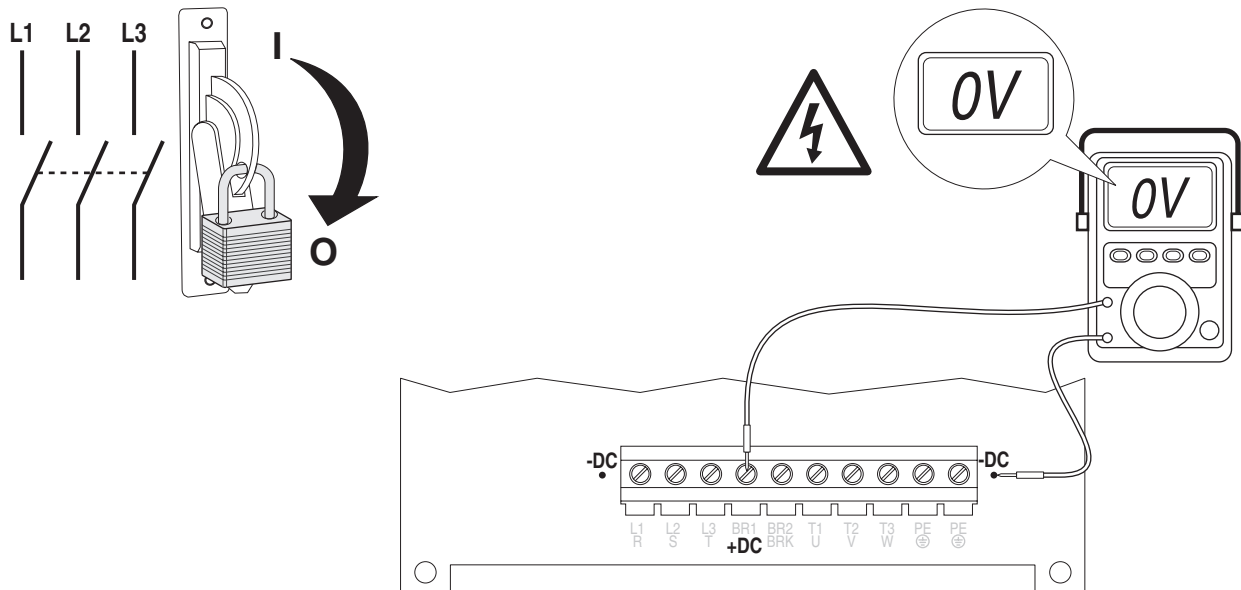


AB Spares

SK-M1-CVR1-A1
 SK-M1-CVR1-B1
 SK-M1-CVR1-C1
 SK-M1-CVR1-D1

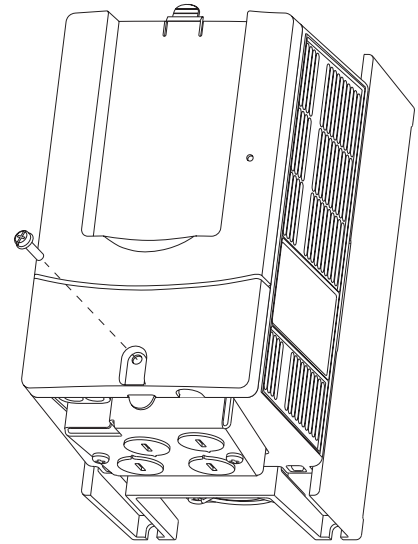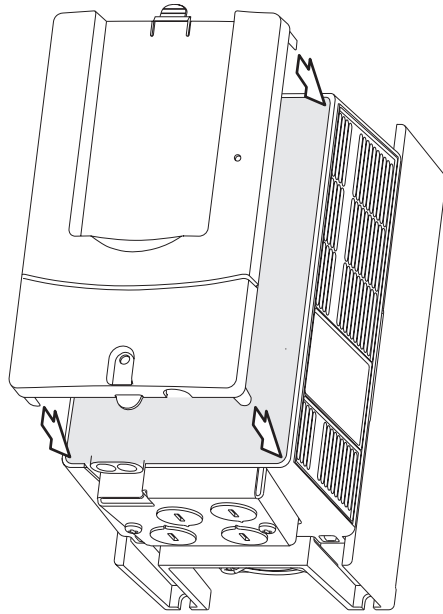

SK-M1-CVR0-B4 SK-M1-CVR3-B4 SK-M1-CVR5-B4
 SK-M1-CVR0-D4 SK-M1-CVR3-D4 SK-M1-CVR5-D4

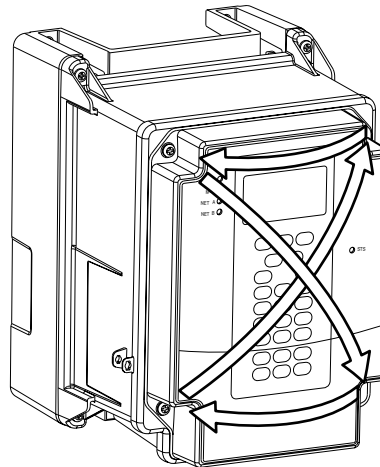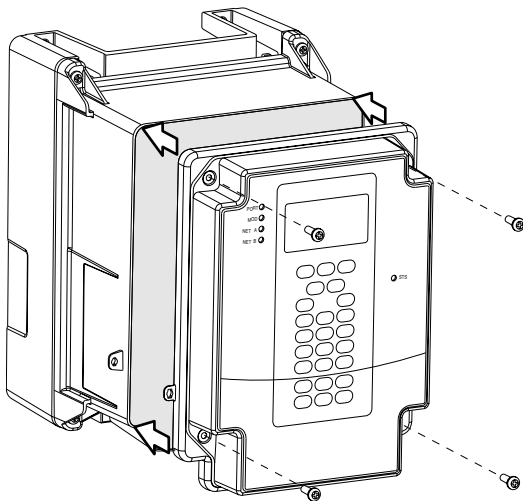

- ① A hand is shown holding a screw, ready to be inserted into the terminal block.
- ② A screwdriver is shown tightening a screw into the terminal block. Torque specification: 0.4 N-m (3.5 lb.-in.)
- ③ A screwdriver is shown tightening a screw into the terminal block. Torque specification: 0.79 N-m (7.0 lb.-in.)

www.rockwellautomation.com

Corporate Headquarters

Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
 Europe: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36-BP 3A/B, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
 Asia Pacific: Rockwell Automation, 27/F Citicorp Centre, 18 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products

Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4800, Fax: (1) 864.281.2433
 Europe: Rockwell Automation, Brühlstraße 22, D-74834 Elztal-Dallau, Germany, Tel: (49) 6261 9410, Fax: (49) 6261 1774
 Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 351 6723, Fax: (65) 355 1733

U.S. Allen-Bradley Drives Technical Support

Tel: (1) 262.512.8176, Fax: (1) 262.512.2222, Email: support@drives.ra.rockwell.com, Online: www.ab.com/support/abdrives

Publication 20A-IN004B-MU-P – July 2003
 Supersedes April 2002

