



PowerFlex 700 Standard/Vector Control I/O Wiring Differences
E/A-Verdrahtungsunterschiede zwischen der Standard- und Vektorsteuerungsoption des PowerFlex 700
Différences de câblage des E/S pour le PowerFlex 700 Standard/Contrôle vectoriel
Differenze di cablaggio tra PowerFlex 700 standard e I/O di controllo vettoriale
Diferencias de Cableado de E/S de Control Estándar/Vectorial del PowerFlex 700
I/O bedradingsverschillen standaard/vectorbesturing PowerFlex 700
Diferenças de fiação de E/S entre o controle padrão/vectorial do Powerflex 700

Input/Output	Standard	Vector	Parameter
Analog In Voltage			320 Bit 0/1 = "0" (Volts)
Analog In Current			320 Bit 0/1 = "1" (Current)
Analog Out Voltage			342/345 340 Bit 0/1 = "0" (Volts)
Analog Out Current			342/345 340 Bit 0/1 = "1" (Current)
Hardware Enable			366 J10
24V Digital In			361-366
Digital Out			Standard 380, 384 Vector 380, 384, 388



www.rockwellautomation.com

Corporate Headquarters

Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, 27/F Citicorp Centre, 18 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products

Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4800, Fax: (1) 864.281.2433

Europe/Middle East/Africa: Rockwell Automation, Brühlstraße 22, D-74834 Elztal-Dallau, Germany, Tel: (49) 6261 9410, Fax: (49) 6261 17741

Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 6356-9077, Fax: (65) 6356-9011

U.S. Allen-Bradley Drives Technical Support

Tel: (1) 262.512.8176, Fax: (1) 262.512.2222, Email: support@drives.ra.rockwell.com, Online: www.ab.com/support/abdrives

