




CENTERLINE[®] 2500 Motor Control Centers IP54 Sealing Instructions

For IP54 structures only

Procedure

1. Remove the tube of caulking (mastic) sealer from the splice kit. Cut the nozzle at the first notch, 3 mm (1/8") from the end.
2. Read the application directions on the tube. Apply a continuous bead of caulking, 3 mm (1/8") wide, around the outside edge of the sideplate of the fixed motor control center. See Figure 1.

Figure 1 Correct Application of Caulking

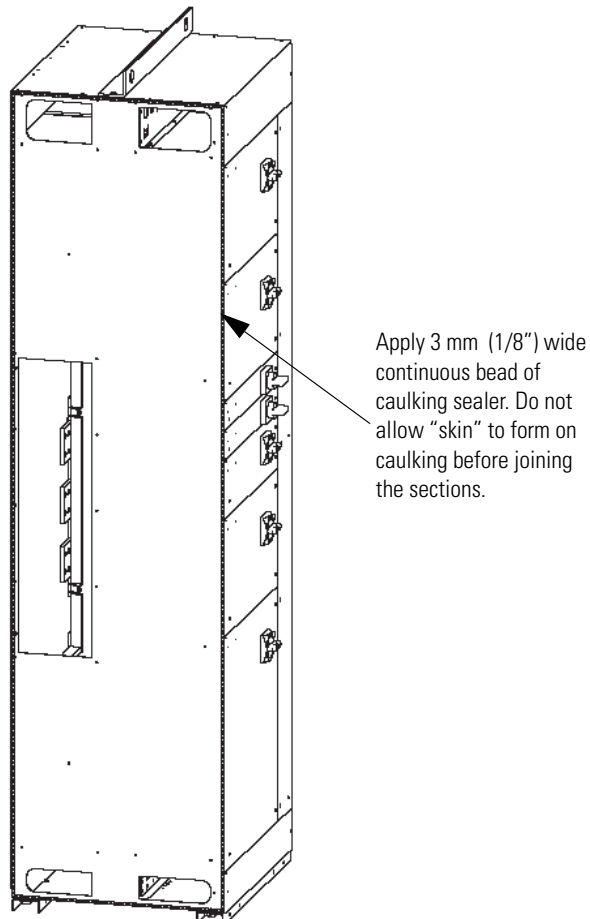

AB PLCs

Allen-Bradley, CENTERLINE, CENTERLINE 2500 and Rockwell Automation are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2500-IN003A-EN-P—August 2007

Supersedes Publication 2100-IN049A-EN-P - May 2001

Copyright © 2007 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.