



English Section

InView P22R Adapter Plate

(Catalog Number 2706-PNR2)

Overview


For additional information, refer to:

- InView User Manual, publication 2706-UM016.
- InView P22R Installation Instructions, publication 2706-IN014.
- The InView publications can be found in the Manuals-On-Line section of www.ab.com or theautomationbookstore.com.

Adapter Plate Mounting

The following steps provide instructions for installing the adapter plate in an existing DL40 Plus four-line display panel opening.

1. Drill the appropriate mounting holes in the enclosure or panel.

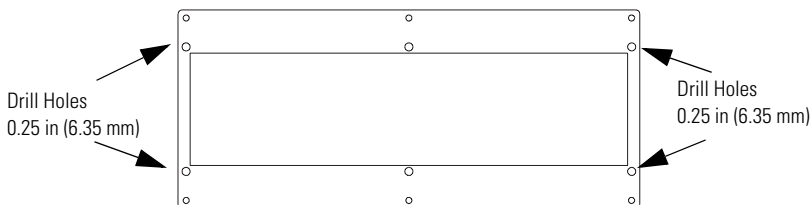

2. Remove the six mounting nuts from the hardware bag provided with the plate.
3. Position the adapter plate (2706-PNR2) in the panel or enclosure mounting hole.
4. Install nuts and alternately tighten the nuts to a torque of 0.904 Nm (8 in-lb).

AB Parts


InView Display Mounting

The following instructions provide panel cutout dimensions for the InView P22R Panel Mount Display.

The InView P22R mounts in a custom panel or enclosure. When it is properly installed, the faceplate provides a NEMA Type 12, 13, and 4X(indoor) rating. To install the InView Display:

1. Cut and drill the appropriate mounting holes in the enclosure or panel.
2. Remove the six mounting nuts from the hardware bag provided with the display.
3. Position the InView Display in the panel or enclosure mounting hole.
4. Install nuts and alternately tighten the nuts to a torque of 0.904 Nm (8 in-lb).

Panel Cutout Dimensions

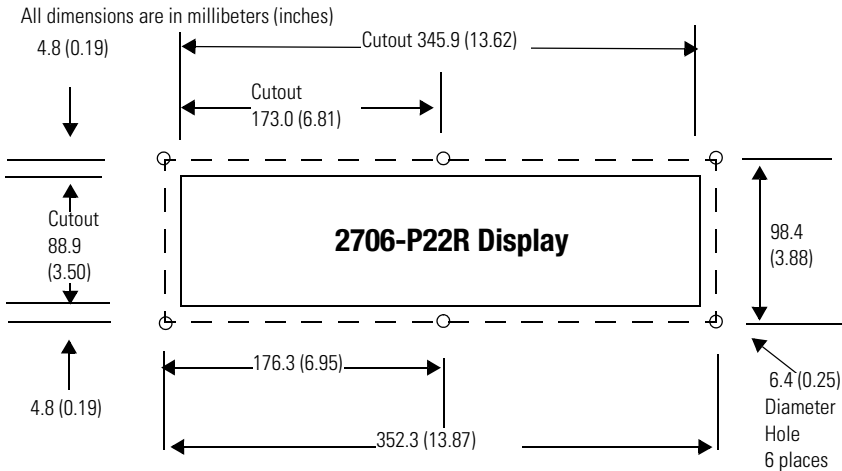

www.rockwellautomation.com

Corporate Headquarters

Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36-BP 3A/B, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, 27/F Citicorp Centre, 18 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products

Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4900, Fax: (1) 864.281.2433

Europe: Rockwell Automation, Brühlstraße 22, D-74834 Elztal-Dallau, Germany, Tel: (49) 6261 9410, Fax: (49) 6261 17741

Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 351 6723, Fax: (65) 355 1733

Publication 2706-IN020A-EN-P - January 2004

PN 41061-345-01(1)

Copyright © 2004 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.