

# Communication Modules

Catalog Numbers 2711P-RN6, 2711P-RN6K, 2711P-RN15S, 2711P-RN15SK

Topic	Page
Important User Information	2
Install a Communication Module	3
Install a Communication Module	4

## About This Publication

This document provides instructions on how to install or replace a communication module on a PanelView Plus 700, 1000, 1250, or 1500 terminal.

Cat. No. <sup>(1)</sup>	Communication				Conformal Coated	Marine Certified
	DH+	DH-485	Remote I/O <sup>(2)</sup>	ControlNet		
2711P-RN6	•	•	•			•
2711P-RN6K	•	•	•		•	
2711P-RN15S				•		•
2711P-RN15SK				•	•	

(1) These installation instructions also apply to other cat. no. 2711P-RNxx communication modules.

(2) Only supported on PanelView Plus 700 to 1500 terminals running FactoryTalk View Machine Edition software, version 5.1 or earlier.

The communication module installs over the logic module. The installation is the same for all communication modules regardless of communication type.

---

**IMPORTANT** The logic module must be attached to a PanelView Plus display module before you attach the communication module.

---

## Additional Resources

You can view or download publications at <http://www.rockwellautomation.com/literature/>. To order paper copies of technical documentation, contact your local Rockwell Automation distributor or sales representative.

## Important User Information

Solid-state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (Publication [SGI-1.1](#) available from your local Rockwell Automation sales office or online at <http://www.rockwellautomation.com/literature/>) describes some important differences between solid-state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid-state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.





In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.

	<b>WARNING:</b> Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.
	<b>ATTENTION:</b> Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard and recognize the consequences.
	<b>SHOCK HAZARD:</b> Labels may be on or inside the equipment, for example, drive or motor, to alert people that dangerous voltage may be present.
	<b>BURN HAZARD:</b> Labels may be on or inside the equipment, for example, drive or motor, to alert people that surfaces may reach dangerous temperatures.
<b>IMPORTANT</b>	Identifies information that is critical for successful application and understanding of the product.

## Install a Communication Module



**WARNING:** Explosion Hazard


Do not connect or disconnect any communication cable with power applied to this device or any device on a network. An electrical arc could cause an explosion in hazardous location installations. Be sure power is removed or the area is known to be nonhazardous before proceeding.



**ATTENTION:** Work in a static-free environment and wear a properly grounded electrostatic discharge (ESD) wristband. Do not touch the communication module connector or its internal circuitry to avoid ESD.


Follow these steps to install a new communication module.

1. Disconnect power from the terminal.
2. If the display module is removed from the panel, set the terminal, display side down, on a clean, flat, stable surface.

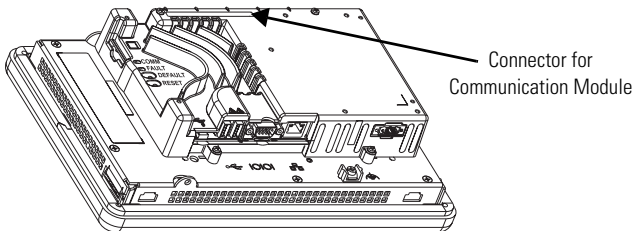


**TIP** Logic module might look different depending on catalog number.

3. Position the communication module over the logic module so that the connector on the bottom of the communication module aligns with the connector on the logic module.
4. To prevent ESD between the modules, allow the communication module to touch the logic module before making the connection.

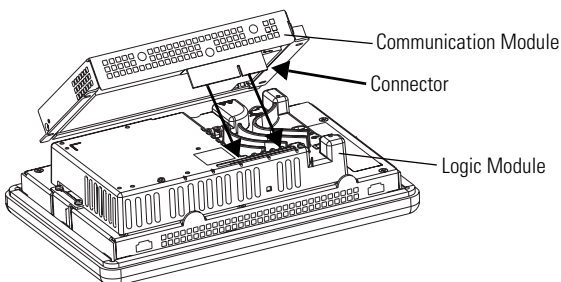

5. Push down on the communication module until the connectors are seated.
6. Tighten the four screws that secure the communication module to the logic module to a torque of 0.58 N•m (5...7 lb•in).

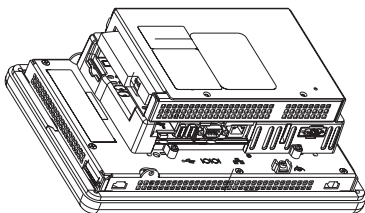

## Replace a Communication Module

Follow these steps to replace a communication module.

1. Disconnect power from the terminal.
2. Disconnect communication cables from the module.



---

### **WARNING:** Explosion Hazard

Do not connect or disconnect any communication cable with power applied to this device or any device on a network. An electrical arc could cause an explosion in hazardous location installations. Be sure power is removed or the area is known to be nonhazardous before proceeding.

---

3. Remove the four screws that secure the communication module.
4. Carefully lift the communication module away from the logic module.
5. Install the new communication module by following steps 3...6 under [Install a Communication Module](#) on page 3.

Allen-Bradley, DH+, FactoryTalk View Machine Edition, PanelView Plus, Rockwell Software, and Rockwell Automation are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

[www.rockwellautomation.com](http://www.rockwellautomation.com)

---

#### **Power, Control and Information Solutions Headquarters**

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Rockwell Automation Publication 2711P-IN003D-EN-P - June 2010

PN-77996

Supersedes Publication 2711P-IN003C-MJ-P - March 2007

Copyright © 2010 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.