




MobileView™ Tablet T750

(Cat. No. 2727-T7P30D1Fxx)

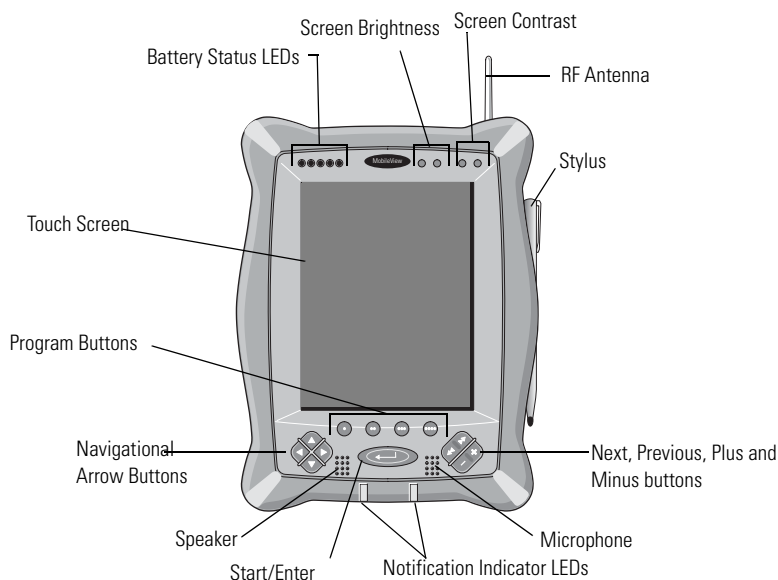











 

 



 
Inside . . .

| | |
|--------------------------------------|----|
| Controls and Indicators | 2 |
| I/O Ports | 3 |
| Installing the Battery | 3 |
| Startup/Power On | 4 |
| RF Network Configuration | 5 |
| Starting Terminal Services | 8 |
| Shut Down/Suspend | 9 |
| Cleaning the MobileView Tablet | 10 |
| Specifications/Accessories | 10 |
| For More Information | 11 |


Allen-Bradley

Controls and Indicators

Detailed information about using each control and indicator is given in publication 2727-UM001, MobileView™ Tablet T750 User Manual. The MobileView Tablet contains the following controls and indicators:


| Control/Indicator | Symbol | Description |
|---|---|--|
|  | N/A | Battery Status LEDs: The LEDs indicate the battery charge level. A fully charged battery is represented by having all five green indicators lit. |
|  |  | Screen Brightness: Press the buttons with the stylus to increase or decrease brightness. |
|  |  | Screen Contrast: Press the buttons with the stylus to increase or decrease contrast. |
|  | • | Opens terminal server client (configurable). |
|  | •• | Opens wireless link status (configurable). |
|  | ••• | Opens on-screen keyboard (configurable). |
|  | •••• | Opens Windows Explorer (configurable). |
|  |  | Navigational Arrow Buttons: The navigational buttons can move the current selection up, down, left, or right. Pressing the left and right arrow buttons simultaneously performs the same function as pressing the Esc (Escape) key on a computer keyboard. |
|  |  | Start/Enter Button: Press this button to power up the MobileView Tablet T750 after it has been powered down or to enter an active selection. |
|  | N/A | Notification LEDs: The LEDs can glow green, yellow or red. They are programmable and can be used to notify the user of an event, such as a low battery warning. |
|  |  | Next and Previous Buttons: The next and previous buttons are programmed to move to the next or previous selection (configurable). |
| |  | Plus and Minus Buttons: The plus (+) and minus (-) buttons operate similar to the same PC keyboard buttons depending on the context of current active application (configurable). |

I/O Ports

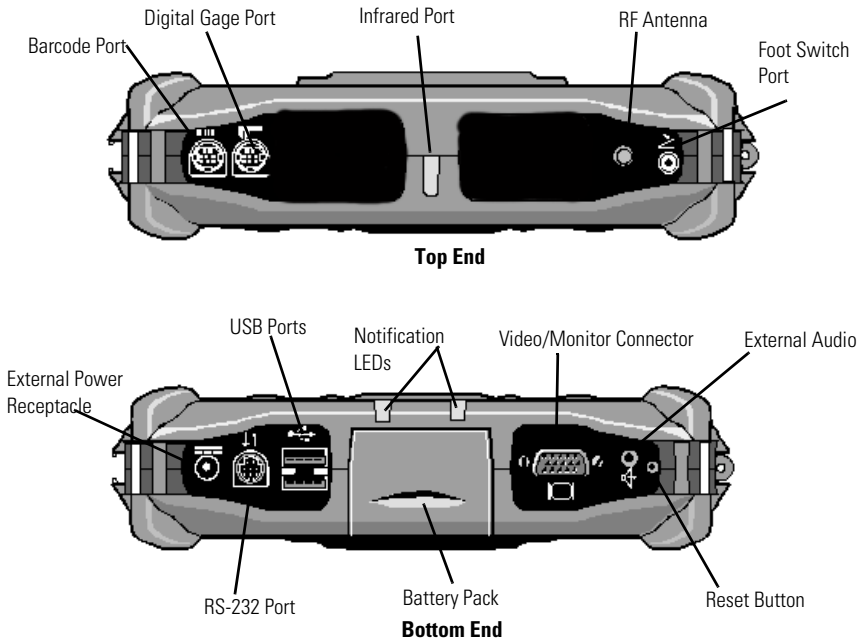

Installing the Battery

1. Slide the battery into the battery compartment until the battery cover plate is flush with the Tablet case, then slide the cover plate up. You should feel the battery snap into place.

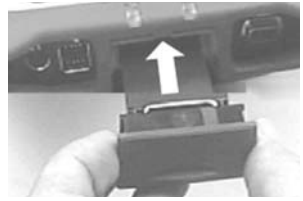


ATTENTION



Install only the battery supplied with your MobileView Tablet. Use of any other battery could result in a hazard to the operator and damage to equipment.

Allen-Bradley



2. To close the battery compartment, gently slide the battery cover-plate up.

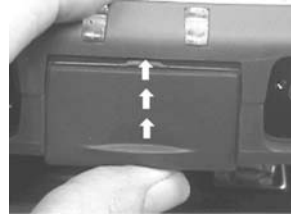

Startup/Power On

Press the ENTER button to turn the MobileView Tablet ON.

If the battery level is sufficient enough, the following power-up screen should appear.

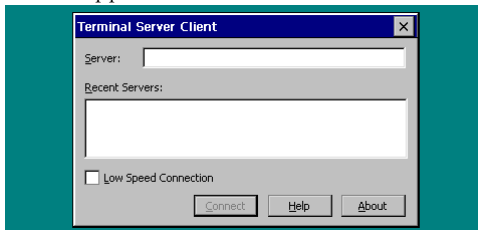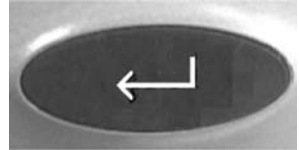

If power-up screen does not appear, connect the MobileView Tablet to the ac adapter/charger to operate on ac power and charge the battery.

Using the AC Adapter/Charger

Plug the jack end of the cable from the AC adapter into the charger port as shown. The battery will recharge when connected to external power.



IMPORTANT

Use only the AC Adapter supplied with your MobileView Tablet. Using another type of adapter may cause a malfunction or damage the battery pack.

Power Save Reactivation

The MobileView Tablet T750 also includes a battery power saving feature that suspends Tablet operations, including screen operations, if Tablet is idle beyond suspend timer setting. The default setting is 5 minutes. To reactivate Tablet, press

any of the program, navigational, or start/enter buttons. If the AC Adapter/Charger is connected, tapping the touch screen will also reactivate the Tablet.

RF Network Configuration

IP Address Configuration

The internal Cisco wireless LAN adapter is preconfigured to obtain an IP address via DHCP. If a specified IP address is desired, perform the following steps.


Remote Communication

Your network configuration affects how you remotely communicate with an internet, intranet, or between two or more MobileView Tablets. Since there are a variety of possible network configurations, we recommend you contact your network administrator or internet service provider (ISP) to help set up remote communications. The network administrator or ISP should be able to provide the necessary configuration information, such as the network configuration settings, the network architecture, and an IP address for the Tablet (if needed with your installation).

The following is an example of a remote communication setup, using a radio frequency (RF) network interface card, installed inside the MobileView Tablet. This installation also requires a properly configured access point for the RF signal.


Example of an RF Network Configuration

1. Tap on the Start button and select Settings, Control Panel from the menu.
2. Double-tap on the Network icon.
3. Tap the Adapters tab in the Network Configuration dialog box.
4. Select Cisco Wireless LAN Adapter from the list of drivers, then tap the Properties button.

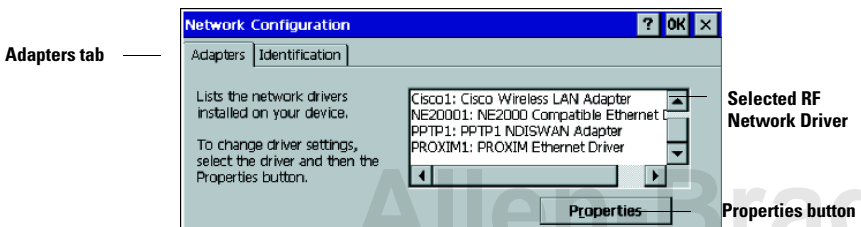

5. Tap the IP address tab and select either “Obtain an IP address via DHCP” or “Specify an IP address”, depending on your network configuration. If you select to specify an IP address, you need to fill out the information in the three text boxes with information from your network administrator or ISP.

Use the on-screen keyboard to enter the text. The on-screen keyboard is accessed by taping the keyboard icon on the task bar.

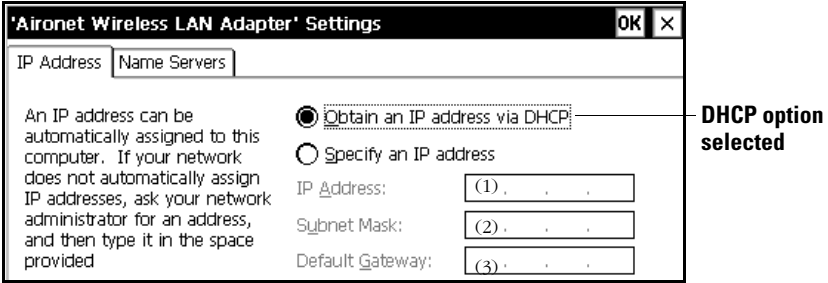


- (1) Must be a unique address from all others on the LAN.
- (2) Must be identical to the server subnet mask.
- (3) This is optional.

6. Tap OK in the settings dialog box. A notification appears, informing you that you will need to either remove and reinstall your card or restart the computer for your new settings to take effect. Tap OK.
7. Tap OK in the Network Configuration dialog box.
8. Press and quickly release the Reset button with the stylus to restart the Tablet.

IMPORTANT

Do not press and hold in the reset button for more than a second or you will start a full reset where all data on the Tablet is deleted and parameters are reset to their initial default settings.

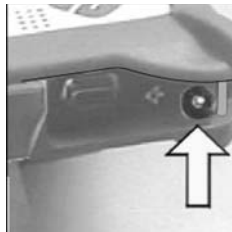


Wireless Adapter Setup

To communicate successfully, the internal Cisco wireless LAN adapter properties must be set to match your server's wireless LAN adapter or wireless access points properties.

To set internal Cisco wireless LAN adapter properties:

1. Tap the Start button on the task bar.
2. Select Programs and then the Wireless Utilities folder.
3. Tap Cisco Setup selection to activate setup window.

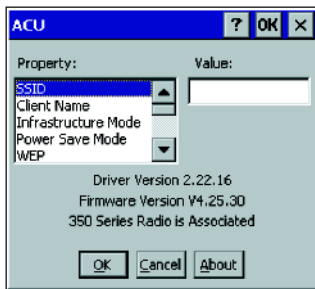


4. Enter the appropriate property selections and values. Use the on-screen keyboard shown above to enter alphanumeric characters where needed. On-screen keyboard can be accessed by taping the keyboard icon on the task bar.

Confirming Wireless Link

Once RF network configuration is completed and PC wireless LAN adapter or wireless access points are enabled, follow the steps below to confirm wireless link.

1. Tap the Start button on the task bar.
2. Select Programs and then the Wireless Utilities folder.
3. Tap the Cisco Link Status selection to activate status window.

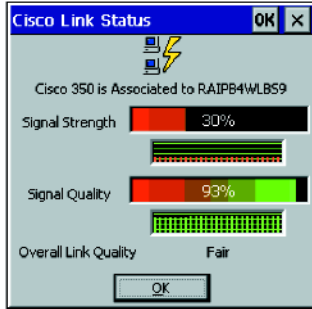


Status screen should indicate overall link status as “Good” or “Excellent”. Refer to publication 2727-UM001, MobileView Tablet T750 Users Manual for more troubleshooting information.

Starting Terminal Services


To connect to a terminal server as a CE client, follow these steps:

1. Double tap the Terminal Server Client shortcut on the Tablet’s desktop or select the Terminal Server Client application from the Programs/Terminal Server Client folder of the Start menu.

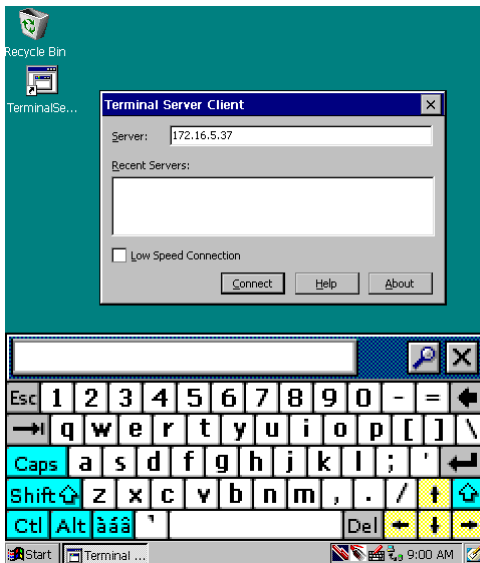

2. Enter the Terminal Server's name or valid TCP/IP address in the server box using the on-screen keyboard or select one of the server names or addresses listing in the recent servers box.
3. Tap the connect button.

A server logon window, similar to the one shown below, should appear.

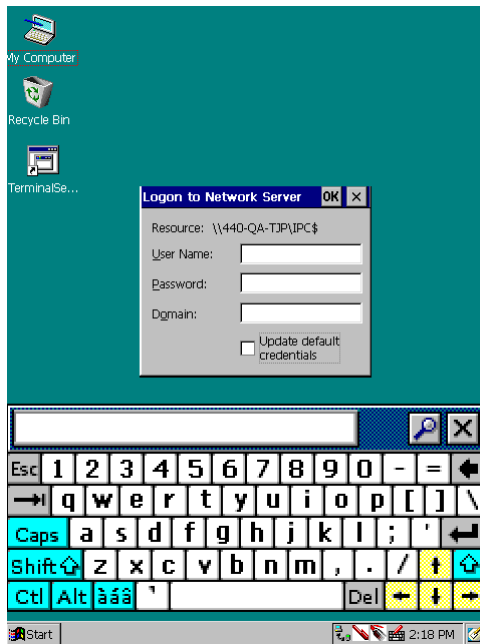

Enter your user name and password to operate as an active CE client.

Shut Down/Suspend

1. Close down all applications that are running on CE client.
2. Tap the Start button on the CE client task bar, select Shutdown and then choose Log Off Administrator to disconnect from terminal server.
3. From Tablet power-up screen, tap the Start button on the task bar and then select Suspend to shut down power to all Tablet components except RAM memory.

Cleaning the MobileView Tablet

For the touch screen, clean gently with a lint-free cloth. Dampen with a mixture of 50% water and 50% Isopropyl Alcohol if needed. Clean the unit daily when working in harsh environments.

For additional touch screen protection, apply the anti-glare protective overlay (Allen-Bradley catalog number 2727-TRG7) provided with the Tablet.

For the case, dampen a cloth with a mixture of 50% water and 50% Isopropyl Alcohol or mild detergent. Use no harsh cleaning additives.

IMPORTANT

Do not use detergents or other harsh cleaning additives on the touch screen.

Specifications/Accessories

Specifications

| Description | Specification |
|-----------------------|--|
| Processor | Hitachi SH-4 RISC (SH-7750) |
| Operating System | Microsoft Windows CE |
| Memory | 32 MB Flash, 32 MB SDRAM, 32 MB RAM Back-up and File Storage |
| Wireless Technology | WiFi Compliant 802.11b Direct Sequencing T _x Power: 15 dBm R _x Sens: -83 dBm to -90 dBm Range at 1 Mbps1: 460m Open Environment 90m Typical Office Environment Range at 11 Mbps1: 120m Open Environment 30m Typical Office Environment |
| Display | Passive LCD 7.7 inch 640 x 480 with 256 colors |
| Touch Screen | 7.7 inch analog resistive |
| Weight | 1.36 kg (4 lbs) |
| Dimensions (LxWxH) | 28 cm x 22 cm x 5 cm (11 in x 8.4 in x 2 in) |
| Battery | Lithium Ion 4000 mAh (8 hour typical operation) |
| Operating Temperature | +0°C to +45°C (+32°F to +113°F) |
| Humidity | 95% non-condensing |
| Agency Certification | CE, UL, ETS, FCC, Canadian Interference |

Accessories

| Description | Catalog Number |
|---|--|
| AC Adapter/Battery Charger with North American Power Cable with Italian Power Cable with European Power Cable with United Kingdom Power Cable | 2727-TRA7 2727-TRA7IT 2727-TRA7EU 2727-TRA7UK |
| Replacement Battery | 2727-TRB7 |
| Power Kit with Battery, Single Charging Station, Power Supply, and North American Power Cable with Italian Power Cable with European Power Cable with United Kingdom Power Cable | 2727-TRSP1 2727-TRSP1IT 2727-TRSP1EU 2727-TRSP1UK |
| Quad Charging Station with Power Supply and North American Power Cables with Italian and North American Power Cables with European and North American Power Cables with United Kingdom and North American Power Cables | 2727-TRSP4 2727-TRSP4IT 2727-TRSP4EU 2727-TRSP4UK |
| Anti-glare Protective Overlay (Qty. 10) | 2727-TRG7 |
| Stylus with Tether (Qty. 5) | 2727-RY1 |
| Serial Cable for PC Interface | 2727-TRC1 |

For More Information

Related Publications

| For | Refer to this Document | Pub. No. |
|--|-------------------------------------|------------|
| A more detailed description on how to use your MobileView Tablet, accessories, specifications and standards. | MobileView Tablet T750 User Manual | 2727-UM001 |
| Instructions on Flash Update procedures for your MobileView Tablet. | MobileView Tablet T750 Flash Update | 2727-GR001 |
| A complete translated version (in FR, DE, IT, ES, and PT) of this Quick Start. | MobileView Tablet T750 Quick Start | 2727-QS001 |

If you would like to:

- view and download the publication, go to Literature Library at **<http://www.rockwellautomation.com/literature>**
- order printed copies, contact your Allen-Bradley Distributor or Rockwell Automation Sales Office.

MobileView is a trademark of Rockwell Automation.
Windows CE is a trademark of Microsoft Corporation.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2727-QS004B-EN-P - September 2004

PN 41061-272-01(2)

Supersedes Publication 2727-QS004A-EN-P - March 2002

Copyright © 2004 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.