



MobileView Terminals

MobileView Machine Terminal MT750 Terminals
MobileView Guard G750 Terminals

Network Login Settings

The Windows network login settings are not persistent across power cycles. After each reset or power cycle, you must login to the network.

Windows settings are not persistent across power cycles or resets unless the registry is saved. Some applications save the registry while others do not. To manually backup the registry, use the tool located in the following directory or from the Start menu.

Directory

`\windows\programs\MobileView\RegistryBackup.exe`

Start Menu

Start->Programs->MobileView->Registry Backup

Key Support

MobileView terminals do not support “K” keys. When converting an existing application for MobileView terminals, any objects associated to a “K” key need to be re-mapped.

Kepware Drivers

MobileView terminals do not currently support Kepware drivers. The RSViewME Station setup screen indicates MobileView support for serial Kepware communications. MobileView does not support serial Kepware drivers.

Firmware Upgrade Wizard

Firmware upgrades using the Firmware Upgrade Wizard (FUW) are not currently supported.

Active Sync

You may not be able to view MobileView folders from a PC running ActiveSync version 3.7 or earlier and Windows XP. Typing the path directly allows access to the non-viewable folder. Version 3.7.1 of ActiveSync corrects this condition.

Spare Allen-Bradley Parts

Software Development Kit

Two Software Development Kits (SDK) are included on the product CD:

- Virtual Channel and
- Windows CE 4.X

The Windows CE 4.X SDK is intended to help users integrate the potentiometer and hand wheel into their application. At this time, header file credmgr.h is not part of the SDK build. This file is included on the CD and should be placed at the following location after installing the SDK:

C:\Program Files\Windows CE Tools\wce410\MT750\Include\ARMV4

Drive C: is the default drive destination. Please change the drive letter if necessary.

Viewers

PDF, DOC and XLS viewers are not currently shipping with MobileView terminals. Inclusion of these viewers is being considered for future releases.

www.rockwellautomation.com

Corporate Headquarters

Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36-BP 3A/B, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, 27/F Citicorp Centre, 18 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products

Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4800, Fax: (1) 864.281.2433

Europe: Rockwell Automation, Brühlstraße 22, D-74834 Elztal-Dallau, Germany, Tel: (49) 6261 9410, Fax: (49) 6261 17741

Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 351 6723, Fax: (65) 355 1733