


# 2 Wire SNK Control - Non-Reversing Internal Supply

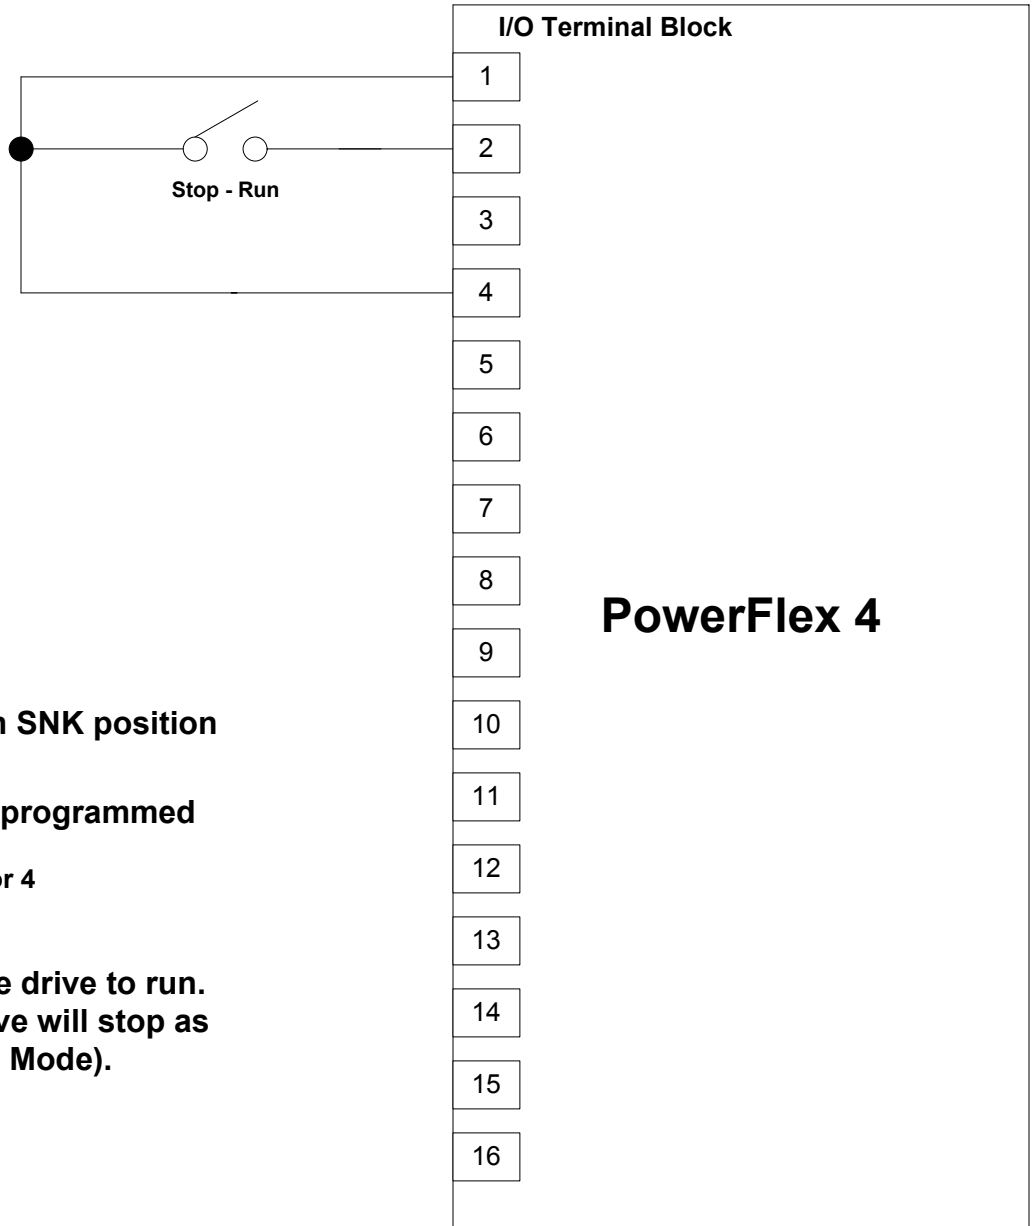

1) SNK/SRC Switch must be in SNK position

2) Parameters that need to be programmed

P036 (Start Source) = 2, 3 or 4

3) Input must be active for the drive to run.  
When input is opened, the drive will stop as  
specified by P037 (Stop Mode).