


2 Wire SRC Control - Non-Reversing Internal Supply

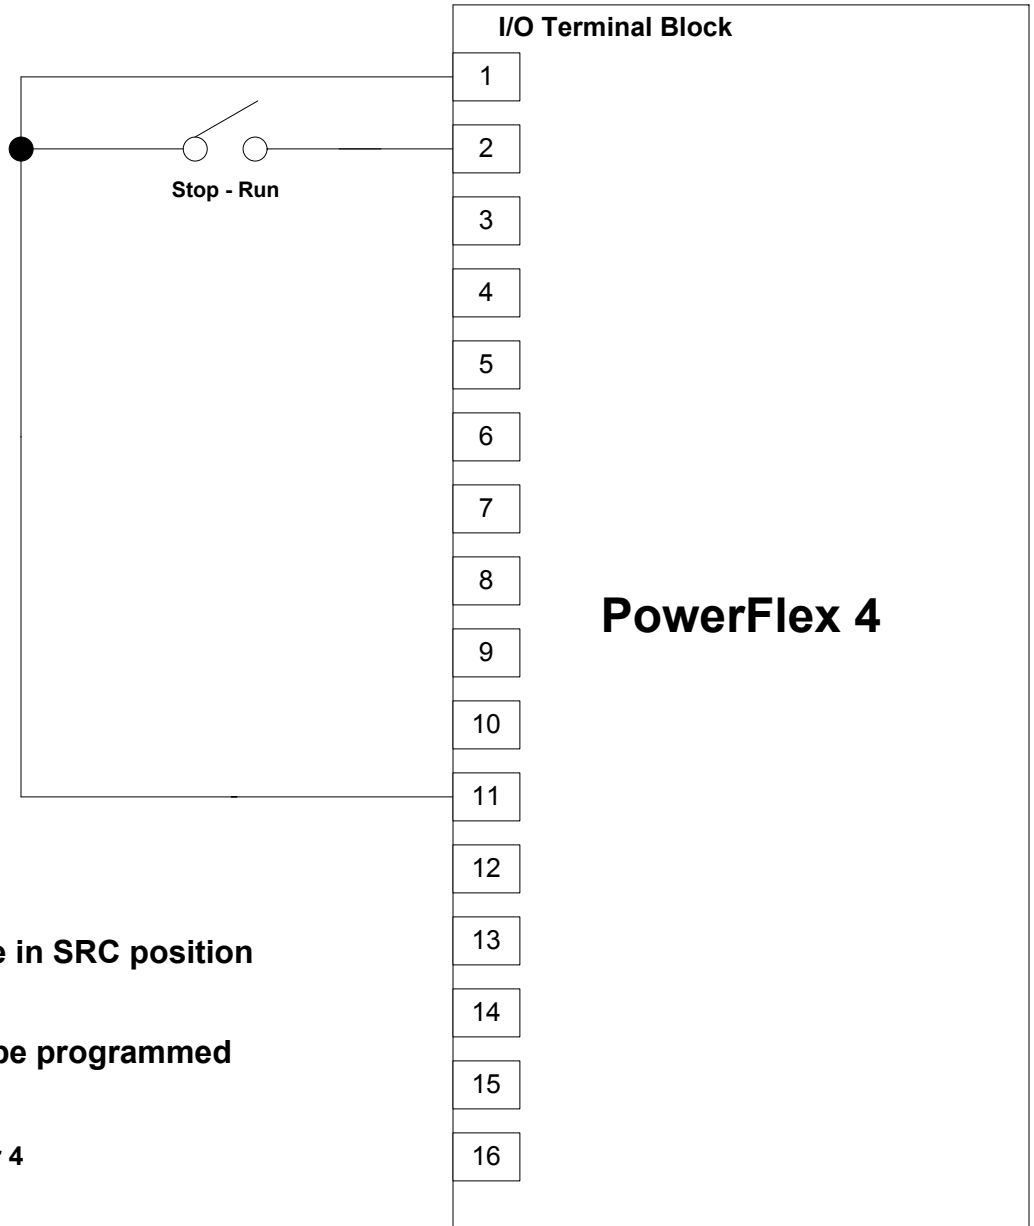

1) **SNK/SRC Switch must be in SRC position**

2) **Parameters that need to be programmed**

P036 (Start Source) = 2, 3 or 4

3) **Input must be active for the drive to run.
When input is opened, the drive will stop as
specified by P037 (Stop Mode).**