



Allen-Bradley

***Bulletin 2300
Family of
Drive Systems
Hardware***

Installation Manual

Allen-Bradley Automation

Important User Information

Because of the variety of uses for the products described in this publication, those responsible for the application and use of this control equipment must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards.

The illustrations, charts, sample programs and layout examples shown in this guide are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Allen-Bradley does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Allen-Bradley publication SGI-1.1, *Safety Guidelines for the Application, Installation and Maintenance of Solid-State Control* (available from your local Allen-Bradley office), describes some important differences between solid-state equipment and electromechanical devices that should be taken into consideration when applying products such as those described in this publication.

Reproduction of the contents of this copyrighted publication, in whole or part, without written permission of Rockwell Automation, is prohibited.

Throughout this manual we use notes to make you aware of safety considerations:



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage or economic loss

Attention statements help you to:

- identify a hazard
- avoid a hazard
- recognize the consequences

Important: Identifies information that is critical for successful application and understanding of the product.

Preface

Who Should Use This Manual	P-1
Purpose of This Manual	P-1
How To Use This Manual	P-1
Safety Precautions	P-2
Contents of this Manual	P-3
Related Documentation	P-4
Common Conventions Used In This Manual	P-5
Receiving Your Drive System	P-5
Rockwell Automation Support	P-6
Local Product Support	P-6
Technical Product Assistance	P-6

Chapter 1

Installing MCC Sections

Introduction	1-1
Before You Begin	1-1
Preparing the System for Bus Splice Installation	1-1
Unpacking the MCC Sections	1-1
Preparing the Outside of an MCC	1-2
Preparing the Inside of an MCC	1-5
Preparing the Inside of an MCC: Roll-Out Chassis Units	1-6
Preparing the Inside of an MCC: Bucket Units	1-7
Preparing the Inside of an MCC: Panel-Mounted Units	1-9
Putting the MCC Sections in Place	1-10
Bolting Together Newly-Joined MCC Sections	1-10
Splicing the Busbars Together	1-12
Completing an MCC After Bus Splice Installation	1-12
Completing the Inside of an MCC	1-12
Completing the Inside of an MCC: Roll-Out Chassis Units	1-13
Completing the Inside of an MCC: Bucket Units	1-13
Completing the Inside of an MCC: Panel-Mounted Units	1-13
Completing the Outside of an MCC	1-14

Chapter 2

Removing and Installing Bucket Units

Introduction	2-1
Before You Begin	2-1
Removal Procedure	2-2
Installation Procedure	2-5

Chapter 3**Removing and Installing Roll-Out Chassis Units**

Introduction	3-1
Before You Begin	3-1
Removal Procedure	3-2
Installation Procedure	3-5

Chapter 4**Removing and Installing MCC Doors**

Introduction	4-1
Before You Begin	4-1
Removing an MCC Door	4-1
Installing an MCC Door	4-2

Chapter 5**Installing Busbar Splices**

Introduction	5-1
Before You Begin	5-1
Splicing Power Busbars	5-2
Installing Straight Power Bus Splices	5-3
Installing Straight Power Bus Splices: Single Bar	5-4
Installing Straight Power Bus Splices: Dual Bar	5-6
Installing Offset Power Bus Splices	5-8
Installing Offset Power Bus Splices: Single Bar	5-8
Installing Offset Power Bus Splices: Dual Bar	5-10
Splicing Control Busbars	5-12
Installing Straight Control Bus Splices	5-13
Installing Offset Control Bus Splices	5-14
Installing the Equipment Grounding Conductor (PE) Bus Splice ..	5-15
Installing the Zero Potential (TE) Bus Splice	5-16

Chapter 6**Installing Top Hat Assemblies and Cutting Holes for Cable Entry/Exit**

Introduction	6-1
Installing a Top Hat Assembly	6-1
Cutting Holes for Cable Entry/Exit	6-3

Appendix A**Busbar Splice Kit Catalog Numbers**

Introduction	A-1
Understanding Catalog Numbers	A-1
Determining Catalog Numbers	A-1
Busbar Splice Kit Catalog Numbers	A-2
Power Bus Splice Kit Catalog Numbers	A-2
Control Bus Splice Kit Catalog Numbers	A-2
PE/TE Bus Splice Kit Catalog Numbers	A-2

Preface

Please read this preface to familiarize yourself with this manual. This preface covers the following topics:

- who should use this manual
- the purpose of this manual safety precautions
- contents of this manual
- related documentation conventions used in this manual
- drive system receiving
- Rockwell Automation support

Who Should Use This Manual

This manual is intended for those who are responsible for installing Rockwell Automation drive systems.



ATTENTION: If you do not have a basic understanding of the drive system, as designed, or of any product(s) used in the system, contact your local Rockwell Automation representative for information on available training courses before starting the system.

Purpose of This Manual

This manual provides installation instructions for Rockwell Automation's Bulletin 2300 family of drive systems. The provided procedures are for those tasks that need to be done at the customer site before system startup.

How To Use This Manual

When using this manual to install your drive system, you will begin and complete the installation in Chapter 1 of this manual. Chapter 1 will refer you to other chapters that address specific unit configuration instructions and busbar splice installation instructions. When you are referred to another chapter—go to that chapter, perform the required procedure(s), and then return to Chapter 1.

Note: You can also refer to the appropriate chapter of this manual whenever you need to:

- remove/install bucket units
- remove/install roll-out chassis units
- remove/install an MCC door

Safety Precautions

The following general precautions apply when installing, servicing, or operating Bulletin 2300 drive system lineups:



ATTENTION: Only those familiar with the drive system, the products used in the system, and the associated machinery should plan or implement the installation, startup, and future maintenance of the system. Failure to comply can result in personal injury and/or equipment damage.

ATTENTION: Verify that all sources of AC and DC power are deenergized and locked out or tagged out in accordance with the requirements of ANSI/NFPA 70E, Part II.

ATTENTION: The system may contain stored energy devices. To avoid the hazard of electrical shock, verify that all voltage on capacitors has been discharged before attempting to service, repair, or remove a drive system or its components. You should only attempt the procedures in this manual if you are qualified to do so and are familiar with solid-state control equipment and the safety procedures in ANSI/NFPA 70E.

ATTENTION: An incorrectly applied or incorrectly installed drive system can result in component damage and/or a reduction in product life. Wiring or application errors—such as undersizing the motor, incorrect or inadequate AC supply, and excessive ambient temperatures—can result in the malfunction of the drive equipment.

ATTENTION: This drive system contains parts and assemblies that are sensitive to ESD (electrostatic discharge). Static control precautions are required when installing, testing, or repairing this assembly. Component damage can result if ESD control procedures are not followed. If you are not familiar with static control procedures, refer to Allen-Bradley publication 8000-4.5.2, *Guarding Against Electrostatic Damage*, or another adequate handbook on ESD protection.

Contents of this Manual

Chapter	Title	Contents
	Preface	Purpose, background, and scope of this manual.
1	Installing MCC Sections	Procedures for installing CENTERLINE™ MCC cabinet sections.
2	Removing and Installing Bucket Units	Procedures for removing and installing bucket units.
3	Removing and Installing Roll-Out Chassis Units	Procedures for removing and installing roll-out chassis units.
4	Removing and Installing MCC Doors	Procedures for removing and installing a door on an MCC cabinet.
5	Installing Busbar Splices	Procedures for installing power, control, PE, and TE bus splices.
6	Installing Top Hat Assemblies and Cutting Holes for Cable Entry/Exit	Procedures for installing top hat assemblies and cutting holes in MCCs.
A	Busbar Splice Kit Catalog Numbers	A list of busbar splice kits with catalog numbers.

Related Documentation

The following documents include information that may be helpful when installing or services components in your drive system. To obtain a copy of any of the Rockwell Automation publications, contact your local Rockwell Automation office or distributor.

For	Read This Document	Document Number
Information on the 1336 FORCE™ drives	1336T User Manual – AC Drives	1336 FORCE-5.12
Information on the 1336 PLUS™ drives	1336S User Manual – .05-600HP	1336 PLUS-5.0
Information on low-kVA 1395™ drives	1395 Installation Manual – Digital DC Drive	1395-5.40
Information on medium-kVA 1395 drives	1395 Installation Manual – Digital DC Drive in Motor Control Center	1395-5.60
Information on high-kVA 1395 drives	1395 Installation Manual – Digital DC Drive in Bulletin 2361 Motor Control Center	2361-5.01
PLC-5™ information	PLC-5 Controllers Brochure	1785-1.2
Additional information on joining and splicing together MCCs	Instructions – Joining and Splicing Vertical Sections	2100-5.1
Details on receiving, handling, and storing MCCs	Instructions – Receiving, Handling, and Storing Motor Control Centers	2100-5.5
Information on 2364E non-regenerative front-end units (NRU™)	NRU User Manual	2364E-5.01
Information on 2364F regenerative front-end units (RGU™)	RGU User Manual	2364F-5.01
A description of DriveTools™ software	DriveTools Software Brochure	9303-1.0
Articles on wire sizes and types for grounding electrical equipment	National Electrical Code (NFPA 70)	Published by NFPA of Boston, MA; ANSI/NFPA70
Articles on safety procedures	Standard for Electrical Safety Requirements for the Employee Workplace	NFPA 70E
Instruction for handling, installing, operating, and maintaining motor control centers	Instructions for the Handling, Installation, Operation, and Maintenance of Motor Control Centers	NEMA ICS 2.3
A complete listing of current Allen-Bradley documentation, including ordering instructions. Also indicates whether the documents are available on CD-ROM or in multi-languages	Allen-Bradley Publication Index	SD499
A glossary of industrial automation terms and abbreviations	Allen-Bradley Industrial Automation Glossary	AG-7.1

Common Conventions Used In This Manual

The following conventions are used throughout this manual:

- Bulleted lists such as this provide information, not procedural steps.
- Numbered lists provide sequential steps or hierarchical information.
- When we refer you to another section/document, that name appears in italics.
- The exclamation point inside a triangle followed by the word **“ATTENTION”** indicates circumstances that can lead to personal injury, death, property damage, or economic loss.

Receiving Your Drive System

You, the customer, are responsible for thoroughly inspecting the equipment before accepting the shipment from the freight company. Check the item(s) that you receive against your purchase order. If any items are obviously damaged, do not accept the delivery until the freight agent has noted the damage on the freight bill. Should you discover any concealed damage during unpacking, you are responsible for notifying the freight agent. In such a case, leave the shipping container intact and request that the freight agent make a visual inspection of the equipment.

Rockwell Automation Support

Rockwell Automation offers support services worldwide, with Sales/Support Offices, authorized distributors, and authorized Systems Integrators located throughout the United States, plus Rockwell Automation representatives in every major country in the world.

Local Product Support

Please contact your local Rockwell Automation representative for:

- sales and order support
- product technical training
- warranty support
- support service agreements

Technical Product Assistance

If you need to contact us for technical assistance, please review the product information in the appropriate product manual first. Then call your local Rockwell Automation representative. For the quickest possible response, we recommend that you have the catalog numbers of your products available when you call.

Installing MCC Sections

Introduction

This chapter provides procedures for installing CENTERLINE Bulletin 2100 motor control center sections.

Before You Begin

Before you begin installation, be sure you have the following:

- The MCC sections containing the drive system
- Tool(s) you will need to:
 - remove and tighten screws:
 - slotted screw
 - slotted/phillips screw
 - #10 thread-forming hexhead screw (0.312" across flats)
 - 1/4" thread-forming screw (0.375" across flats)
 - remove and tighten bolts:
 - 1/4" bolt (0.438" across flats)
 - 1/2" bolt (0.750" across flats)
 - secure screws with nuts:
 - 1/4"-20 nut (0.438" across flats)

Preparing the System for Bus Splice Installation

Follow these procedures to prepare the MCC sections for installation:

Important: Physical restrictions at your installation site may not allow the following sequences to be followed exactly as stated.

Unpacking the MCC Sections

1. Remove the MCCs from their packaging.

Important: Be sure to handle the MCCs according to the instructions provided in CENTERLINE Motor Control Centers (AB Publication 2100-5.5).

2. Remove all splice kits and labels from wireways, blank unit spaces, and other external packaging.

Note: A label on the outside of a compartment designates the location of splice kits located within a horizontal wireway or blank unit space.


Note: Keep track of splice kits. Misplaced splice kits may not have immediate replacements available.

Preparing the Outside of an MCC

For each MCC that is to be joined to an adjacent MCC, do the following:


1. Remove the MCC's lower wireway cover, if presently attached, by unfastening 2 screws. See Figure 1.1.

Figure 1.1
Removing an MCC's Lower Wireway Cover

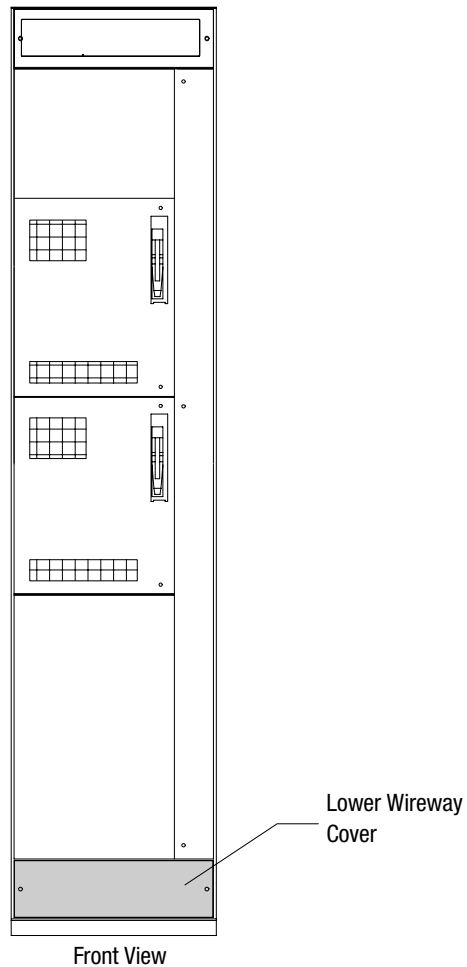

2. Remove the four end-cover plates, if present, from the sides of MCCs that will be joined to other MCCs. Unfasten the 4 screws that secure each plate. This will expose joining holes. See Figure 1.2.


Figure 1.2
Removing the End Covers and Power Bus Plate

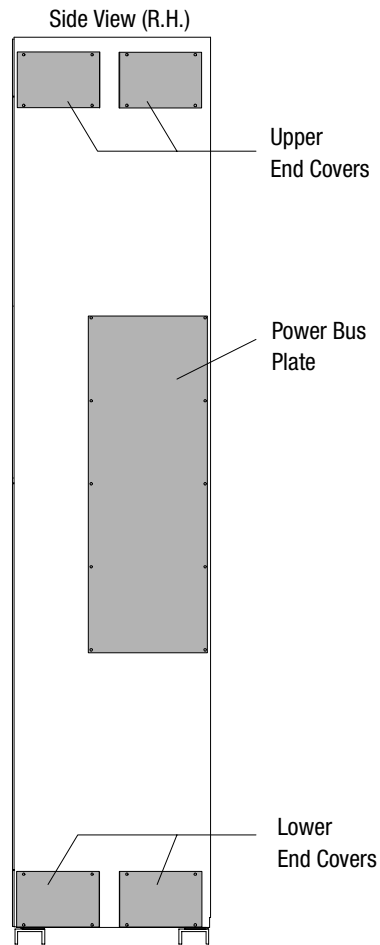

3. Remove the power-bus plates, if present, from the sides of MCCs that will be adjacent to other MCCs. To remove a power bus plate, unfasten 10 screws. Refer to Figure 1.2.

4. Remove all screws and plastic plugs from joining holes. Refer to Figure 1.3 for hole locations.

Figure 1.3
Location of Joining Holes

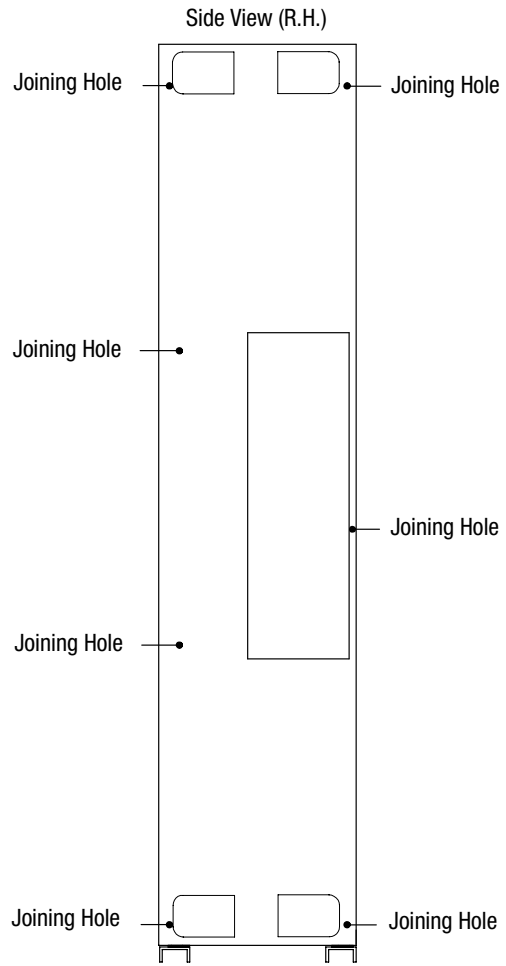

Preparing the Inside of an MCC

For each MCC that is to be joined to an adjacent MCC, do the following:

If the MCC contains a:	Typical Units	Go to:
Roll-out chassis unit	2362 (D-G frame units), 2364F (K-N codes)	<i>Preparing the Inside of an MCC: Roll-Out Chassis Units (see page 1-6)</i>
Bucket units	2362 (A-C frame units)	<i>Preparing the Inside of an MCC: Bucket Units (see page 1-7)</i>
Panel-mounted unit	2361 units, 2364E units, 2364F (J-code units)	<i>Preparing the Inside of an MCC: Panel-Mounted Units (see page 1-9)</i>

Preparing the Inside of an MCC: Roll-Out Chassis Units


1.

If the MCC contains a:	Then:
A 2362 (D-G frame) or 2364F (K-N code) roll out chassis unit.	Follow the procedures in Chapter 3 to remove the roll-out chassis from the MCC.

2. Remove the horizontal bus access cover, if not already removed, to expose the bus ends for splicing. Each horizontal bus access cover is secured with two screws. Reference Figure 1.4.

Figure 1.4

Removing the Horizontal Bus Access Cover in an MCC that Contains a Roll-Out Chassis Unit

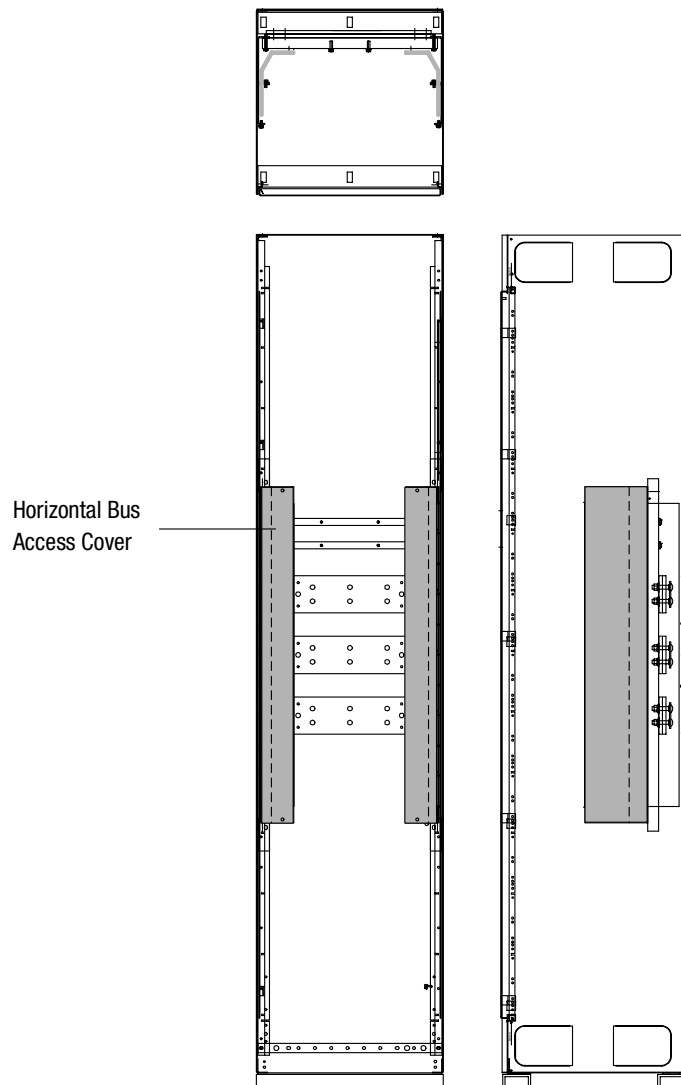


3. Pull all bottom-entry cables, if present, through the conduit(s) to a spot where you can reach them after you have put the MCCs in place.

Preparing the Inside of an MCC: Bucket Units

1.


If the MCC will be spliced on:	Then:
Right side	Loosen 3 screwatches to open the vertical wireway door on the right side. See Figure 1.5.
Left side	Follow the procedures in Chapter 2 to remove any buckets blocking access to the horizontal bus and joining holes.

Figure 1.5
Removing the Vertical Wireway Door

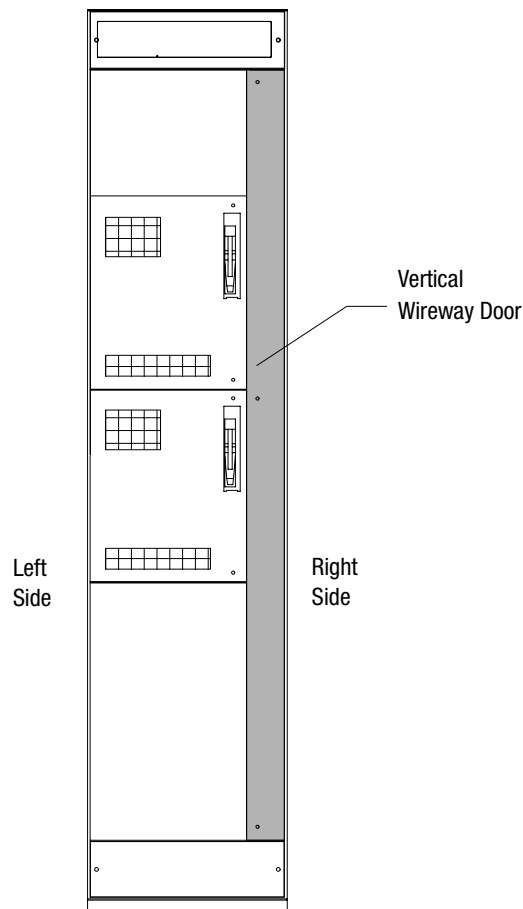

2. Remove the splice-opening cover on the joining side of the MCC. Refer to Figure 1.6.

Figure 1.6
Removing the Splice-Opening Cover

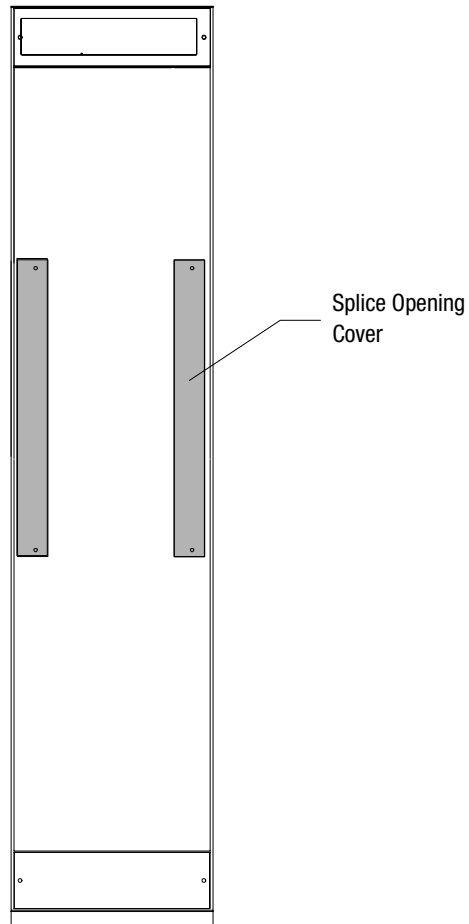


3. Pull all bottom-entry cables, if present, through the conduits to a spot where you can reach them after you have put the MCCs in place.

Preparing the Inside of an MCC: Panel-Mounted Units

1. Remove the horizontal bus access cover from the joining side of the MCC, as indicated in Figure 1.7.

Figure 1.7
Removing the Horizontal Bus Access Cover from an MCC Containing a Panel-Mounted Unit

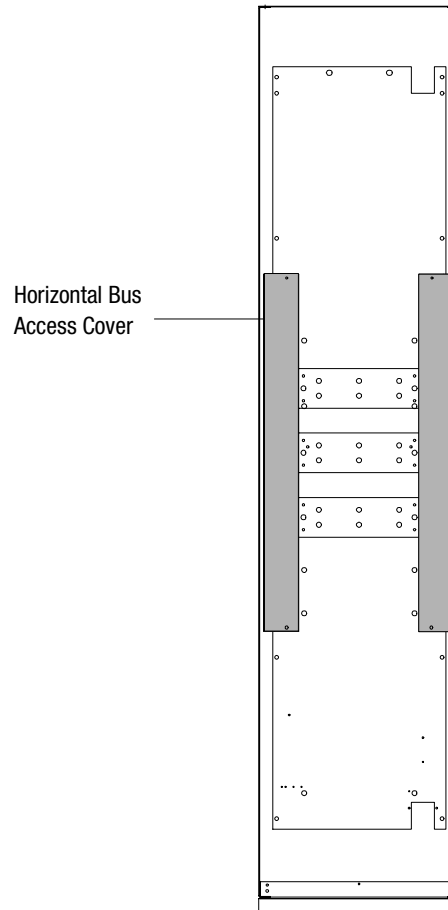

2. Pull all bottom-entry cables, if present, through the conduit(s) to a spot where you can reach them after you have put the MCCs in place.

Putting the MCC Sections in Place

Use the following procedure to put the MCC sections in place:

1. Move the MCC sections into place according to the instructions provided in CENTERLINE Motor Control Centers (AB Publication 2100-5.5).
2. Level the MCCs.
3. Fasten the MCCs to the floor.

Note: Each MCC has two holes for securing the MCC to the floor with 1/2" bolts. These two holes are located in the center front and center rear of each MCC bottom.


Bolting Together Newly-Joined MCC Sections

Follow this procedure for bolting together newly-joined MCC sections:

Important: Use the hardware furnished with the power bus splice kits.

1. Verify that the following hardware is present for each pair of sections to be bolted together:
2. At every hole labeled "A" on Figure 1.8, pass a thread-forming screw from inside the left-hand section and engage the screw with the respective hole in the right-hand section.
3. At the hole labeled "B" on Figure 1.8, pass the 1/4-20 x 5/8" hex-head screw from inside the left-hand section through the respective hole in the right-hand section and secure with the flat washer and steel nut.

Figure 1.8
Labeled Locations of Joining Holes

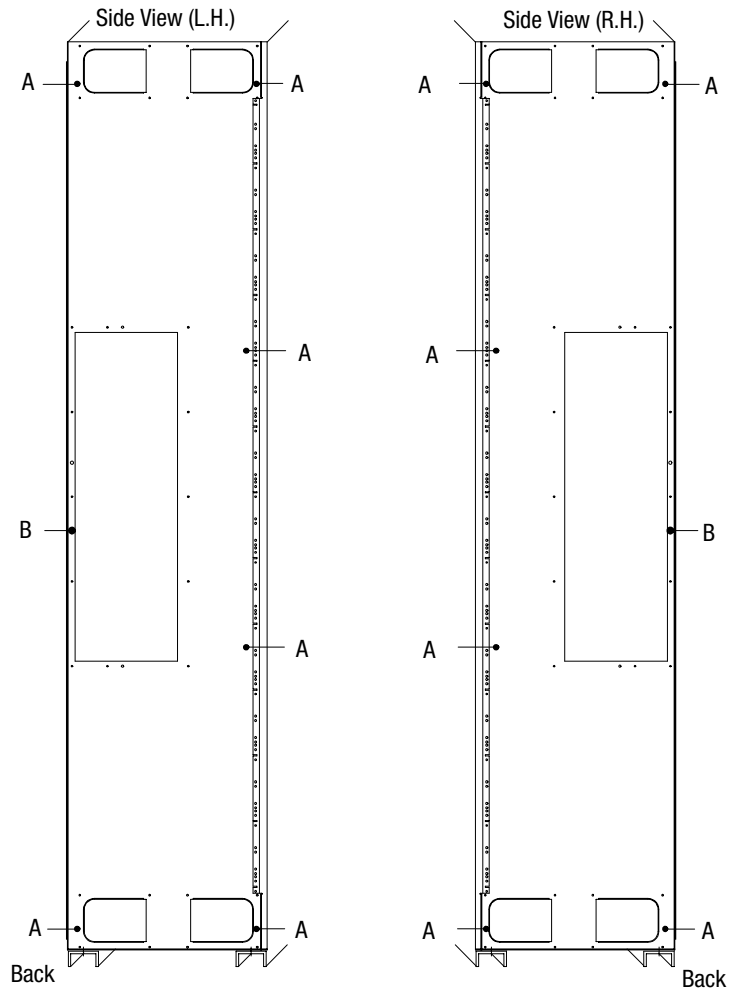

Splicing the Busbars Together

After all MCC sections have been bolted together, do the following:



ATTENTION: This drive contains ESD (Electrostatic Discharge) sensitive parts and assemblies. Status control precautions are required when installing, testing, or repairing this assembly. Component damage can result if ESD control procedures are not followed. If you are not familiar with static control procedures, refer to Allen-Bradley publication 8000-4.5.2, Guarding Against Electrostatic Damage, or any other applicable ESD protection handbook.

1. Install busbar splices according to the procedures in Chapter 5.
2. Inspect the interior for dust and dirt. Vacuum as needed.

Important: Do not clean using compressed air because it contains moisture and may blow debris into the control equipment.

3. Verify that no tools or hardware have been dropped inside the MCCs.

Completing an MCC After Bus Splice Installation

Follow this procedure for each MCC that you have joined to an adjacent MCC.

Completing the Inside of an MCC

If the MCC contains a:	Typical Units	Go to:
Roll-out chassis unit	2362 (D-G frame units), 2364F (K-N codes)	<i>Completing the Inside of an MCC: Roll-Out Chassis Units</i> (see page 1-13)
Bucket units	2362 (A-C frame units)	<i>Preparing the Inside of an MCC: Bucket Units</i> (see page 1-13)
Panel-mounted unit	2361 units, 2364E units, 2364F (J-code units)	<i>Preparing the Inside of an MCC: Panel-Mounted Units</i> (see page 1-13)

Completing the Inside of an MCC: Roll-Out Chassis Units

1. Install the horizontal bus access cover. Each horizontal bus access cover is secured with two screws (see Figure 1.4).

2.

If the MCC contains a:	Then:
A 2362 (D or E-frame) or 2364F (K or L-code) roll out chassis unit.	<ol style="list-style-type: none"> 1. Follow the procedures in Chapter 3 to install the roll-out chassis from the MCC. 2. Go to <i>Completing the Output of an MCC</i> (page 1-14).
A 2362 (F or G-frame) or 2364F (M or N-code) roll-out chassis unit.	Go to <i>Completing the Outside of an MCC</i> (page 1-14).

Completing the Inside of an MCC: Bucket Units

1. Install the splice-opening cover on the joining side of the MCC (see Figure 1.6).

2.

If the MCC will be spliced on:	Then:
Right side	<ol style="list-style-type: none"> 1. Close the vertical wireway door and secure the door by tightening the 3 screwlatches (Figure 1.5). 2. Go to <i>Completing the Outside of an MCC</i>.
Left side	<ol style="list-style-type: none"> 1. Follow the procedures in Chapter 2 to remove any buckets that were removed. 2. Go to <i>Completing the Outside of an MCC</i> (page 1-14).

Completing the Inside of an MCC: Panel-Mounted Units

1. Install the horizontal bus access cover (see Figure 1.7).
2. Go to *Completing the Outside of an MCC*.

Completing the Outside of an MCC

For all MCCs that were just joined to adjacent MCCs, do the following:

1. Position the MCC's lower wireway cover.
2. Fasten the two screws that secure the lower wireway cover to the MCC (see Figure 1.1).

Removing and Installing Bucket Units

Introduction

This chapter provides procedures for removing and installing bucket units.

Before You Begin

Before you begin installation, be sure you have the following:

- Tool(s) you will need to:
 - disconnect and connect wires
 - loosen and tighten slotted screwlatches that secure the bucket to the MCC

Removal Procedure

Follow the procedure below to remove bucket units from an MCC:



ATTENTION: To avoid the hazard of electrical shock, verify that all voltages on the system bus network have been discharged before attempting to service the system.

1. Open the door of the MCC.

Note: Removal of the door is not necessary.


- 2.

If:	Then:
You want to remove the door	Follow the door removal procedure in Chapter 4.

- 3.

If:	Then:
The unit to be removed is less than 2 space factors	Disengage the screwlatches at the front of the bucket unit – one at the top and one at the bottom. See Figure 2.1.
Otherwise	Disengage the screwlatches at the front of the bucket unit – two at the top and one at the bottom. See Figure 2.1.

Figure 2.1
Screw latch Locations

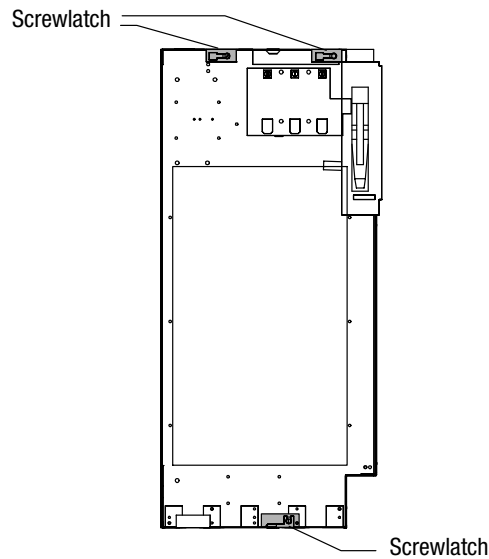

-
4. Disconnect all wires that connect the module to stationary devices in the MCC.

Important: If any of these wires remain intact, you will not be able to freely remove the module from the MCC.



ATTENTION: The 2362 A-frame bucket weighs approximately 45 pounds (21 kg); the B-frame bucket weighs approximately 90 pounds (41 kg); and the C-frame bucket weighs approximately 140 pounds (64 kg). Failure to take precautions when moving a bucket may result in personal injury and/or damage to equipment.


ATTENTION: Do not force the bucket when removing it from the MCC. If you cannot easily remove the bucket, verify that all necessary wires have been disconnected.

ATTENTION: After the bucket has been removed from the MCC, secure the bucket so that it will not tip over or fall, causing personal injury and/or equipment damage.

5. Disconnect customer wiring at the bottom of the bucket and slide the wiring into the vertical wireway.

6. Pull the bucket forward to unplug from the vertical bus, holding the upper right-hand latch assembly and the lower left-hand tab handle. See Figure 2.2.

Figure 2.2
Bucket Connections

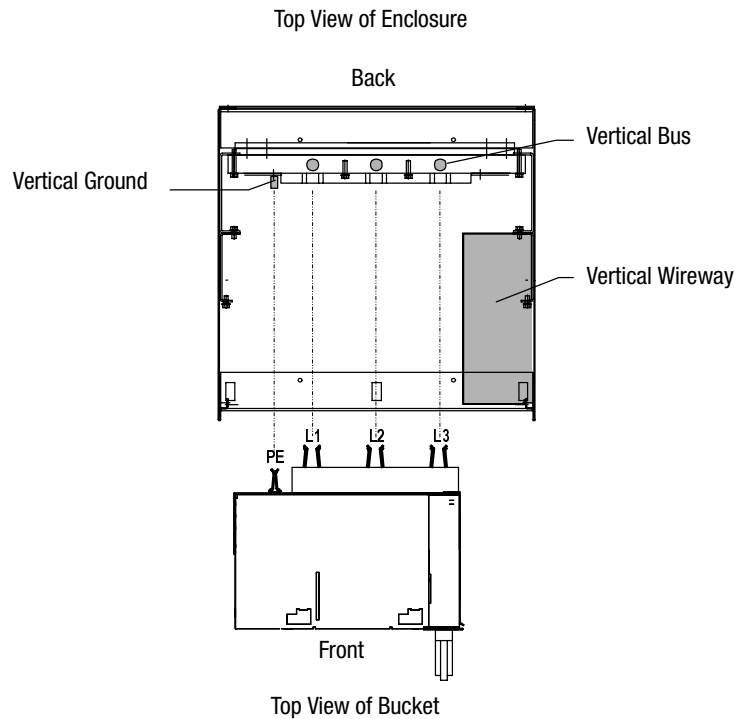

Note: Figure 2.2 shows the configuration for a common-AC-bus system. For a common-DC-bus system, the middle vertical bus and clip (L2) shown above are not present.

Installation Procedure

Follow the procedure below to install a bucket unit into an MCC:




ATTENTION: To avoid the hazard of electrical shock, verify that all voltages on the system bus network have been discharged before attempting to service the system.

ATTENTION: The 2362 A-frame bucket weighs approximately 45 pounds (21 kg); the B-frame bucket weighs approximately 90 pounds (41 kg); and the C-frame bucket weighs approximately 140 pounds (64 kg). Failure to take precautions when moving a bucket may result in personal injury and/or damage to equipment.

1. Open the door of the MCC.
2. Verify that the bucket and vertical bus are either DC or AC (both the bucket and vertical bus should have L1, L2, and L3; or L1 and L3 only). See Figure 2.3.

Figure 2.3
Valid Bucket Connections

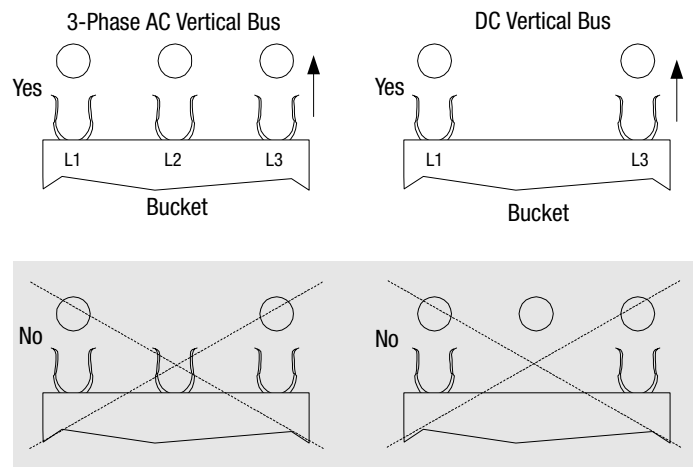

3. Push the bucket backward to plug into the vertical bus, holding the upper right-hand latch assembly and the lower left-hand tab handle (Figure 2.2 shows how the bucket will plug into the vertical power and ground buses).

4. Connect customer wiring at the bottom of the bucket, as appropriate.
5. Connect all wires that connect the module to stationary devices in the MCC.

6.

If:	Then
The unit to be removed is less than 2 space factors	Engage the screwlatches at the front of the bucket unit – one at the top and one at the bottom. See Figure 2.1.
Otherwise	Engage the screwlatches at the front of the bucket unit – two at the top and one at the bottom. See Figure 2.1.

7. If the door has been removed, follow the door installation procedure found in *Chapter 4*.

Removing and Installing Roll-Out Chassis Units

Introduction

This chapter provides the necessary steps to remove and install roll-out chassis units.

Before You Begin

Before you begin installation, be sure you have the following:

- Tool(s) you will need to:
 - disconnect and connect wires
 - remove and tighten screws:
 - #10 thread-forming hexhead screw (0.312" across flats)
 - ¼" thread-forming screw (0.375" across flats)
 - remove and tighten bolts:
 - 3/8" bolt (0.563" across flats)—for D/F-frame 2362 units and K-code 2364F units
 - M10 bolt (17 mm across flats)—for G-frame 2362 units and M/N-code 2364F units
- A means to remove the roll-out chassis unit

Removal Procedure


Follow the procedure below to remove roll-out chassis units from an MCC.



ATTENTION: To avoid the hazard of electrical shock, verify that all voltages on the system bus network have been discharged before attempting to service the system.

1. Open door of MCC.
2. Remove two screws to detach the lower wireway cover, if presently attached. Refer to Figure 3.1.



Figure 3.1
Removing the Lower Wireway Cover

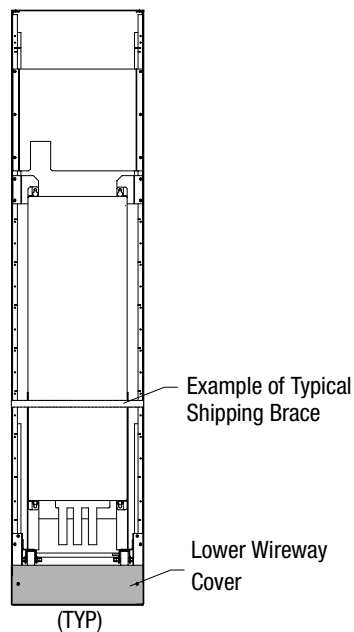

3. Remove shipping brace (if present).
4. Remove a total of four screws to detach both of the lower reinforcing angles as shown in Figure 3.2 (used in D, E, F-frame 2362 units and in K and L-code 2364F units).

5. If the sealing angle (shown in Figure 3.2) obstructs the roll-out chassis from rolling out, remove the sealing angle.
6. For G-frame 2362 units and M or N-code 2364F units, remove the lower brace, which is shown in Figure 3.2.
7. Remove both of the lower mounting angles, as shown in Figure 3.2, by unfastening four screws each (used in D, E, and F-frame 2362 units, and in K and L-code 2364F units).

Figure 3.2
Typical Mounting Hardware By Unit

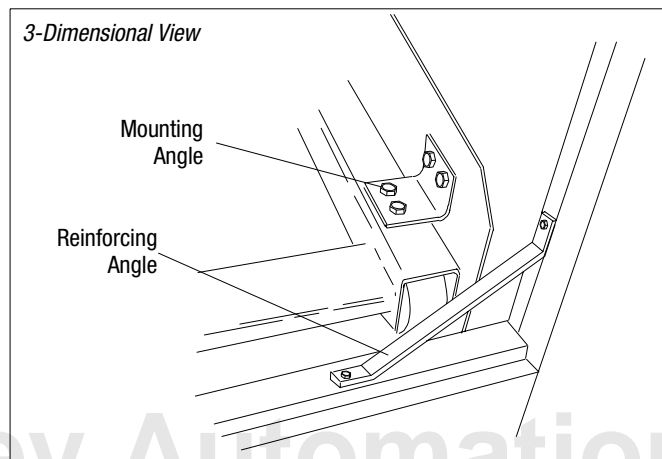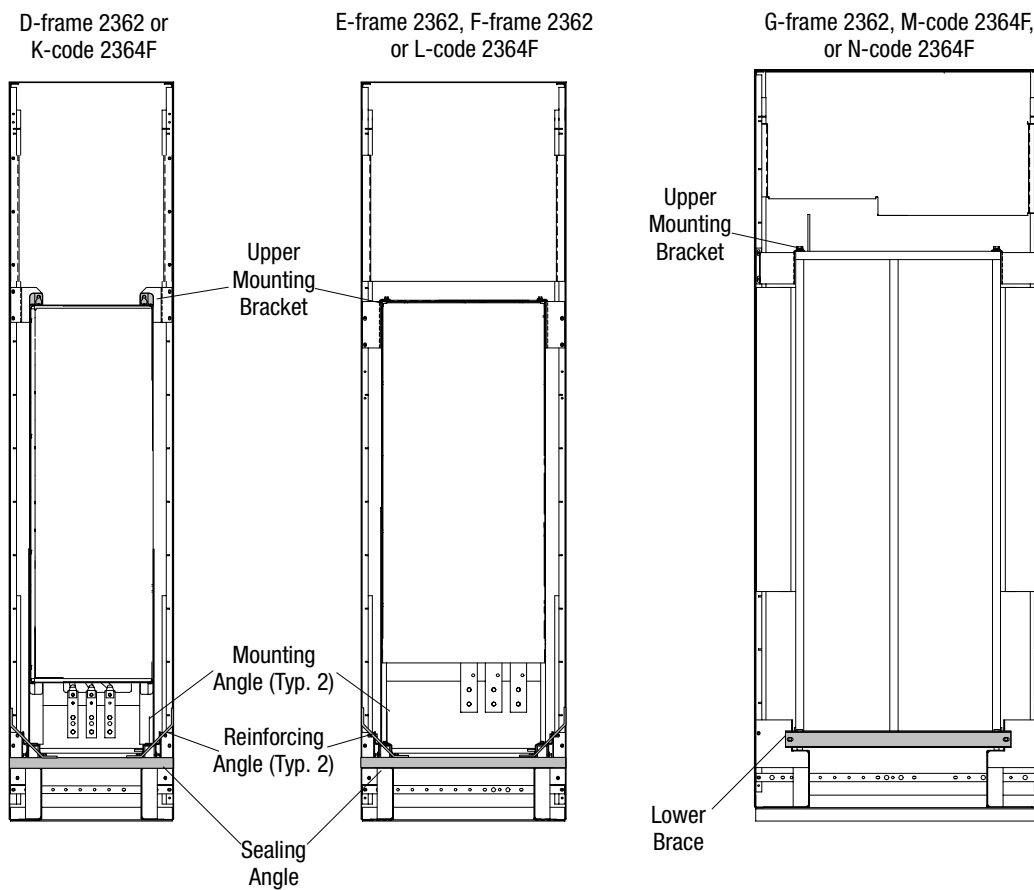

8.

If the module size is:	Do this:
D, F, or G-frame 2362 units or K, M, or N-code 2364F units	Remove a total of two bolts to unfasten the chassis unit from the upper brackets. Refer to Figure 3.2.
E-frame 2362 units or L-code 2364F units	Remove a total of four screws to unfasten the chassis unit from the upper brackets. Refer to Figure 3.2.

9. Disconnect all wires that connect the chassis unit to stationary devices in the MCC.

Important: If any of these wires remain intact, you will not be able to freely remove the chassis unit from the MCC.



ATTENTION: 2362 chassis units have the following approximate weights: D-frame, 260 lbs (119 kg); E-frame, 440 lbs (200 kg); F-frame 675 lbs (306 kg); and G-frame 1000 lbs (455 kg). 2364F chassis units have the following approximate weights: K-code, 260 lbs (119 kg); L-code, 440 lb (200 kg); M-code, 1000 lbs (455 kg); and N-code, 1000 lbs (455 kg). Failure to take precautions when moving a chassis unit may result in personal injury and/or damage to equipment.

ATTENTION: Do not force the chassis unit when removing it from the MCC. If you cannot easily remove the chassis unit, verify that all necessary wires have been disconnected.

ATTENTION: After the chassis unit has been removed from the MCC, secure the chassis unit so that it will neither tip over nor fall, causing personal injury and/or equipment damage.

10. Carefully remove the chassis unit from the MCC according to your company's handling instructions.

Installation Procedure

Follow the procedures below to install a roll-out chassis unit into its MCC.



ATTENTION: To avoid the hazard of electrical shock, verify that all voltages on the system bus network have been discharged before attempting to service the system.

ATTENTION: 2362 chassis units have the following approximate weights: D-frame, 260 lbs (119 kg); E-frame, 440 lbs (200 kg); F-frame 675 lbs (306 kg); and G-frame 1000 lbs (455 kg). 2364F chassis units have the following approximate weights: K-code, 260 lbs (119 kg); L-code, 440 lb (200 kg); M-code, 1000 lbs (455 kg); and N-code, 1000 lbs (455 kg). Failure to take precautions when moving a chassis unit may result in personal injury and/or damage to equipment.

1. Reposition the chassis unit into the MCC according to your company's handling instructions.
2. Connect all wires that you disconnected between the chassis unit and devices in the MCC.
- 3.

If the module size is:	Do this:
D, F, or G-frame 2362 units or K, M, or N-code 2364F units	Replace the two bolts to fasten the chassis unit to the upper brackets. See Figure 3.2.
E-frame 2362 units or L-code 2364F units	Replace the four screws to fasten the chassis unit to the upper brackets. See Figure 3.2.

4. Fasten four screws to attach the lower mounting angles (see Figure 3.2).
5. For G-frame 2362 units and M or N-code 2364F units, fasten the two screws to attach the lower brace
6. If the sealing angle has been removed, fasten the two screws to attach the sealing angle (see Figure 3.2).
7. Install four screws to attach both of the lower reinforcing angles.
8. Fasten two screws to attach the lower wireway cover (shown in Figure 3.2).

Removing and Installing MCC Doors

Introduction

This chapter provides the necessary steps to remove and install MCC doors.

Before You Begin

Before you begin your installation, be sure you have the following:

- Tool(s) you will need to:
 - remove a door hinge (i.e. - standard screwdriver)
 - disconnect door-mounted devices

Removing an MCC Door



ATTENTION: The system may contain stored energy devices. To avoid the hazard of electrical shock, verify that all voltage on capacitors has been discharged before attempting to service, repair, or remove a drive system or its components. You should only attempt the procedures in this manual if you are qualified to do so and are familiar with solid-state control equipment and the safety procedures in publication NFPA 70E.

Follow this procedure to remove an MCC door:

1. Open door completely.
2. Disconnect door-mounted devices, as appropriate.

Important: Before disconnecting, be sure to note the assembly/wiring of devices and re-label wire labels if they cannot be easily read.

3. Remove hinge pins by sliding them up out of the hinge. You can use a screwdriver to make pin removal easier.
4. Swing door carefully to a nearly closed position.
5. Lift door up and off.

Installing an MCC Door

Follow this procedure to install an MCC door:

1. With door in a nearly-closed position, place door onto hinges in its proper orientation.
2. Carefully open door completely.
3. Replace hinge pins by sliding them into hinges.
4. Connect door-mounted devices per your notes.

Installing Busbar Splices

Introduction

This chapter provides the necessary steps to install power, control, equipment grounding conductor (PE), and zero potential (TE) bus splices.

Before You Begin

Before you begin your installation:

1. Verify that MCCs have been joined together as specified by instructions provided in Chapter 1.
2. Be sure you have the following:
 - One PE / TE (equipment grounding conductor / zero potential) bus splice kit for every two sections just joined.
 - One control bus splice kit, if both sections have a control bus, for every two sections just joined.
 - One power bus splice kit for every two sections just joined.
 - Tool(s) you will need to:
 - tighten screws:
1/4" thread-forming screw (0.375" across flats)
 - torque bolts:
1/4" bolt (0.438" across flats)
 - secure screws and nuts:
1/4" nut (0.438" across flats)
3/8" nut (0.563" across flats)

Splicing Power Busbars

Follow the procedures contained in this section to splice the two halves of each power bus in every pair of MCCs that you have joined together.


Note: A common-DC-bus system will have 2 separate power busses; and a common-AC-bus system will have 3 separate power busses.

The following table will help you to determine the type of power bus splice that needs to be installed. This table addresses the various bus configurations available in a 20-inch-deep MCC, the standard depth used by Rockwell Automation Drive Systems.


If:	Then:
Both ends of the power bus to be joined are at a depth of either 11.92 inches (303 mm) or 16.92 inches (430 mm):	<ol style="list-style-type: none"> 1. Reference Figure 5.1(a). 2. Go to <i>Installing Straight Power Bus Splices</i>.
One end of the power bus to be joined is at a depth of 11.92 inches (303 mm); the other 16.92 inches (430 mm):	<ol style="list-style-type: none"> 1. Reference Figure 5.1(b). 2. Go to <i>Installing Straight Power Bus Splices</i>.

Figure 5.1
Top Views of Various Power Bus Splice Configurations^①

a. Both Ends of the Power Bus at the Same Depth

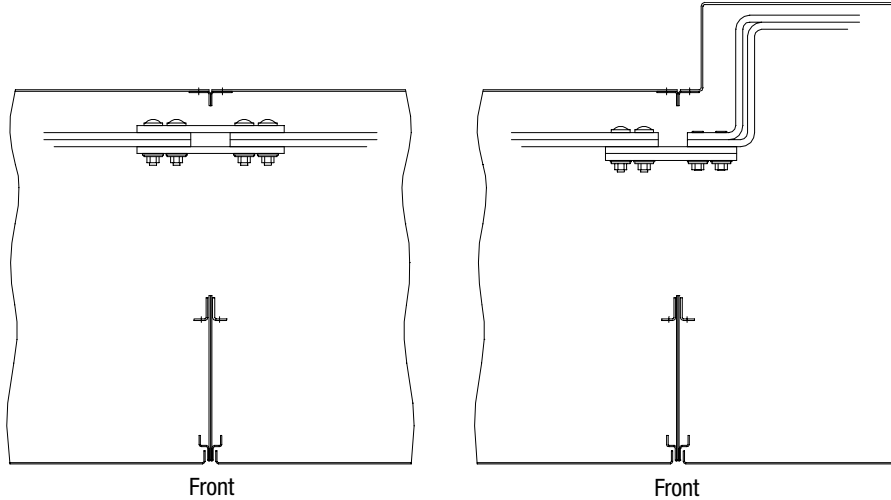

b. One End of the Power Bus at a Depth of 11.92 inches (303 mm); the Other, 16.92 inches (430 mm)

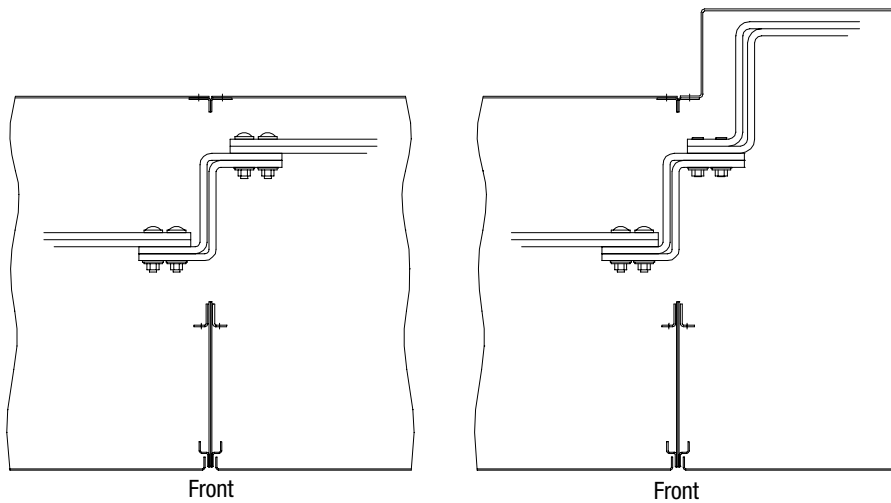

^① All views show a dual busbar configuration. In a single busbar configuration, only a single splice is used.

Installing Straight Power Bus Splices

If each power bus consists of:	Then go to:
A single bar	<i>Installing Straight Power Bus Splices: Single Bar</i>
Two bars	<i>Installing Straight Power Bus Splices: Dual Bar</i>

Installing Straight Power Bus Splices: Single Bar

1. Verify that the following splice hardware is present:

Description	Common DC Bus Quantity	Common AC Bus Quantity
8-hole, straight busbar splice	2	3
Bus clamps ^⓪	8	12
Flat washer	16	24
Nut/conical-spring washer	16	24


^⓪ For each busbar end with built-in clamps, decrease the required quantity by 2.



ATTENTION: Verify that the busbar splices are of the same thickness as the busbars to be spliced.

For lineups containing common bus F-frame 2362 units, any G-frame 2362 units, or M/N-code 2364F units, the bus splices should be sized to match the overall bus rating of the lineup. See Figure 5.2 for an example.

Figure 5.2
Splicing with G-Frame 2362 Units or M/N-Code 2364F Units—Example

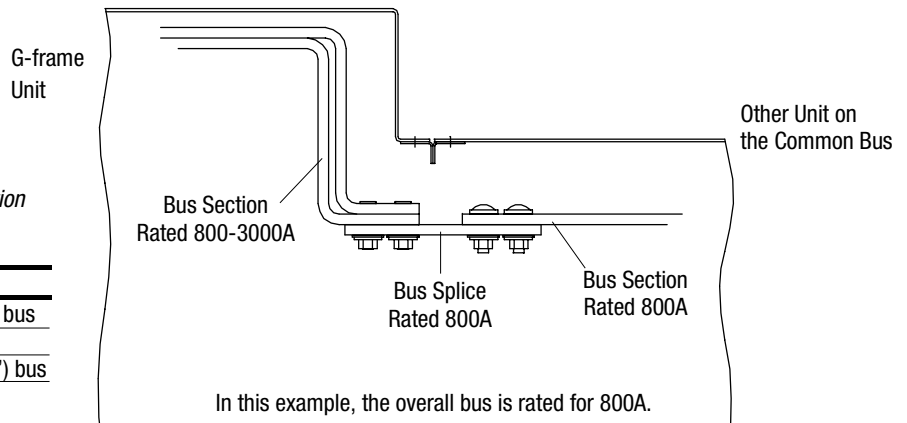


Select the appropriate clamps for each connection according to the table below.

Clamp Length	Use When Splicing
1.75"	800A (0.13") or 1200A (0.25") bus
2.00"	1600A (0.5") bus
2.25"	2000A (0.63") or 3000A (0.75") bus

2. Verify that contact surfaces are free of dirt/debris. Deburr edges as necessary.
3. Insert the bus clamps, from the backside, through the holes at the ends of the busses to be joined. Refer to Figure 5.3.

Note: Bus clamps will only fit into the busbar holes in the vertical orientation.

Figure 5.3
Installing a Straight Power Bus Splice, Single Bar

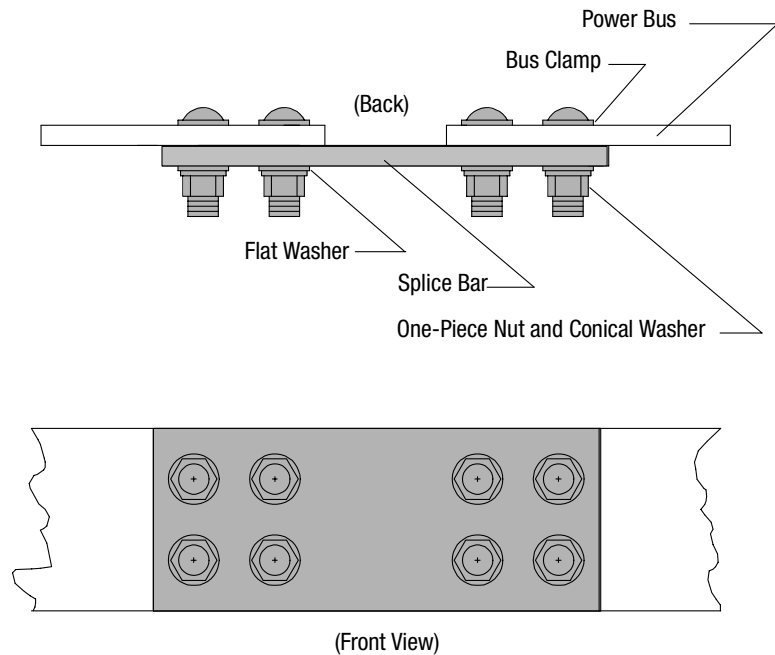

4. Slide one busbar splice over the ends of the bus clamps as shown in Figure 5.3.
5. Slide one flat washer and one nut/conical-spring washer over the end of each bus-clamp screw.
6. Torque all bus clamps to 25 lb-ft \pm 2 lb-ft (34 N-m \pm 3 N-m).

Installing Straight Power Bus Splices: Dual Bar

For each power bus in the system, follow this procedure:

1. Verify that the following splice hardware is present:

Description	Common DC Bus Quantity	Common AC Bus Quantity
8-hole, straight busbar splice	4	6
Bus clamps ^①	8	12
Flat washer	16	24
Nut/conical-spring washer	16	24

^① For each busbar end with built-in clamps, decrease the required quantity by 2.



ATTENTION: Verify that the busbar splices are of the same thickness as the busbars to be spliced.

For lineups containing common bus F-frame 2362 units, any G-frame 2362 units, or M/N-code 2364F units, the bus splices should be sized to match the overall bus rating of the lineup. See Figure 5.2 for an example.

2. Verify that contact surfaces are free of dirt/debris. Deburr edges as necessary.


3.

If:	Then:
Either bus has a built-in bus clamp	<ol style="list-style-type: none"> 1. Insert the bus clamps, from the backside, through the holes at the ends of the busses without built-in bus clamps. See Figure 5.3(a). 2. Slide two busbar splices over the ends of the bus clamps on the front-side of the bus.
Neither bus has a built-in bus clamp	<ol style="list-style-type: none"> 1. Position one busbar splice behind the bus as shown in Figure 5.3(b). 2. Insert the bus clamps, from the backside, through the busbar splice and bus. 3. Slide the second busbar splice over the ends of the bus clamps.


4. Slide one flat washer and one nut/conical-spring washer over the end of each bus-clamp screw.
5. Torque all bus clamps to 25 lb-ft \pm 2 lb-ft (34 N-m \pm 3 N-m).

Figure 5.4
Installing a Straight Power Bus Splice with Dual Bars

a. When a Power Bus has a Built-In Bus Clamp

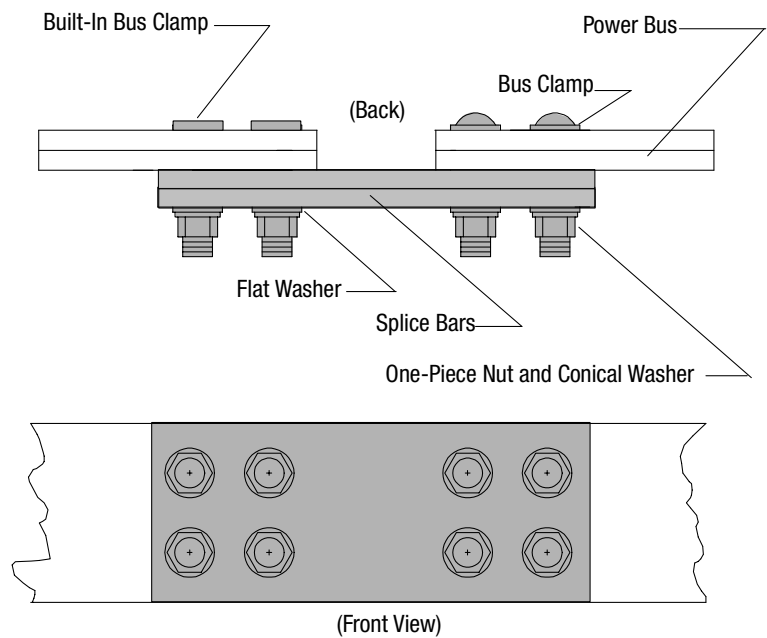

b. When Neither Power Bus has a Built-In Bus Clamp

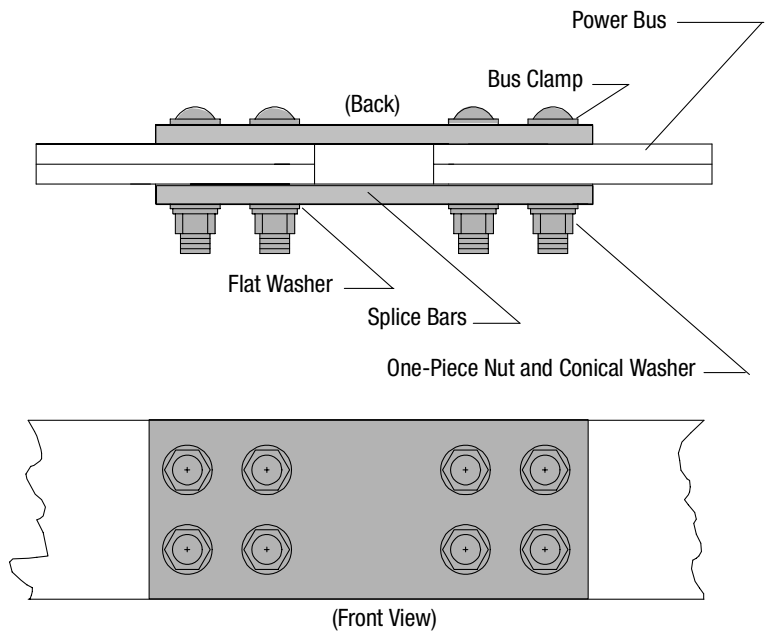

Installing Offset Power Bus Splices

If each power bus consists of:	Then go to:
A single bar	<i>Installing Offset Power Bus Splices: Single Bar</i>
Two bars	<i>Installing Offset Power Bus Splices: Dual Bar</i>

Installing Offset Power Bus Splices: Single Bar

For each power bus in the system, follow this procedure:

1. Verify that the following splice hardware is present:

Description	Common DC Bus Quantity	Common AC Bus Quantity
8-hole, offset busbar splice	2	3
Bus clamps ^⓪	8	12
Flat washer	16	24
Nut/conical-spring washer	16	24

^⓪ For each busbar end with built-in clamps, decrease the required quantity by 2.




ATTENTION: Verify that the busbar splices are of the same thickness as the busbars to be spliced.

For lineups containing common bus F-frame 2362 units, any G-frame 2362 units, or M/N-code 2364F units, the bus splices should be sized to match the overall bus rating of the lineup. See Figure 5.2 for an example.

2. Verify that contact surfaces are free of dirt/debris. Deburr edges as necessary.
3. Insert the bus clamps as indicated in Figure 5.5.

Figure 5.5
Installing a Single Bar Offset Power Bus Splice

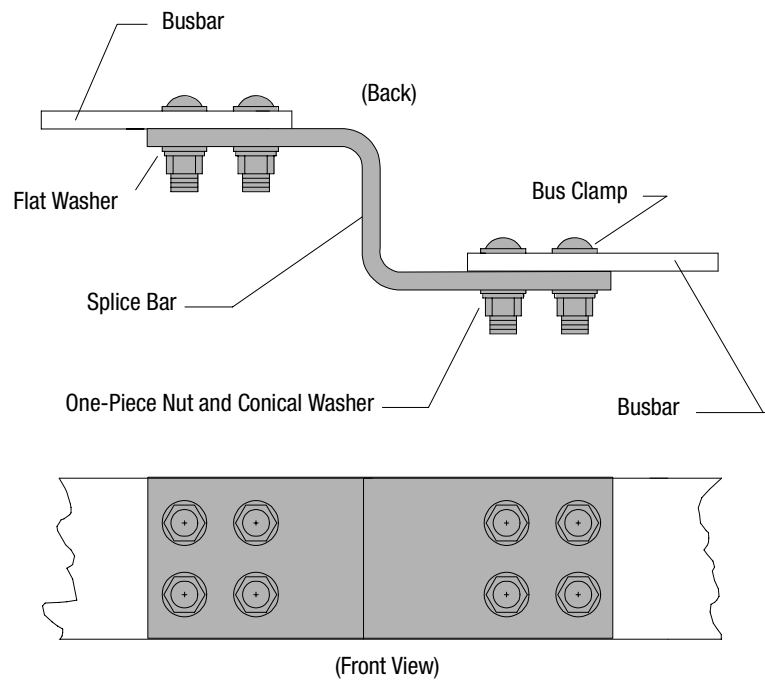

4. Position one busbar splice as shown in Figure 5.5.
5. Slide one flat washer and one nut/conical-spring washer over the end of each bus-clamp screw.
6. Torque all bus clamps to 25 lb-ft \pm 2 lb-ft (34 N-m \pm 3 N-m).

Installing Offset Power Bus Splices: Dual Bar

For each power bus in the system, follow this procedure:

1. Verify that the following splice hardware is present:

Description	Common DC Bus Quantity	Common AC Bus Quantity
8-hole, offset busbar splice	4	6
Bus clamps ^①	8	12
Flat washer	16	24
Nut/conical-spring washer	16	24


^① For each busbar end with built-in clamps, decrease the required quantity by 2.



ATTENTION: Verify that the busbar splices are of the same thickness as the busbars to be spliced.

2. Verify that contact surfaces are free of dirt/debris. Deburr edges as necessary.
3. Insert the bus clamps as indicated in Figure 5.6.

Figure 5.6
Installing a Dual Bar Offset Power Bus Splice

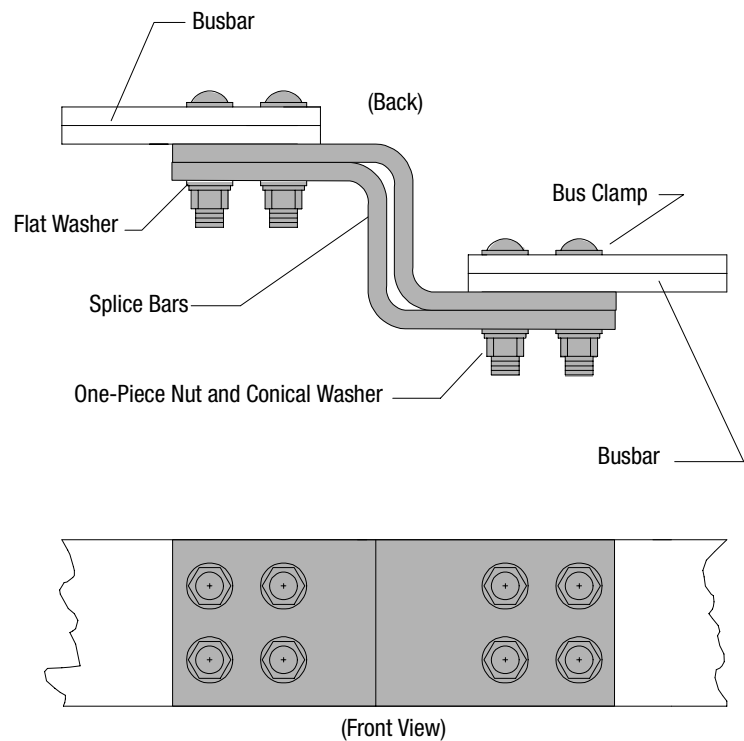

4. Position one busbar splice as shown in Figure 5.6.
5. Slide one flat washer and one nut/conical-spring washer over the end of each bus-clamp screw.
6. Torque all bus clamps to 25 lb-ft \pm 2 lb-ft (34 N-m \pm 3 N-m).

Splicing Control Busbars

Follow the procedures contained in this section to join the two halves of both control busses in every pair of MCCs that needs to be spliced together.

The following table will help you to determine the type of control bus splice that needs to be installed. This table addresses the various bus configurations available in a 20-inch-deep MCC, the most popular depth used by Rockwell Automation Drive Systems.

If:	Then go to:
Both ends of the control bus to be joined are at a depth of either 11.92 inches (303 mm) or 16.92 inches (430 mm):	<i>Installing Straight Control Bus Splices</i>
One end of the control bus to be joined is at a depth of 11.92 inches (303 mm); the other, 16.92 inches (430 mm):	<i>Installing Offset Control Bus Splices</i>

Installing Straight Control Bus Splices


Use this procedure if bus ends are at the same depth:

1. Verify that the following splice hardware is present:

Description	Quantity
2-hole, straight busbar splice	2
1/4-20 x 3/4" hex-head screw	4
Flat washer	4
Lockwasher	4

2. Slide one lockwasher and one flat washer onto a screw.
3. Repeat 2 once.
4. Position one busbar splice in front of the discontinuity in the upper control bus. Reference Figure 5.7.

Figure 5.7
Installing a Straight Control Bus Splice

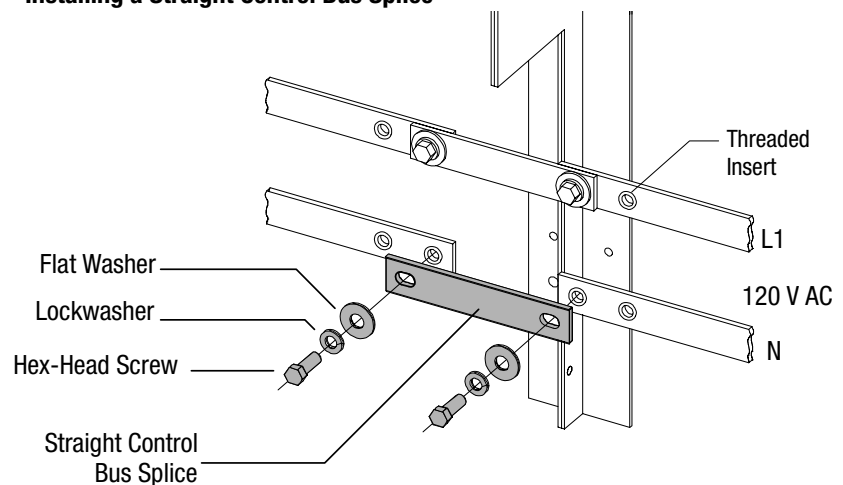

5. Align the two elongated holes of the straight control busbar splice over the two holes bordering the discontinuity in the upper control bus.
6. Fasten the straight control busbar splice to the upper control bus, from the front, using the same two hex head screws.
7. Torque both hex head screws to 108 lb-in (12.2 N-m).
8. Repeat 2 through 7 to splice together the lower control bus.

Installing Offset Control Bus Splices


Use this procedure if bus ends are offset in depth:

1. Verify that the following splice hardware is present:

Description	Quantity
2-hole, offset busbar splice	2
1/4-20 x 3/4" hex-head screw	4
Flat washer	4
Lockwasher	4

2. Slide one lockwasher and one flat washer onto one screw.
3. Repeat 2 once.
4. Position one offset control busbar splice in front of the discontinuity in the upper control bus. Reference Figure 5.8.

Figure 5.8
Installing an Offset Control Bus Splice

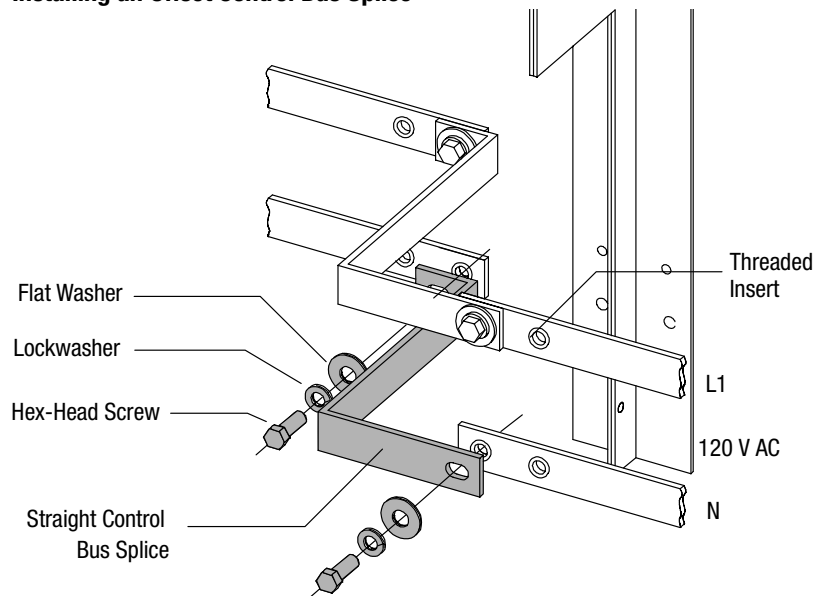

5. Align the two elongated holes of the offset control busbar splice over the two holes bordering the discontinuity in the upper control bus.
6. Fasten the offset control busbar splice to the upper control bus, from the front, using the same two screws.
7. Torque screws to 108 lb-in (12.2 N-m)
8. Repeat 2 through 7 to splice together the lower control bus.

Installing the Equipment Grounding Conductor (PE) Bus Splice

1. Verify that the following splice hardware is present:

Description	Quantity
1/4" x 1" busbar splice	2
1/4-20 x 3/4" thread-forming screw	4


2. Position one busbar splice in front the discontinuity in the PE bus. Reference Figure 5.9.

Note: When you look into the front of an MCC, the PE bus is located behind the TE bus.


3. Align the two elongated holes of the busbar splice over the two holes bordering the discontinuity in the PE bus.
4. Fasten the busbar splice to the PE bus, from the front, using thread-forming screws.

Note: If the system has a 3000 Amp-rated power bus, repeat steps 2 through 4 to install a second busbar splice. The two splices should be installed such that one splice spans the upper half of the PE bus; the second splice spans the lower half.

Figure 5.9
Installing the PE Bus Splice

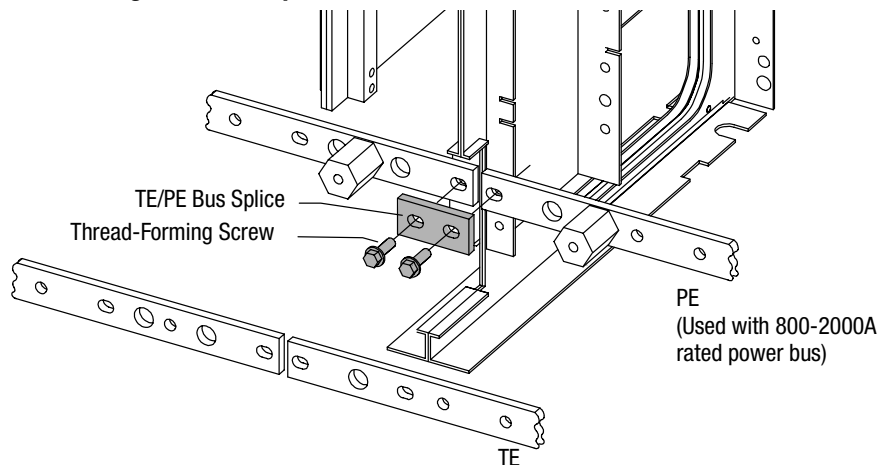

Note: If the system has a 3000A rated power bus, repeat steps 2 through 4 to install a second busbar splice. The two splices should be installed such that one splice spans the upper half of the PE bus; and the second splice spans the lower half.

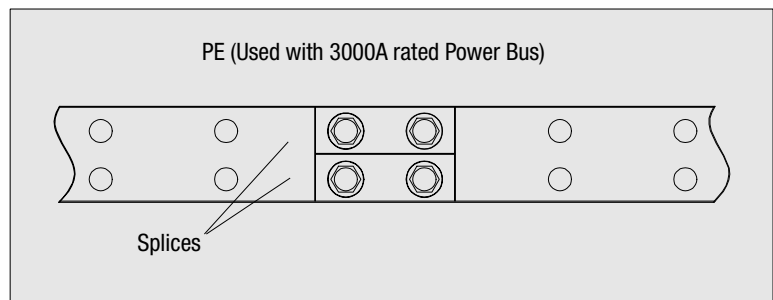

Installing the Zero Potential (TE) Bus Splice


Note: If the MCCs to be joined do not have a TE bus, discard the hardware for splicing together the TE bus and disregard this procedure.

1. Verify that the following splice hardware is present:

Description	Quantity
1/4" x 1" busbar splice	1
1/4" x 1" hex-head screw	2
Flat washer	4
Lockwasher	2
1/4" nut	2

2. Slip one flat washer onto one hex-head screw. See Figure 5.10.
3. Repeat 2 once.
4. Position the busbar splice in front of the discontinuity in the TE bus.
5. Align the two elongated holes of the busbar splice over the two holes bordering the discontinuity in the TE bus.
6. Slide the same two hex-head screws through both the busbar splice and the TE bus, from the front.
7. To each hex-head screw, slide on one flat washer, one lockwasher, and one nut.
8. Torque both hex-head screws to 108 lb-in (12.2 N-m).

Figure 5.10
Installing the TE Bus Splice

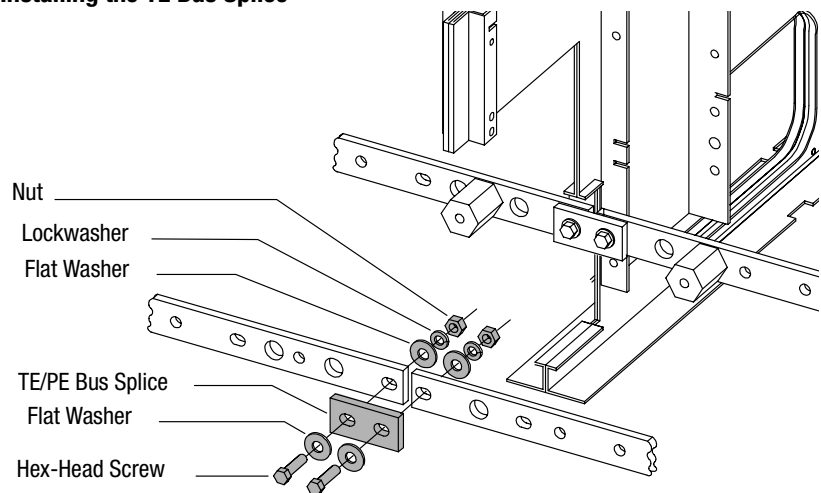

Installing Top Hat Assemblies and Cutting Holes for Cable Entry/Exit

Introduction

This chapter provides the necessary steps for installing top hat assemblies onto Bulletin 2300 enclosures and the necessary steps for properly cutting holes in Bulletin 2300 enclosures for cable entry or exit.

Installing a Top Hat Assembly

Before you begin your installation, be sure to have the following:

- All the items of the top hat assembly to be installed
- Tool(s) you will need to:
 - cut holes into MCC enclosures
 - loosen, tighten, and torque #10-32 screws


Note: The longer screws in the kit will be used to fasten the bottom plate of the assembly to the top of the MCC.



ATTENTION: Remove all power sources to the motor control center before installing the top hat assembly. Contact with energized parts can cause injury or death.

1. Remove the top plate from the MCC (this will be used as the top plate for the top hat assembly).
2. Attach the back plate to the side frames (items shown in Figure 6.1). Torque to 32 lb-in (3.6 N-m).
3. Place the bottom plate onto the MCC.
4. Place the assembly onto the bottom plate and secure to the MCC with the longer screws in the kit. Torque to 32 lb-in (3.6 N-m).
5. Attach the left side plate, right side plate, and front plate to the assembly. Torque to 32 lb-in (3.6 N-m).
6. Follow the instructions on page 6-3 to cut entry holes into the top plate.
7. Attach the top plate to the assembly. Torque to 32 lb-in (3.6 N-m).

Figure 6.1
Top Hat Assembly

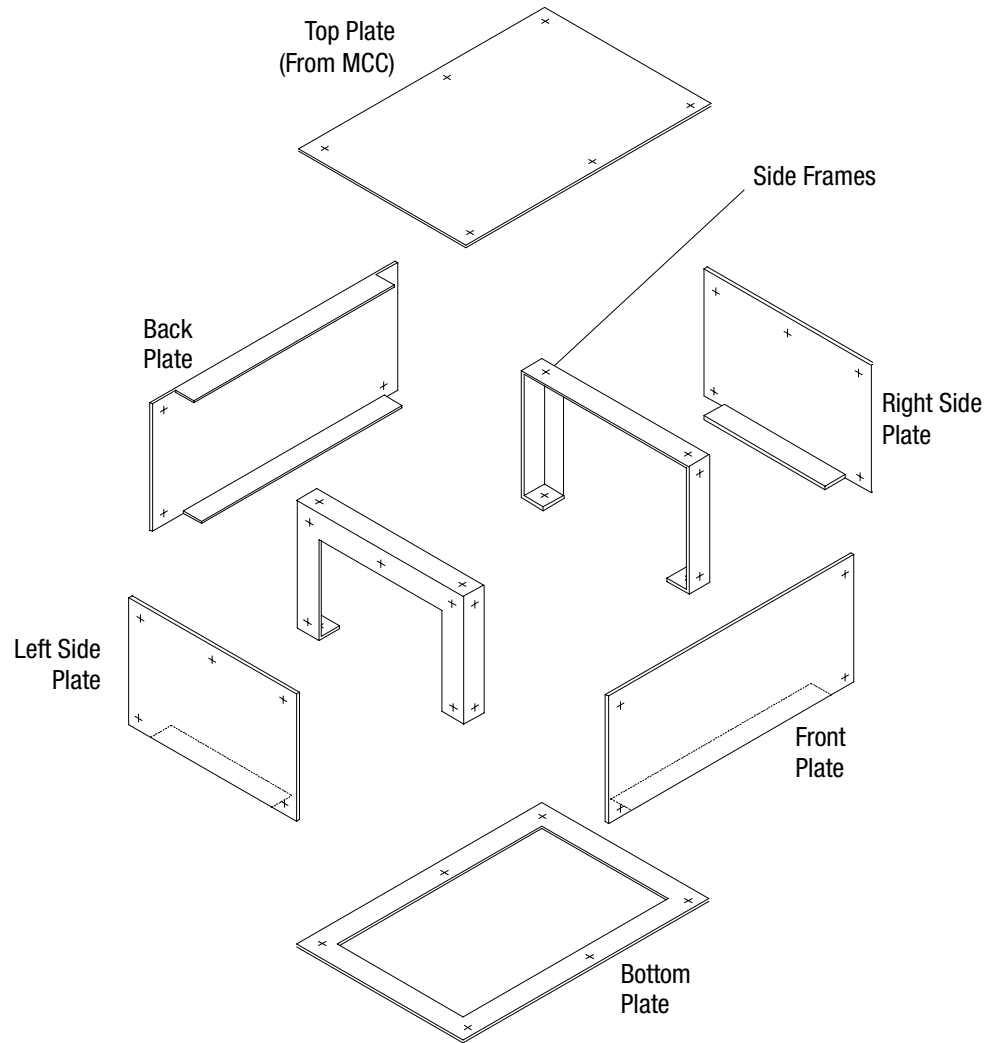

Cutting Holes for Cable Entry/Exit


Before you begin your installation, be sure to have the following:

- Appropriate product documentation
- Tool(s) you will need to:
 - cut holes into MCC enclosures
 - loosen, tighten, and torque #10-32 screws


1. Determine where to punch holes for cable entry/exit.

Important: Figure 6.1 shows the typical clearance available for cable entry/exit in the MCC. For top hat assemblies, the top plate may be cut anywhere within the 1.25 inch border.

Figure 6.2
Cutting Holes in a Top Plate—Clearance Area

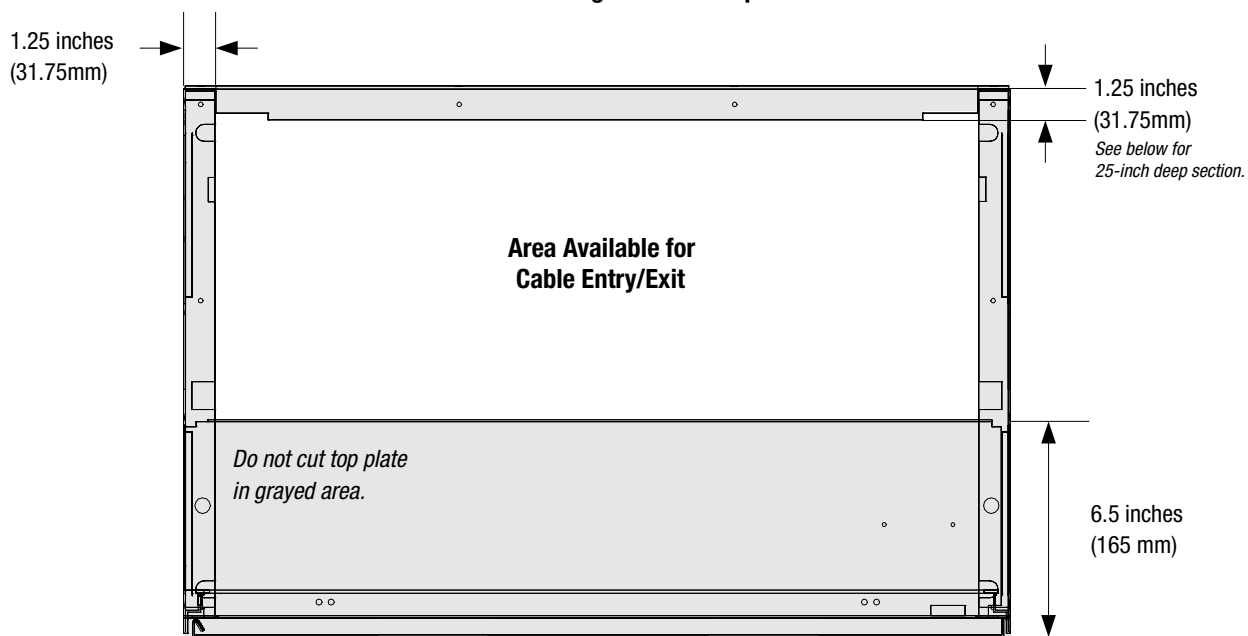

Note: Custom MCC sections may not include a wireway tray, or may include a wireway tray less than 6.5 inches deep. Check your MCC section for the appropriate clearance.

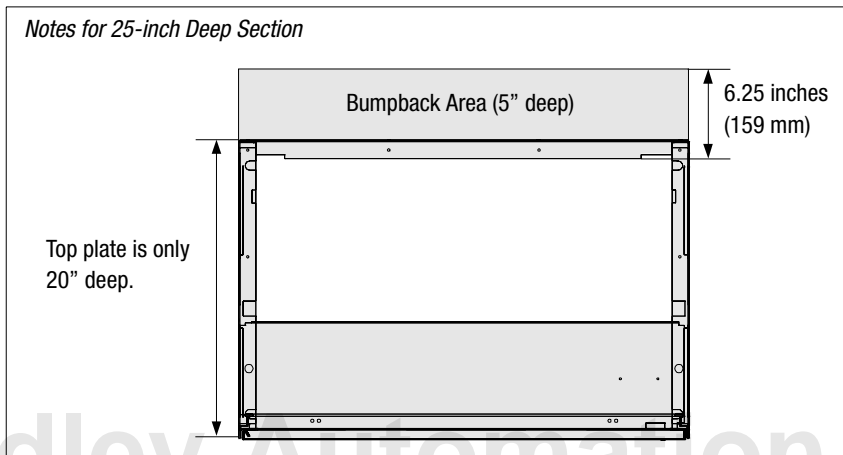

2. Remove the top plate from the MCC.
3. Punch the desired holes into the top plate. Remove all debris from the top plate.
4. Secure the top plate to the MCC. Torque to 32 lb-in (3.6 N-m).

Busbar Splice Kit Catalog Numbers

Introduction

This appendix provides a description of busbar splice kit catalog numbers.

Understanding Catalog Numbers

Each character of the catalog number identifies a specific type or size of a particular busbar splice kit. The first four numbers represent the family of products (for example, 2300). The remaining characters represent a specific version.

Determining Catalog Numbers

To help you to understand, we will provide an example of how to determine a catalog number for a Bulletin 2300 busbar splice kit.

The beginning portion of the catalog number for all 2300 busbar splice kits is 2300H (H is for a hardware kit). The remaining portion of the catalog number represents the particular type of kit.

The catalog number is organized as follows:

2300	H	-	SK	Busbar Type	-	Busbar Splice Shape	Power Bus Current Rating
------	---	---	----	-------------	---	---------------------	--------------------------

For example, a catalog number on the following page for 2300H-SKA-Z16 would mean:

- a common-AC power bus system
- a power bus rating of 1600 Amps
- an offset splice is needed

Busbar Splice Kit Catalog Numbers

Power Bus Splice Kit Catalog Numbers

If:	Then select the appropriate kit from:
You are splicing directly to a common AC bus F-frame, any G-frame unit, or any M or N-code	Table B
2362 unit, or any M or N-code 2364F unit	
Otherwise	Table A

Table A: Power Bus Splice Kits

Power Bus Rating (Amps)	Power Bus			
	AC Common Bus		DC Common Bus	
	Straight Splice Kit	Offset Splice Kit	Straight Splice Kit	Offset Splice Kit
800	2300H-SKA-L08	2300H-SKA-Z08	2300H-SKD-L08	2300H-SKD-Z08
1200	2300H-SKA-L12	2300H-SKA-Z12		
1600	2300H-SKA-L16	2300H-SKA-Z16	2300H-SKD-L16	2300H-SKD-Z16
2000	2300H-SKA-L20	2300H-SKA-Z20		
3000	2300H-SKA-L30	2300H-SKA-Z30	2300H-SKD-L30	2300H-SKD-Z30

Table B: Special Power Bus Splice Kits For Splicing to a Common AC Bus F-Frame 2362 Unit, Any G-Frame 2362 Unit, or Any M or N-Code 2364F Unit

Power Bus Rating (Amps)	Power Bus			
	AC Common Bus		DC Common Bus	
	Straight Splice Kit	Offset Splice Kit	Straight Splice Kit	Offset Splice Kit
800-3000	2300H-SKA-L30S	2300H-SKA-Z30	2300H-SKD-L30S	2300H-SKD-Z30

Control Bus Splice Kit Catalog Numbers

Table C: Control Bus Splice Kits

Power Bus Rating (Amps)	Control Bus	
	Straight Splice Kit	Offset Splice Kit
800-3000	2300H-SKC-L	2300H-SKC-Z

PE/TE Bus Splice Kit Catalog Numbers

Table D: PE/TE Bus Splice Kits

Power Bus Rating (Amps)	PE/TE Bus Splice Kit
800-3000	2300H-SKG-30

A

A-frame bucket weight, 2362, 2-3, 2-5

B

B-frame bucket weight, 2362, 2-3, 2-5

bucket units

completing inside, 1-13

connections, 2-4

installation procedure, 2-5

preparing inside, 1-7

removal procedure, 2-2

weights, 2-3, 2-5

bus access cover, removing

panel-mounted units, 1-9

roll-out chassis units, 1-6

busbars

splicing, 1-12, 5-1

offset control busbar, 5-14

offset power busbar, dual bar, 5-10

offset power busbar, single, 5-8

PE (equipment grounding conductor),
5-15

power busbar, 5-2

straight control busbar, 5-13

straight power busbar, dual bar, 5-6

straight power busbar, single bar, 5-4

TE (zero potential conductor), 5-16

C

catalog numbers

table of numbers, A-2

understanding numbers, A-1

C-frame bucket weight, 2362, 2-3, 2-5

conventions, manual, P-5

cutting holes for cable entry/exit, 6-3

D

D-frame chassis weight, 2362, 3-4, 3-5

doors, MCC

installing, 4-2

removal, 4-1

drive system, receiving, P-5

E

E-frame chassis weight, 2362, 3-4, 3-5

end covers, removing, 1-3

equipment grounding conductor (PE), 5-15

F

F-frame chassis weight, 2362, 3-4, 3-5

G

G-frame chassis weight, 2362, 3-4, 3-5

H

horizontal bus access cover

installing

panel-mounted unit, 1-13

roll-out chassis unit, 1-13

removing

panel-mounted unit, 1-9

roll-out chassis unit, 1-6

J

joining holes, location, 1-4

K

K-code chassis weight, 2364F, 3-4, 3-5

L

L-code chassis weight, 2364F, 3-4, 3-5
lower reinforcing angles
installing, 3-5
lower wireway cover
installing, 1-14
removing, 1-2, 3-2

M

M-code chassis weight, 2364F, 3-4, 3-5
Motor Control Center (MCC) installation
bolting sections together, 1-10
completing inside, 1-12
completing outside, 1-14
preparation, inside, 1-5
preparation, outside, 1-2
putting sections in place, 1-10
sections, unpacking, 1-1
tools required for, 1-1, 2-1, 3-1

N

N-code chassis weight, 2364F, 3-4, 3-5

P

panel mounted units
preparing inside, 1-9
panel-mounted units
completing inside, 1-13
PE (equipment grounding conductor), 5-15
power bus plate, removing, 1-3
power bus splice configurations, 5-3
precautions, safety, P-2

R

reference publications, P-4
reinforcing angles
installing, 3-5
roll-out chassis units
completing inside, 1-13
installing, 3-5
preparing inside, 1-5
weights, 3-4, 3-5

S

safety precautions, P-2
screwlatch locations, 2-2
splice opening cover
installing, 1-13
removing, 1-8
support services, P-6

T

TE (zero potential conductor), 5-16
top hat assembly, installing, 6-1

U

upper brackets
securing chassis to, 3-5

W

weight
A-frame bucket, 2362, 2-3, 2-5
B-frame bucket, 2362, 2-3, 2-5
C-frame bucket, 2362, 2-3, 2-5
D-frame chassis, 2362, 3-4, 3-5
E-frame chassis, 2362, 3-4, 3-5
F-frame chassis, 2362, 3-4, 3-5
G-frame chassis, 2362, 3-4, 3-5
K-code chassis, 2364F, 3-4, 3-5
L-code chassis, 2364F, 3-4, 3-5
M-code chassis, 2364F, 3-4, 3-5
N-code chassis, 2364F, 3-4, 3-5
wireway cover, removing, 1-2, 3-2

Z

zero potential conductor (TE), 5-16

Reach us now at www.rockwellautomation.com

Wherever you need us, Rockwell Automation brings together leading brands in industrial automation including Allen-Bradley controls, Reliance Electric power transmission products, Dodge mechanical power transmission components, and Rockwell Software. Rockwell Automation's unique, flexible approach to helping customers achieve a competitive advantage is supported by thousands of authorized partners, distributors and system integrators around the world.



Americas Headquarters, 1201 South Second Street, Milwaukee, WI 53204, USA, Tel: (1) 414 382-2000, Fax: (1) 414 382-4444

European Headquarters SA/NV, avenue Herrmann Debroux, 46, 1160 Brussels, Belgium, Tel: (32) 2 663 06 00, Fax: (32) 2 663 06 40

Asia Pacific Headquarters, 27/F Citicorp Centre, 18 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2300-5.1 March 1999

Supersedes Publication 2300-5.1 January 1997

**Rockwell
Automation**

PN 192677

©1999 Rockwell International Corporation. Printed in USA