



AC (120V) Isolated Output Module, 16 Outputs Cat. No. 1771-OD16

Installation Data

To The Installer

This document provides information on:

- important pre-installation considerations
- power supply requirements
- installing the module
- using the module indicators for troubleshooting
- replacing a fuse
- module specifications

Pre-installation Considerations

An output from this module can drive an Allen-Bradley Size 5 motor starter, provided its supply voltage does not drop below 92V ac. The maximum load current the module can deliver is 2A per channel, not to exceed 8A total per module.

Your module's outputs can drive the following motor starter combinations:

- 16 size 3 motor starters (1 per output)
- 10 size 4 motor starters (1 per output)
- 7 size 5 motor starters (1 per output)

The switching device in the output circuit is a solid-state triac. There is a small leakage current in the off state due to both triac and capacitive characteristics. The maximum leakage current per output is 3mA at 138V ac. Nominal leakage current is 1.5mA. The on-state voltage drop across the output terminals will not exceed 1.5V ac at 2A.

The 1771-OD16 module is designed for a 5mA minimum current on each output circuit. The total continuous current the module supports is 8A (2A maximum per channel). If this rating is exceeded, the module overheats and damage may occur.

The module uses zero voltage turn-on to reduce the electromagnetic interference and high inrush currents during initial turn-on. This zero crossing feature switches line voltage only when it is close to zero. The typical value for zero crossing voltage is $\pm 15V$ ac.

This module can be used in all 1771 I/O chassis except the 1771-A1, -A2 or -A4 chassis. It may also be used in a 1771-AM1 or 1771-AM2 chassis. This module is not compatible with the 1771-AL local I/O adapter module.

Suppression

Surge suppression circuitry is provided for the output triacs in this module. To suppress high-voltage transients from the AC line, a metal-oxide varistor (MOV) is provided between each set of terminals on the module. In each output circuit an RC network limits the magnitude of voltage transients that may occur when a device is wired in parallel or series with hard contacts.

Loads with inductive characteristics may require additional suppression devices. The impedance characteristic of the load is the most important factor in selecting a suppression device; thus no single suppression device can be recommended for every possible load. See Table 1 for acceptable suppression devices for typical loads.

Table 1
Allen-Bradley Suppressors

Allen-Bradley Equipment	Suppressor Catalog Number
Motor Starter Bulletin 509	599-K04 ¹
Motor Starter Bulletin 709	1401-N10 ¹
Relay Bulletin 700 Type N or P	700N5/700N9
Miscellaneous	700-N24 ²

¹ For starters with 120V AC coils

² Bulletin 700-N24 is a universal surge suppressor. You can use it on electromagnetic devices with the limitation of 35 sealed VA, 150V.

Power Supply Requirements

The isolated output module is powered by the power supply connected to the I/O chassis backplane. The module requires a maximum current of 200mA from the +5V dc output of this supply. Total the current requirements of this module with the other modules in the I/O chassis to avoid overloading the supply or the I/O chassis backplane.

Installing the Module

In this section we tell you how to install your module, key your I/O chassis and make your wiring connections

Module Location in the I/O Chassis

Group your modules to minimize adverse effects from radiated electrical noise and/or heat. We recommend the following:

- Group analog input and low voltage dc modules away from ac modules or high voltage dc modules to minimize electrical noise interference.
- Place analog input modules and other I/O modules sensitive to heat away from slot power supplies to minimize adverse heat effects.

Installation Data

AC (120V) Isolated Output Module
(Cat. No. 1771-OD16)

Initial Handling Procedures



ATTENTION: Remove power from the 1771 I/O chassis backplane and wiring arm before removing or installing an I/O module.

- Failure to remove power from the backplane or wiring arm could cause module damage, degradation of performance, or injury.
 - Failure to remove power from the backplane could cause injury or equipment damage due to possible unexpected operation.
-

- Touch a grounded object to rid yourself of charge before handling the module.
- Do not touch the backplane connector or connector pins.
- When you configure or replace internal components, do not touch other circuit components inside the module. If available, use a static-safe work station.
- When not in use, keep the module in its static-shield bag.

Keying the I/O Chassis

Use the plastic keying bands, shipped with each I/O chassis, to key your I/O slots to accept only this type of module. Place keying bands between these numbers labeled on the backplane connector:

- between 22 and 24
- between 34 and 36

Slots on the rear edge of the circuit board are matched to these slots to allow insertion of the module. You can key any connector in an I/O chassis to receive this module except for the left-most connector reserved for adapter or processor modules.



ATTENTION: A module inserted into a wrong slot could be damaged by improper voltages connected through the wiring arm. Use keying bands to prevent damage to the module.

Installation Data

AC (120V) Isolated Output Module
(Cat. No. 1771-OD16)

Inserting the Module into the Chassis

1. Position the module so that the circuit board on the rear of the module lines up with the top and bottom card guides in the chassis.
2. Slide the module into the chassis.
3. Press firmly to seat the module in the chassis backplane connector.
4. Swing the module locking latch down into place over the front of the module.

Connecting Wiring to the module

You make connections to the module through the 1771-WN field wiring arm shipped with the module. The arm pivots on the chassis to connect with the terminals on the front of the module ([Figure 1](#)). The wiring arm allows the module to be removed from the chassis without disconnecting wiring.

1. Make certain all power is removed from the module before making wiring connections.
2. Swing the wiring arm up into position on the front of the module. The locking tab on the module will secure it into place.
3. Make your connections to the field wiring arm as shown in [Figure 1](#). (Use the label on the front of the wiring arm to identify your wiring.)


Note: A shorting bar can be used to connect the commons if no channel-to-channel isolation is required.



ATTENTION: The field wiring arm terminal identification number is not the same as the number of the bit which controls that output.

You should identify the labels on the wiring arm with the name or number of the device connected at each terminal.

Figure 1
Connection Diagram for the 1771-OD16 Isolated Output Module

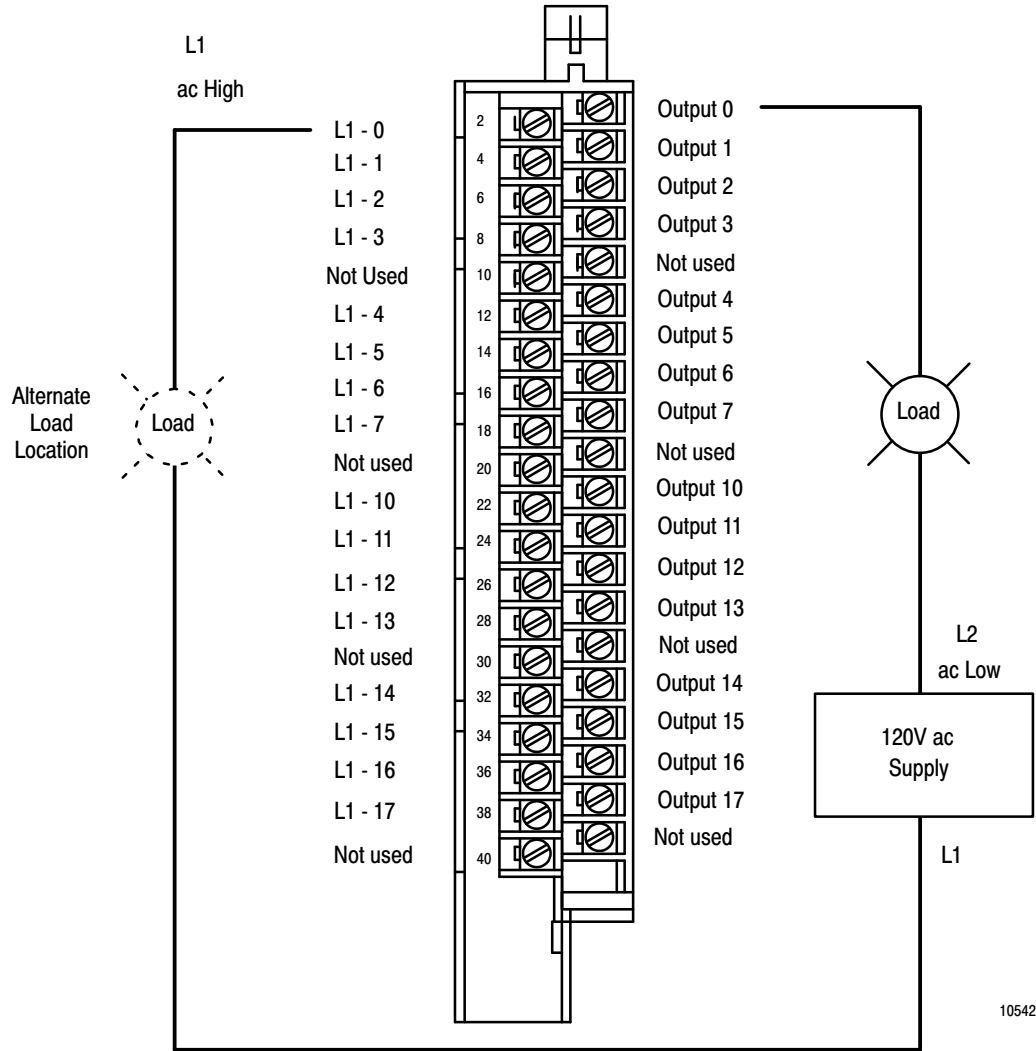

You can use an output of the 1771-OD16 module to drive an input of a 120V ac input module (1771-IA, -IA2, -IAD, -ID or ID16) to indicate status of turning on a motor starter, for example (Figure 2). Inputs configured with the output module are not isolated from each other.




ATTENTION: Do not connect the 1771-OD16 output channels in series. Doing so can result in distortion of the output waveform causing the output devices to chatter.

Installation Data

AC (120V) Isolated Output Module
(Cat. No. 1771-OD16)

Figure 2
Driving an Input with an Output

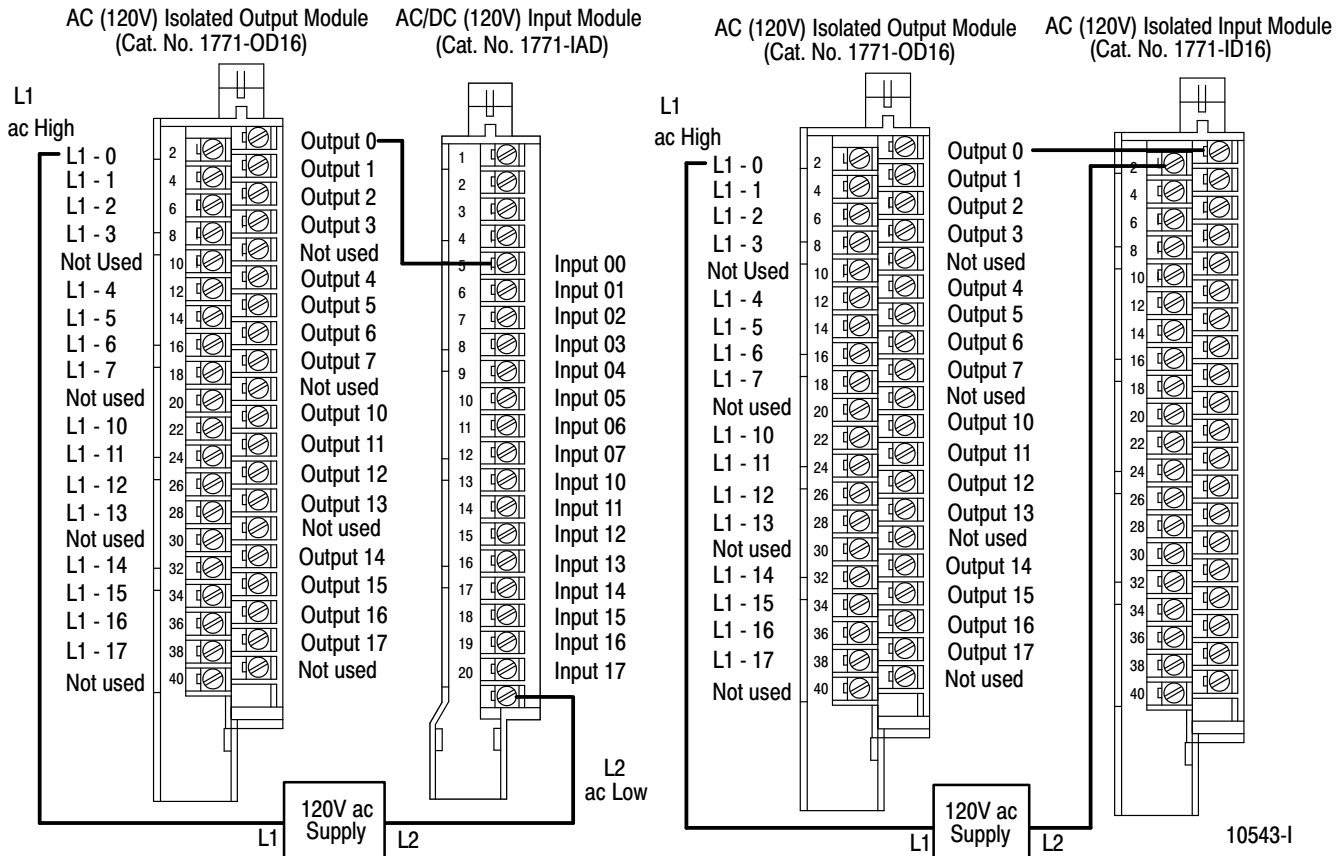


Interpreting the Status Indicators

The module has 18 indicators (Figure 3), consisting of 16 output status indicators, an active indicator and a fuse blown indicator. The 16 status indicators will light when an "on" signal has been communicated between the module and the system backplane.

The ACTIVE indicator will light when the module has started up and successfully initialized. The FUSE blown indicator will light when the fuse has cleared or been removed and the channel associated with that fuse has been turned "on." The fuse-blown circuit will not operate if the applied voltage to that channel is above the specified minimum "on-state" voltage, and the output load current is less than or equal to 5mA. The FUSE blown indicator will reset after the fuse has been replaced and chassis power has been cycled.

Figure 3
Status Indicators

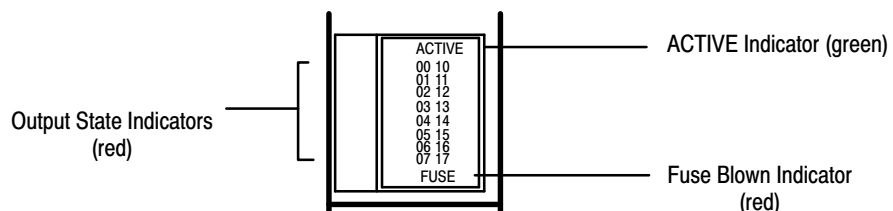

10544-1

Installation Data

AC (120V) Isolated Output Module
(Cat. No. 1771-OD16)

Replacing a Fuse

Each module output is individually fused. You can easily access the module fuses through the access holes on the side cover. Follow the procedure below.




ATTENTION: Remove power from the 1771 I/O chassis backplane and wiring arm before removing or installing an I/O module.

- Failure to remove power from the backplane could cause injury or equipment damage due to possible unexpected operation.
- Failure to remove power from the backplane or wiring arm could cause module damage, degradation of performance, or injury.

If a blown fuse occurs:

1. Turn off power to the I/O chassis backplane.
2. Pivot the wiring arm away from the module and pull the module from the I/O chassis.
3. Use a small common screwdriver to reach through the front of the module and carefully pry one end of the fuse out of its holder.

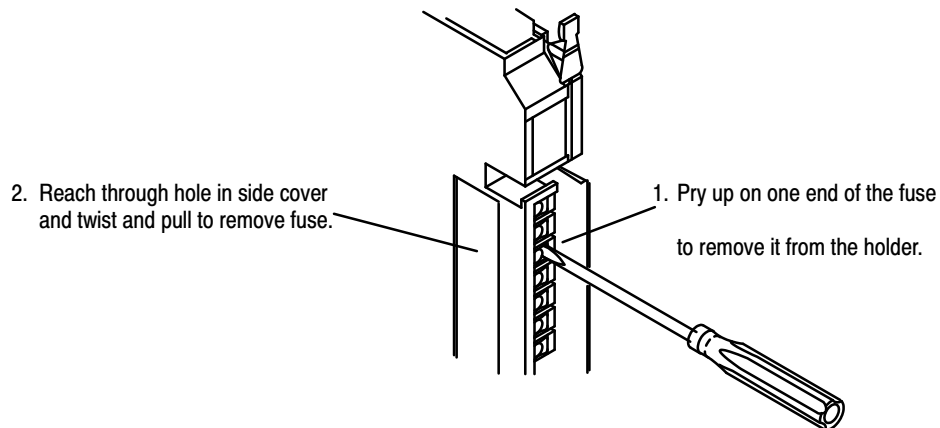

18532

4. Reach through the access hole on the side of the module and carefully twist and pull to remove the blown fuse. Replace it with a 3A 2AG slo-blow fuse (Littelfuse part number 229003).
5. Reinstall the module in the I/O chassis.
6. Reposition the wiring arm.
7. Restart system power.

Installation Data

AC (120V) Isolated Output Module
(Cat. No. 1771-OD16)

Specifications


Outputs per Module	16	
Module Location	1771-A1B thru -A4B I/O Chassis	
Voltage Rating	74 to 138V ac, 47-63Hz	
Current Rating (per channel)	5mA-2A continuous (max) 20A surge for 100ms; repeatable every 2 seconds 8A continuous per module (maximum)	
Power Rating	3 Watts per output (max) @ 2A	
On-state Voltage Drop (each output)	5.7V rms (max.) @ load current <70mA 1.5V rms (max.) @ load current >70mA	
Off-state Leakage Current	3.0mA max. @ 138V ac; 1.5mA (typical) @ 120V ac	
Zero Voltage Turn-on	25V ac maximum; 15V ac typical	
Signal Delay Times	Off to On On to Off	8.8ms @ 60Hz max; 10.6ms @ 50Hz max 8.8ms @ 60Hz max; 10.6ms @ 50Hz max (zero cross switching)
Isolation Voltage	1500V channel-to-channel; 1500V channel to backplane	
Power Dissipation	13.0 Watts (max); 1.0 Watts (min)	
Thermal Dissipation	44.4 BTU/hr (max); 3.4 BTU/hr (min)	
Backplane Current	200mA maximum	
Maximum Cable Length	1000 ft (304.8 m)	
Conductors	Wire Size	14 gauge stranded maximum 3/64 inch insulation maximum
	Category	1 ¹
Environmental Conditions		
	Operational Temperature	0° to 60°C (32° to 140°F)
	Storage Temperature	-40° to 85°C (-40° to 185°F)
	Relative Humidity	5 to 95% (without condensation)
Fuses		3A 2AG Slo-Blo fuses (1 per output), Littelfuse P/N 229003 (Optional Fuse Kit, Cat. No. 1771-FE contains 5 fuses)
Keying		Between 22 and 24 Between 34 and 36
Field Wiring Arm		Catalog Number 1771-WN
Wiring Arm Screw Torque		7-9 inch-pounds

¹ Refer to publication 1770-4.1, Programmable Controller Wiring and Grounding Guidelines



ALLEN-BRADLEY
A ROCKWELL INTERNATIONAL COMPANY

Allen-Bradley has been helping its customers improve productivity and quality for 90 years. A-B designs, manufactures and supports a broad range of control and automation products worldwide. They include logic processors, power and motion control devices, man-machine interfaces and sensors. Allen-Bradley is a subsidiary of Rockwell International, one of the world's leading technology companies.

**With major offices worldwide.**

Algeria • Argentina • Australia • Austria • Bahrain • Belgium • Brazil • Bulgaria • Canada • Chile • China, PRC • Colombia • Costa Rica • Croatia • Cyprus • Czech Republic • Denmark • Ecuador • Egypt • El Salvador • Finland • France • Germany • Greece • Guatemala • Honduras • Hong Kong • Hungary • Iceland • India • Indonesia • Israel • Italy • Jamaica • Japan • Jordan • Korea • Kuwait • Lebanon • Malaysia • Mexico • New Zealand • Norway • Oman • Pakistan • Peru • Philippines • Poland • Portugal • Puerto Rico • Qatar • Romania • Russia-CIS • Saudi Arabia • Singapore • Slovakia • Slovenia • South Africa, Republic • Spain • Switzerland • Taiwan • Thailand • The Netherlands • Turkey • United Arab Emirates • United Kingdom • United States • Uruguay • Venezuela • Yugoslavia

World Headquarters, Allen-Bradley, 1201 South Second Street, Milwaukee, WI 53204 USA, Tel: (1) 414 382-2000 Fax: (1) 414 382-4444