



Allen-Bradley CP6 Cable

(Catalog No. 1784-CP6)


Installation Data

To the Installer

Use the CP6 cable to connect a personal computer to a communication interface daughterboard (figure 1). The daughterboard provides the communication to your Data Highway Plus network and can be found in such devices as:

- Allen-Bradley family programmable controllers
- motion control devices
- host computers

Figure 1
Using the CP6 Cable to Connect a Personal Computer To a Communication Interface Daughterboard

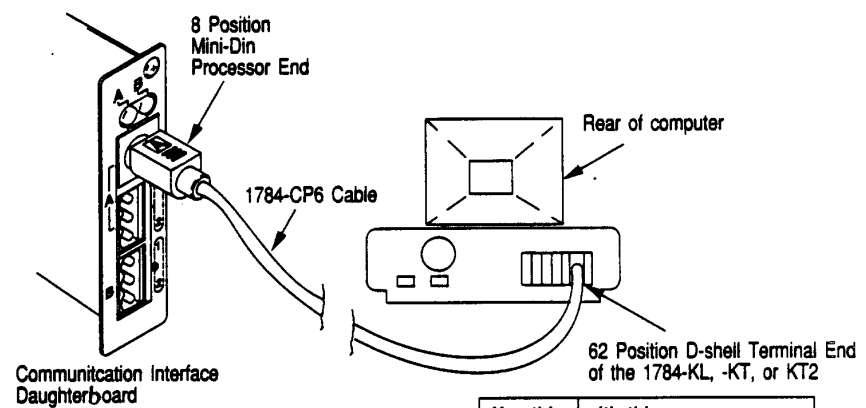


Use this interface:	with this computer:
1784-KT	IBM-AT/XT compatible computer
1784-KT	Allen-Bradley 1784-T35 or -T50 industrial terminal
1784-KL	Allen-Bradley 1784-T45 or -T47 industrial terminal
1784-KT2	IBM PS/2 device

Installing the CP6 Cable

To install the CP6 cable, follow the steps below:


1. Locate the communication interface daughterboard and remove the cap covering the 8 position mini-din socket.

Important: Save this cap; you will need to re-insert it when the socket not in use.

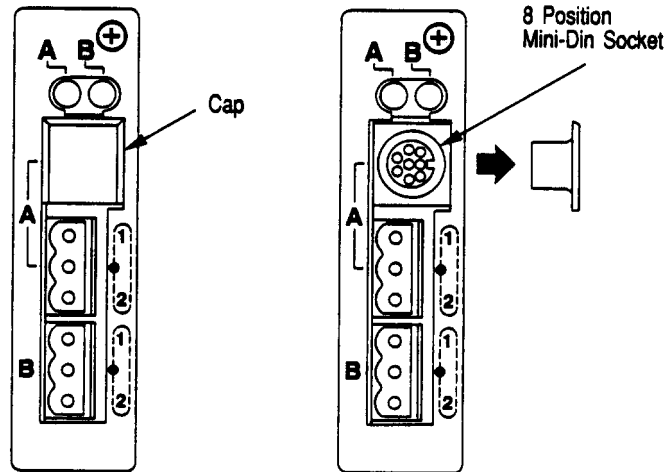


18106

2. Locate the cable.

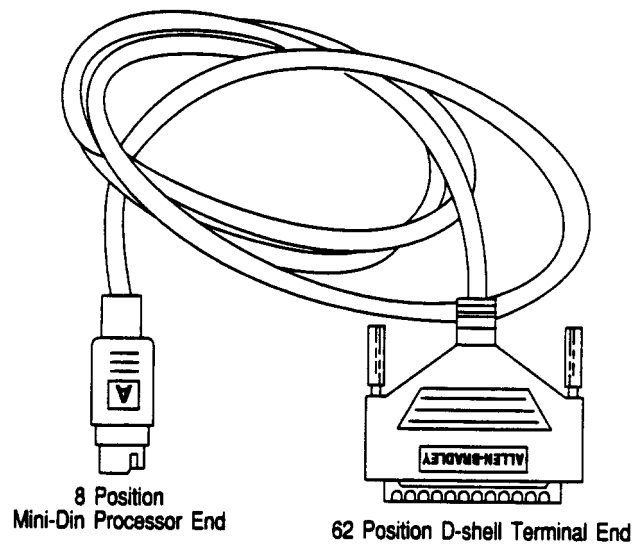

18115

3. Install the cable. Make sure the letter A on the processor end is facing toward the A and B LEDs. At the terminal end, turn the thumbscrews clockwise until they come to a complete stop.

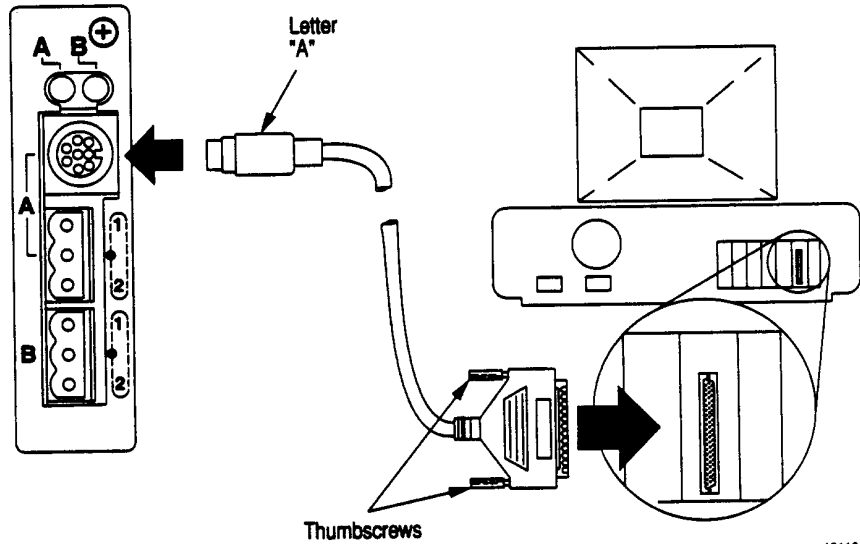


18116

The cable is now connected with channel A of the communication interface daughterboard.

Important: Allen-Bradley's PLC-5/40 and -5/60 family programmable controllers have two communication interface daughterboards. If you are connecting the CP6 cable to a PLC-5/40 or -5/60, you can use the socket of either daughterboard; however, you are only connected with channel A of the daughterboard in use.

Figure 2 shows the CP6 cable connected to a PLC-5/40.


Figure 2
The CP6 Cable Connected to a PLC-5/40

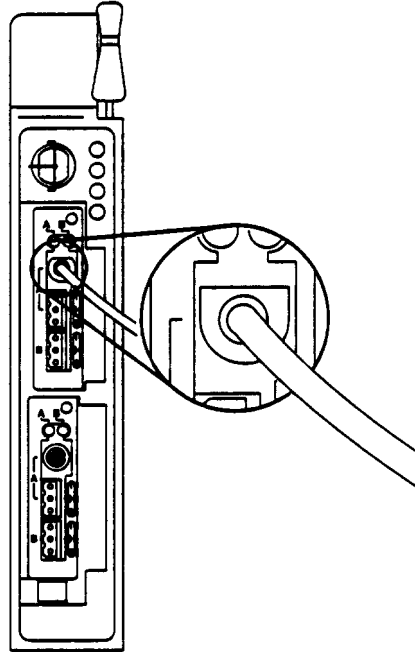

18117

Cable Pinouts

Cable pinouts for the CP6 cable are shown below.

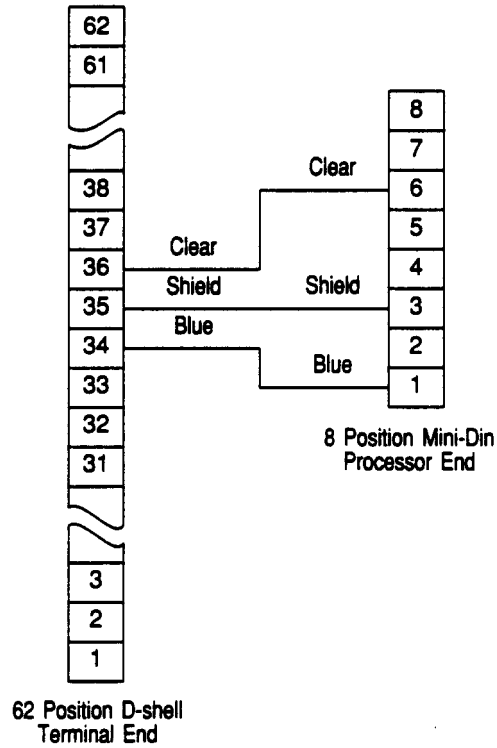

18118

Specifications

Specifications for the CP6 cable are shown below.

Length	▪ 10ft (-0, +0.5ft) (3.04m)
Thumbscrew Threads	▪ #4-40 on 62 position D-sub
Storage Temperature	▪ -40 to 185°F (-40 to +85°C)
Operating Temperature	▪ 32 to 140°F (0 to 60°C)
Humidity	▪ 0 to 95% noncondensing



ALLEN-BRADLEY
A ROCKWELL INTERNATIONAL COMPANY

As a subsidiary of Rockwell International, one of the world's largest technology companies — Allen-Bradley meets today's challenges of industrial automation with over 85 years of practical plant-floor experience. More than 11,000 employees throughout the world design, manufacture and apply a wide range of control and automation products and supporting services to help our customers continuously improve quality, productivity and time to market. These products and services not only control individual machines but integrate the manufacturing process, while providing access to vital plant floor data that can be used to support decision-making throughout the enterprise.

With offices in major cities worldwide

**WORLD
HEADQUARTERS**
Allen-Bradley
1201 South Second Street
Milwaukee, WI 53204 USA
Tel: (1) 414 382-2000
Telex: 43 11 016
FAX: (1) 414 382-4444

**EUROPE/MIDDLE
EAST/AFRICA
HEADQUARTERS**
Allen-Bradley Europe B.V.
Amsterdamseweg 15
1422 AC Uithoorn
The Netherlands
Tel: (31) 2975/43500
Telex: (844) 18042
FAX: (31) 2975/60222

**ASIA/PACIFIC
HEADQUARTERS**
Allen-Bradley (Hong Kong)
Limited
Room 1006, Block B, Sea
View Estate
28 Watson Road
Hong Kong
Tel: (852) 887-4788
Telex: (780) 64347
FAX: (852) 510-9436

**CANADA
HEADQUARTERS**
Allen-Bradley Canada
Limited
135 Dundas Street
Cambridge, Ontario N1R
5X1
Canada
Tel: (1) 519 623-1810
FAX: (1) 519 623-8930

**LATIN AMERICA
HEADQUARTERS**
Allen-Bradley
1201 South Second Street
Milwaukee, WI 53204 USA
Tel: (1) 414 382-2000
Telex: 43 11 016
FAX: (1) 414 382-2400