




ALLEN-BRADLEY

Block I/O Cat. No. 1791-IOBA and -IOBB

User Manual

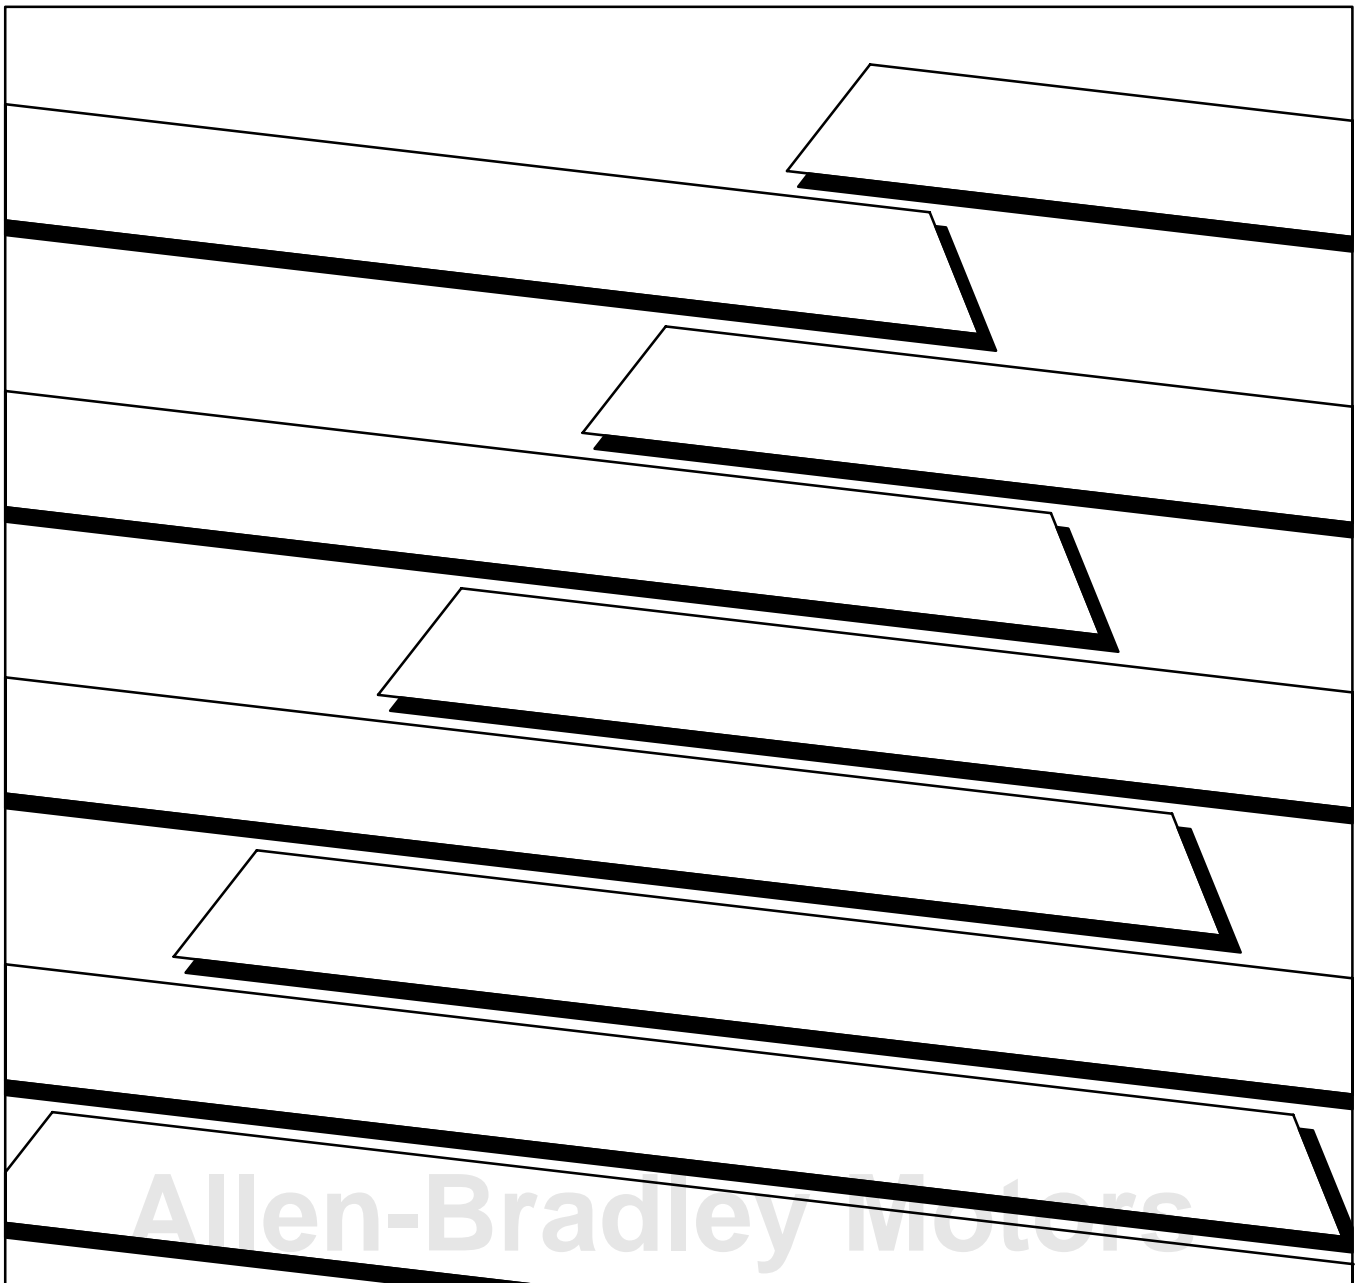

Important User Information

Because of the variety of uses for this product and because of the differences between solid state products and electromechanical products, those responsible for applying and using this product must satisfy themselves as to the acceptability of each application and use of this product. For more information, refer to publication SGI-1.1 (Safety Guidelines For The Application, Installation and Maintenance of Solid State Control).

The illustrations, charts, and layout examples shown in this manual are intended solely to illustrate the text of this manual. Because of the many variables and requirements associated with any particular installation, Allen-Bradley Company cannot assume responsibility or liability for actual use based upon the illustrative uses and applications.

No patent liability is assumed by Allen-Bradley Company with respect to use of information, circuits, equipment or software described in this text.

Reproduction of the contents of this manual, in whole or in part, without written permission of the Allen-Bradley Company is prohibited.

Throughout this manual we make notes to alert you to possible injury to people or damage to equipment under specific circumstances.



WARNING: Tells readers where people may be hurt if procedures are not followed properly.



CAUTION: Tells readers where machinery may be damaged or economic loss can occur if procedures are not followed properly.

Warnings and Cautions:

- Identify a possible trouble spot.
- Tell what causes the trouble.
- Give the result of improper action.
- Tell the reader how to avoid trouble.

Important: We recommend you frequently backup your application programs on appropriate storage medium to avoid possible data loss.

Summary of Changes

Summary of Changes

This issue of the manual contains new information and updated information.

New Information

This version of the manual includes the addition of the 1791-IOBB block I/O module.

The 1791-IOBB block I/O module has:

- 10 inputs
- 6 outputs

Updated Information

This manual also includes the addition of information previously included in publication 1791-6.5.1-DU1, the documentation update which covered the 1791-IOBB block I/O module. This manual also includes revised specifications for both the -IOBA and -IOBB.

To help you find new and updated information in this manual, we have included change bars as shown to the right of this paragraph.

Table of Contents

Important User Information	1
Summary of Changes	S-1
Using This Manual	1-1
Purpose of Manual	1-1
Audience	1-1
Vocabulary	1-1
Manual Organization	1-1
Warnings and Cautions	1-2
Related Publications	1-2
Introducing Block I/O	2-1
Chapter Objectives	2-1
General Description	2-1
How Block I/O Fits in a PLC System	2-2
Summary	2-4
Installing Block I/O	3-1
Chapter Objectives	3-1
Pre-installation Considerations	3-1
Installing the Block I/O	3-2
Connecting Wiring	3-3
Remote I/O Link or Distributed I/O Link Wiring	3-6
Extended Node Capability	3-8
Compatibility of 1771 I/O Products with Extended Node Numbers ..	3-9
Summary	3-9
Configuring Your Block I/O for PLC	
Family Programmable Controllers	4-1
Chapter Objectives	4-1
Setting the Configuration Switches	4-1
Summary	4-6

Configuring Your Block I/O for SLC Controllers	<u>5-1</u>
Chapter Objectives	<u>5-1</u>
Setting the Configuration Switches	<u>5-1</u>
Addressing the Blocks Using SLC Controllers	<u>5-3</u>
Summary	<u>5-3</u>
Troubleshooting	<u>6-1</u>
Chapter Objectives	<u>6-1</u>
LED Indicators	<u>6-1</u>
Summary	<u>6-2</u>
Specifications	<u>A-1</u>

Using This Manual

Purpose of Manual

This manual shows you how to use your Block I/O with an Allen–Bradley programmable controller. It helps you install, program and troubleshoot your module.

Audience

You must be able to program and operate an Allen–Bradley programmable controller (PLC) to make efficient use of Block I/O modules.

We assume that you know how to do this in this manual. If you do not, refer to the appropriate PLC programming and operations manual before you attempt to program this module.

Vocabulary

In this manual, we refer to:

- the block I/O module as the “block” or the “module”
- the programmable controller as the “controller”

Manual Organization

This manual is divided into 6 chapters. The following chart shows each chapter with its corresponding title and brief overview of the topics covered in that chapter.

Chapter	Title	Topics Covered
2	Introducing Block I/O	Description of the modules, including general and hardware features
3	Installing Block I/O	Module power requirements, location, and wiring information
4	Configuring your block I/O for PLC family programmable controllers	How to set the configuration switches and address the block I/O.
5	Configuring Your Block I/O for SLC Controllers	How to set the switches, and where to go for full information
6	Troubleshooting	How to use the indicators to troubleshoot your block I/O module.
Appendix A	Specifications	Specifications for the block I/O.

Warnings and Cautions

This manual may contain warnings and cautions. A warning tells where you may be injured if you use your equipment improperly. Cautions tell where equipment may be damaged from misuse.

You should read and understand cautions and warnings before performing the procedures they precede.

Related Publications

For a list of publications with information on Allen–Bradley programmable controller products, consult our publication index (SD499).

Introducing Block I/O

Chapter Objectives

In this chapter you will learn what block I/O is, and its features, and how it functions.


General Description

Block I/O consists of small, self-contained remote I/O devices complete with power supply, programmable controller interface, input/output connections and signal conditioning circuitry.

Two types of block I/O are available. The 1791-IOBA has 8 inputs and 8 outputs; the 1791-IOBB has 10 inputs and 6 outputs. In all other aspects, they are identical.

The blocks are compatible with PLC-2, PLC-3, and PLC-5 family programmable controllers, and the SLC 500 modular controllers. When used with PLC-2 family programmable controllers, a sub I/O scanner module (cat. no. 1771-SN) or remote I/O scanner module (cat. no. 1772-SD2) is used to communicate with the blocks. When used with PLC-3 and PLC-5 family programmable controllers, they can be connected directly to the controller, a scanner module, or through a remote I/O adapter module. When used with SLC 500 controllers, a 1747-DSN scanner (or the 1747-SN Remote I/O scanner) is used to communicate with the blocks.

Physical features of the block I/O are shown in Figure 2.1.

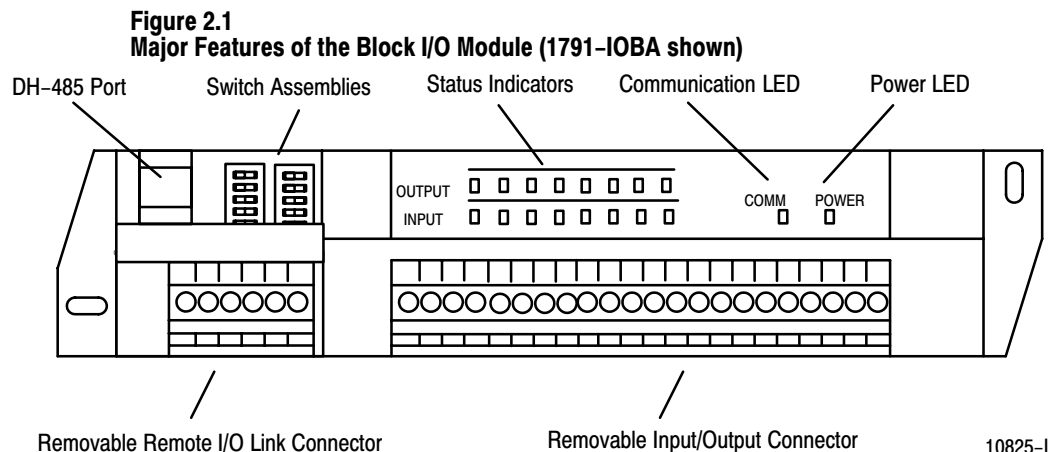

Wiring Connectors – The remote I/O link connector and input/output connector are removable for easy connection of wiring.

Switch Assemblies – Two DIP switches are provided for setting the I/O rack number, starting I/O group, transmission rate, last chassis, last state and DH-485 terminator.

Status Indicators – LED indicators are provided for communication, power and input/output status. These provide a visual indication for aid in troubleshooting.

DH-485 Port – A plug-in port is provided for use with DH-485 data link when used with the SLC controller.


How Block I/O Fits in a PLC System

Block I/O is a complete I/O interface that includes the functionality of the I/O rack, adapter, power supply, and I/O modules in a single unit. Simply connect sensors and actuators to the module and use the remote I/O cable to connect the block I/O to your programmable controller (Figure 2.4).

The block uses sinking inputs and sourcing outputs.

In sinking inputs(Figure 2.2), the dc common is bussed on the block. and the current is sourced from the field device. The sourcing field device switches the hot side of the power supply bus causing current to flow through the sourcing device to the sinking input on the block.


Figure 2.2
Sinking Input Example

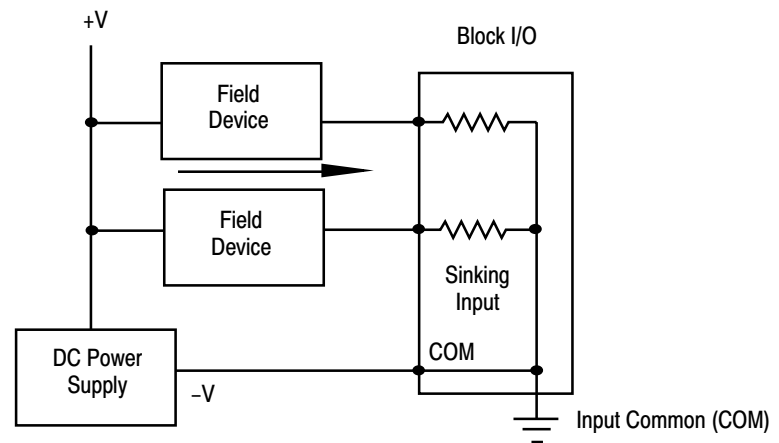

10826-1

Sourcing outputs(Figure 2.3) have the power bussed in the block. When the output is on, current is supplied to the field control device, which sinks the current. The field circuit and the equipment remain at ground potential until the output is turned on.

Figure 2.3
Sourcing Output Example

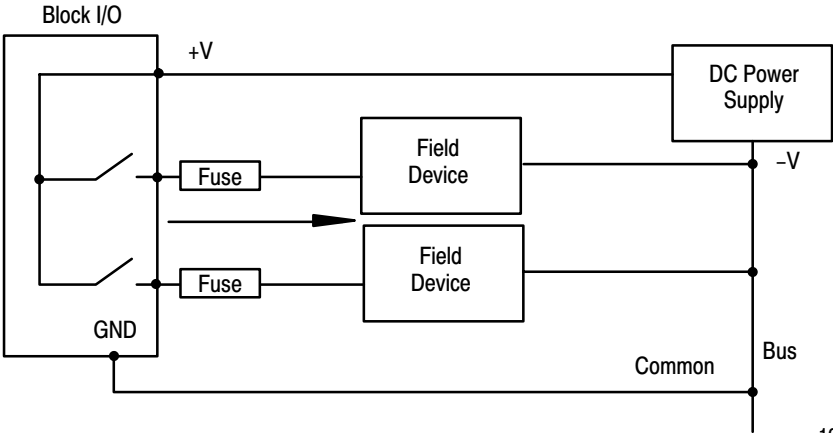


10827-I

You connect the block I/O to your remote I/O link as you would any other device (Figure 2.4). The block looks like a 1/4 I/O rack to the processor, and uses 2 words of input image table memory and 2 words of output image table memory. The block is addressed directly on the remote I/O link.

Block I/O functions exactly like any Allen-Bradley remote I/O product. Input and output data is scanned asynchronously and transferred back and forth between the block and the controller input and output image table.

Figure 2.4
Block I/O Connection in a PLC System

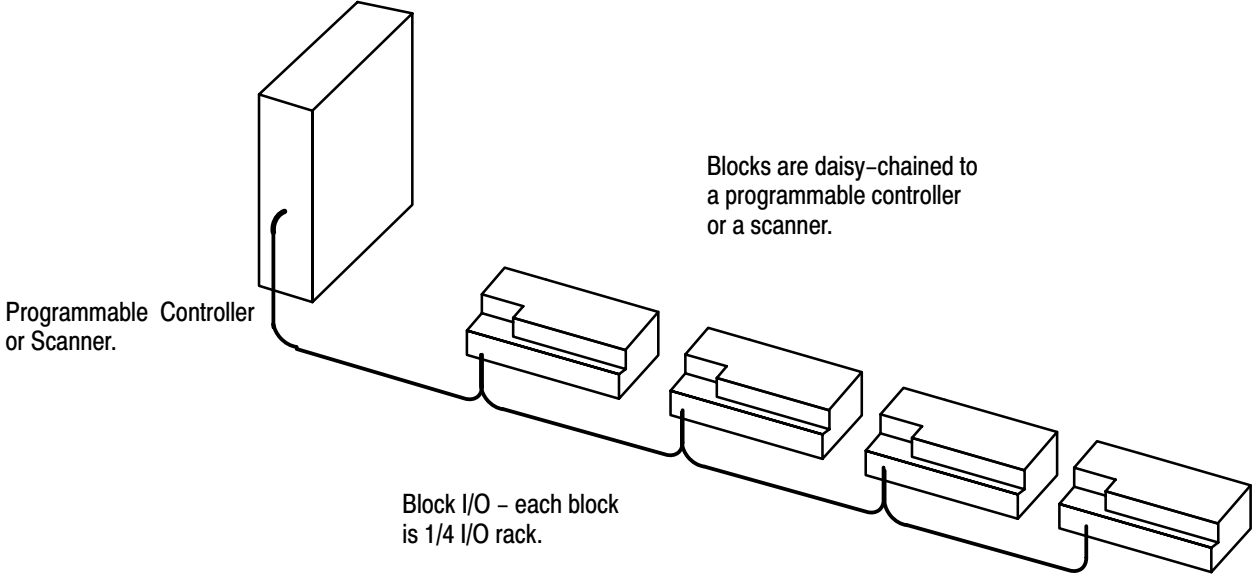

Blocks are daisy-chained to a programmable controller or a scanner.

Block I/O – each block is 1/4 I/O rack.

10828-I

Summary

In this chapter you learned what block I/O is, its features and how it functions.

Installing Block I/O

Chapter Objectives

In this chapter you will learn how to mount the block, connect the remote I/O link, connect the input and output wiring to the block, and terminate the remote I/O link.

Pre-installation Considerations

Before installation, you must determine:

- the number of blocks desired
- the total distance of the installation
- transmission rate desired
- if external fuses are required

Refer to Table 3.A for acceptable combinations.

Table 3.A
Acceptable Combinations of Processor and Block I/O

When using	and	Maximum Capacity	Baud Rate Used	Maximum Network Distance
PLC-2 family	Any scanner module	16 blocks with 150 ohm terminator	57.6K	10,000 cable-feet
		28 blocks with 82 ohm terminator	57.6K	10,000 cable-feet
		28 blocks with 82 ohm terminator	115.2K	5,000 cable-feet
PLC-3 family	1775-S4A, -S4B, -S5, -SR or -SR5 module	16 blocks with 150 ohm terminator	57.6K	10,000 cable-feet
		32 blocks with 82 ohm terminator	57.6K	10,000 cable-feet
		32 blocks with 82 ohm terminator	115.2K	5,000 cable-feet
		32 blocks with 82 ohm terminator	230.4K	2,500 cable-feet
PLC-5 family	Note: PLC-5250 requires a 5150-RS remote scanner	16 blocks with 150 ohm terminator	57.6K	10,000 cable-feet
		32 blocks with 82 ohm terminator	57.6K	10,000 cable-feet
		32 blocks with 82 ohm terminator	115.2K	5,000 cable-feet
		32 blocks with 82 ohm terminator	230.4K	2,500 cable-feet

TABLE CONTINUED ON NEXT PAGE


When using	and	Maximum Capacity	Baud Rate Used	Maximum Network Distance
SLC-5/01 Controller	1747-DSN Scanner module*	7 blocks	230.4K	2,500 cable-feet
SLC-5/02 Controller	1747-DSN Scanner module*	30 blocks	230.4K	2,500 cable-feet
SLC-5/02 Controller	1747-SN Remote I/O Scanner Module*	16 blocks	57.6K 115.2K 230.4K	10,000 cable-feet 5,000 cable-feet 2,500 cable-feet

* The DH-485 network, which operates independent of the RIO/DIO network, supports up to 30 DH-485 nodes (blocks or 1747-AIC isolated couplers). The maximum DH-485 network distance is 4,000 cable-feet.

Installing the Block I/O


Mounting dimensions for the block I/O module are shown in Figure 3.1. Mount the blocks horizontally with a minimum of 2" between blocks. This air gap is necessary to maintain proper cooling air flow through the block.

Figure 3.1
Mounting Dimensions for the Block I/O Module (Cat. No. 1791-IOBA and -IOBB)

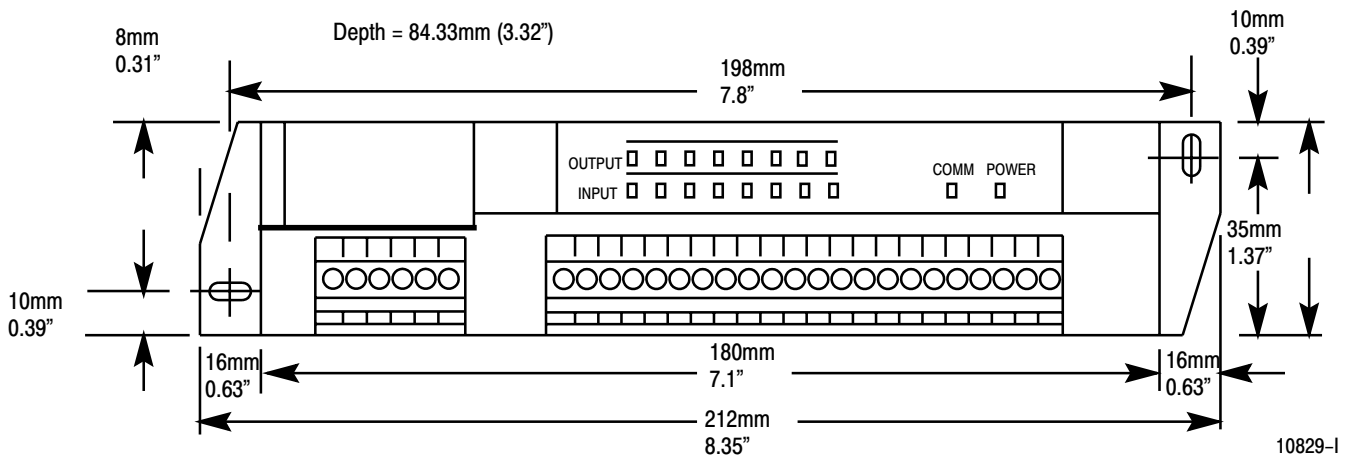

The operating temperature in the air gap between block I/O modules must not exceed 55°C (151°F). The dimensions of the air gap required are shown in Figure 3.2.

Figure 3.2
Clearance Required for Block I/O Modules

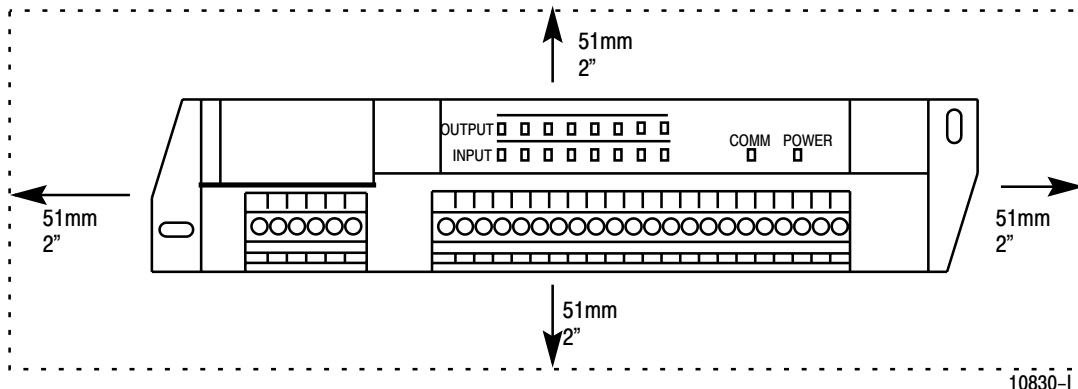

Connecting Wiring

Connections to the block I/O module are made to the removable connectors which plug into the front of the block. The connector blocks are keyed to prevent incorrect insertion.

Wiring for the block is shown in Figure 3.3 and Figure 3.4. Remote I/O link wiring connections are shown in Figure 3.5.

Figure 3.3
Input and Output Connections for the 1791-IOBA

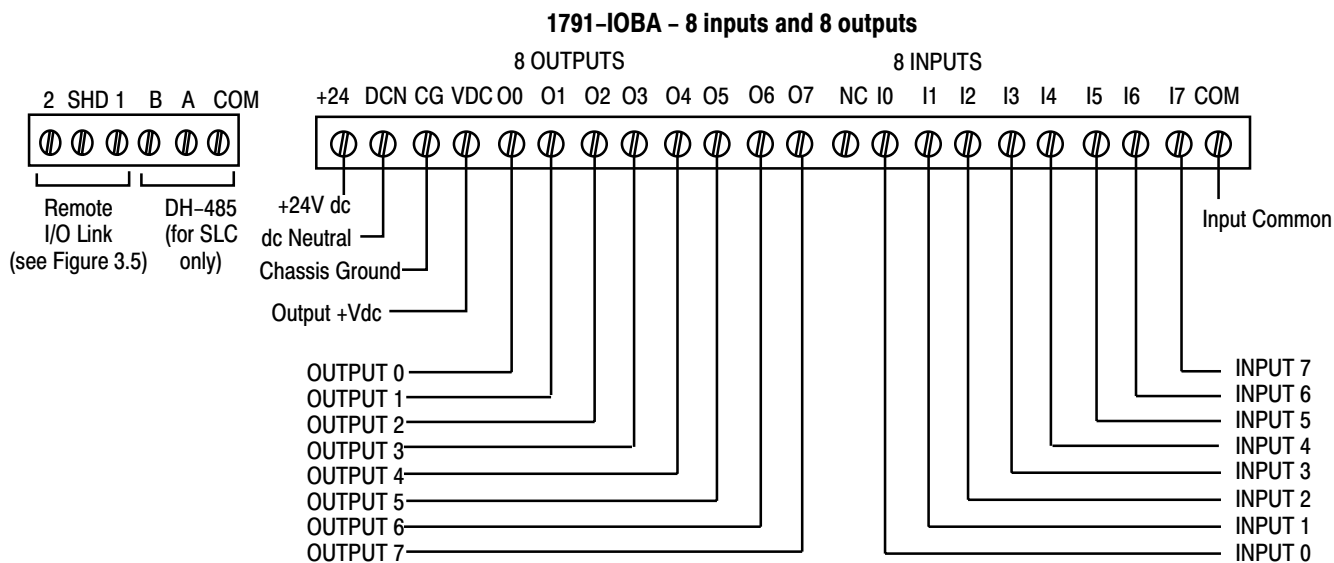


Figure 3.4
Input/Output Wiring Connections for the 1791-IOBB

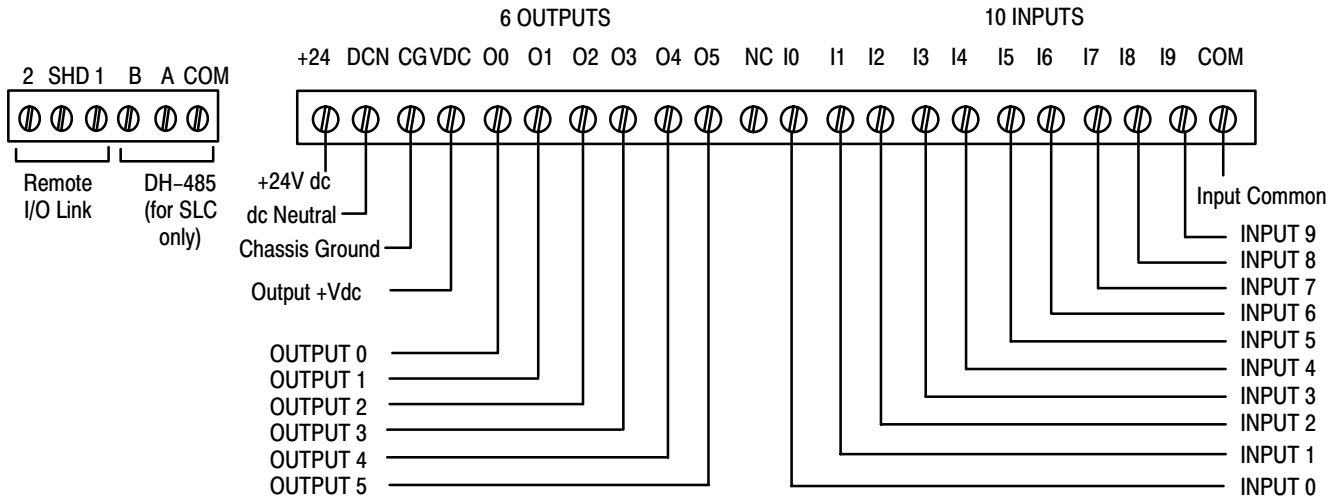


Table 3.B
Wiring Block Designations

Connector	1791-IOBA		1791-IOBB	
	Designation	Description	Designation	Description
Remote I/O Connector	1	Blue wire - RIO	1	Blue wire - RIO
	2	Clear wire - RIO	2	Clear wire - RIO
	SHD	Shield - RIO	SHD	Shield - RIO
	A	DH-485 A	A	DH-485 A
	B	DH-485 B	B	DH-485 B
	COM	DH-485 Common	COM	DH-485 Common
I/O Connector	+24	+24V dc	+24	+24V dc
	DCN	dc neutral	DCN	dc neutral
	CG	Chassis ground	CG	Chassis ground
	VDC	Output supply	VDC	Output supply
	O0 thru O7	Output 0 thru 7	O0 thru O5	Output 0 thru 5
	NC	No connection	NC	No connection
	I0 thru I7	Input 0 thru 7	I0 thru I7	Input 0 thru 9
	COM	Input common	COM	Input common

Power Supply Requirements

An external 24V dc power supply is required to power the block. Total current required to power the block is equal to 200mA plus an inrush of 5.5A for 10µsec for each block. The supply must be able to source an additional 100mA plus an inrush current of 400mA when a peripheral is connected.

In addition, the external power supply should have current limiting capabilities. The voltage range must not exceed 20.5–27.6V dc.


Wiring Requirements

Wiring cable requirements are shown in the following table.

Table 3.C
Acceptable Wiring Cables for Block I/O Connection

Use	Cable Type	With
Remote I/O Link or DIO Link	Belden 9463	PLC-2, PLC-3, PLC-5 family programmable controllers and SLC controllers
DH-485 Data Link	Belden 9842	SLC controllers only
Input and Output wiring	Up to 14AWG Stranded with 3/64 inch insulation	All

Figure 3.5
Remote I/O Link Wiring

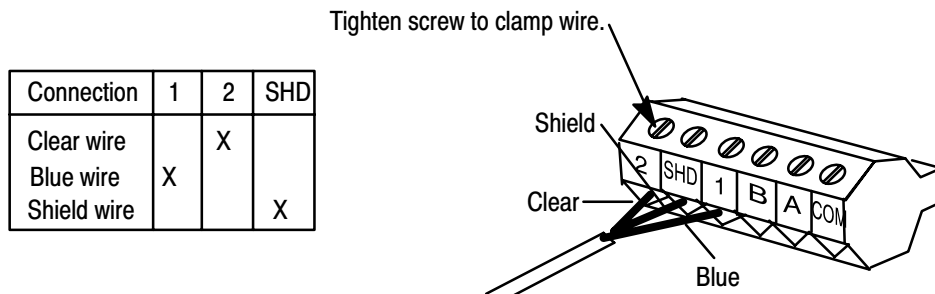

10832-I

**Remote I/O Link or
Distributed I/O Link Wiring**

Blocks must be wired in series as shown in Figure 3.6 or Figure 3.7. Do not attempt to wire any block in parallel.

The number of blocks used depends not only on the user requirements but also on the system used. Refer to Table 3.A for maximum block usage for individual systems.

Figure 3.6
Series Connection for Block I/O Using PLC-2, PLC-3 or PLC-5 Family Programmable Controllers

To Programmable Controller
or I/O Scanner Module


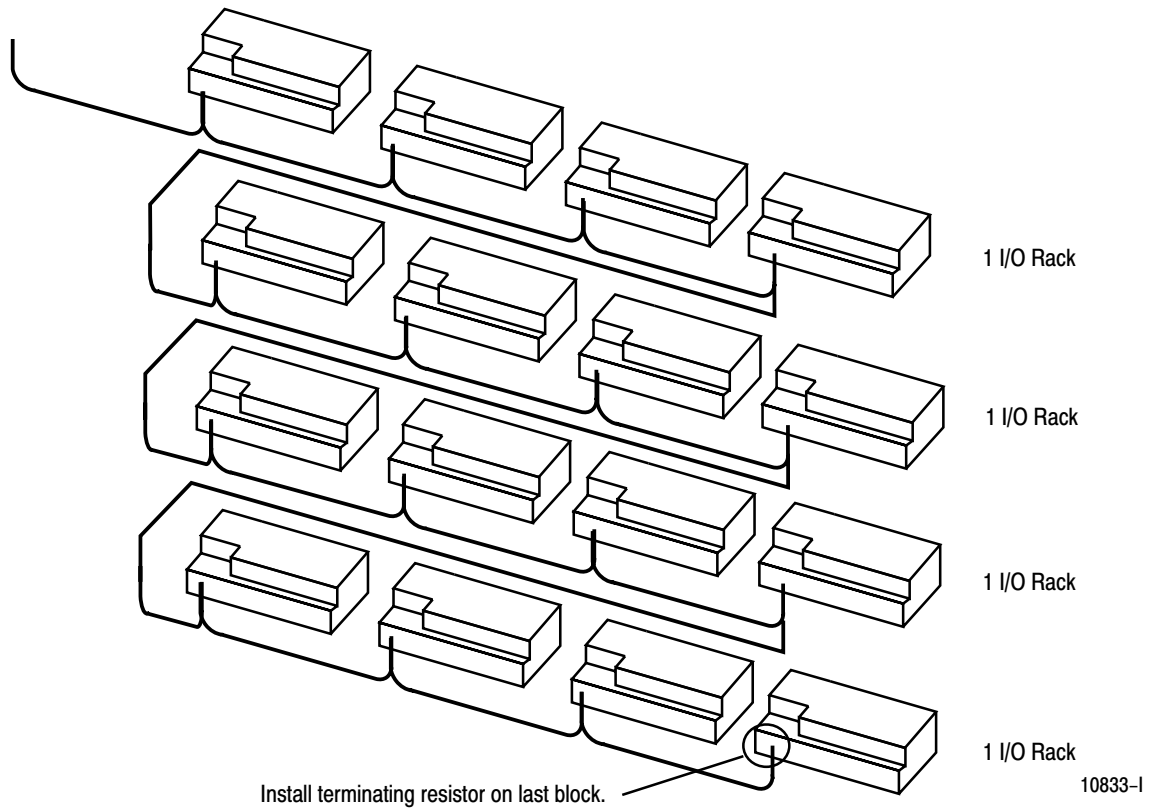


Figure 3.7
Series Configurations for Block I/O Using the SLC Programmable Controller

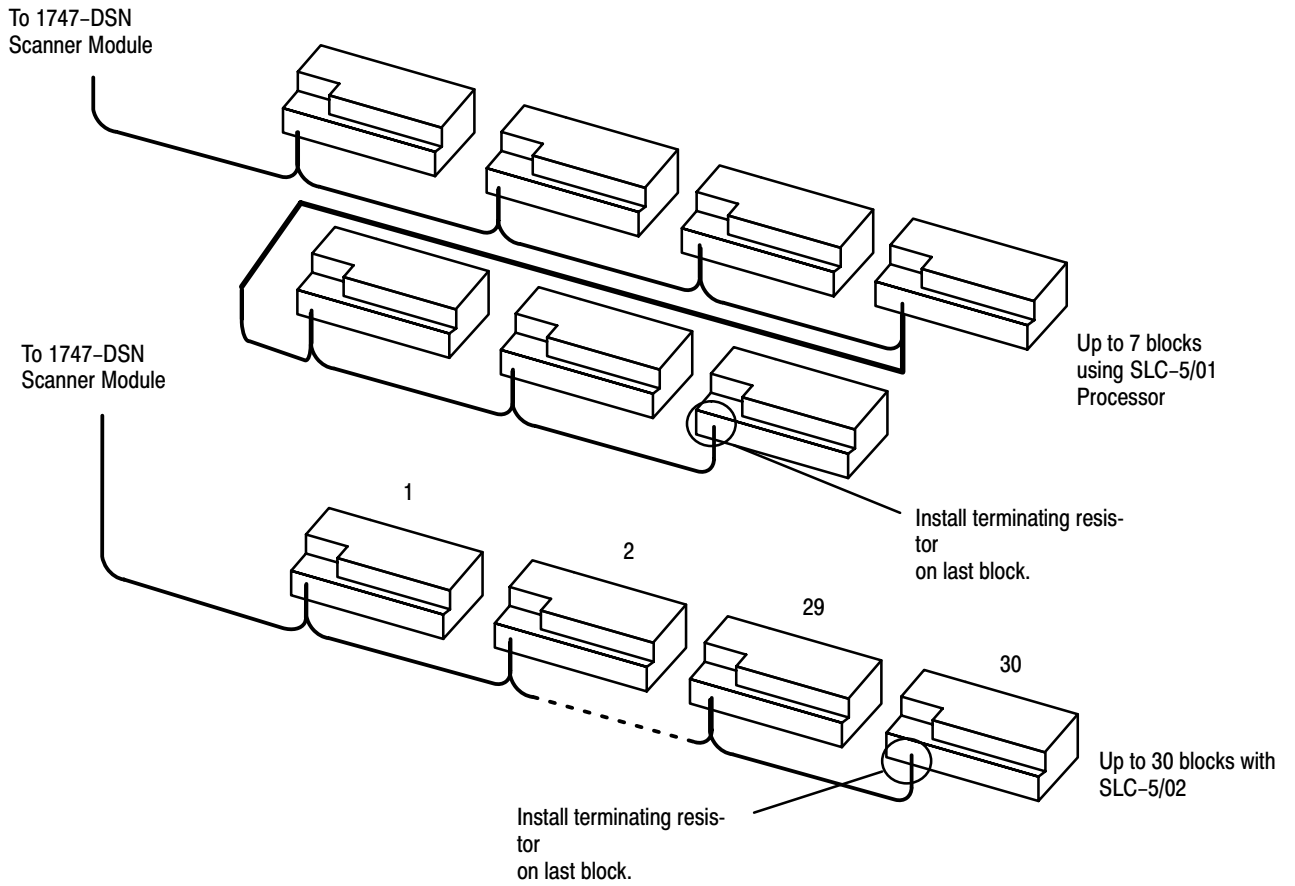


10834-1

Termination Resistor

A termination resistor must be installed on the last block in the series. Connect the resistor as shown in Figure 3.8. Use the resistor as identified in Table 3.D.

Figure 3.8
Installing the Termination Resistor

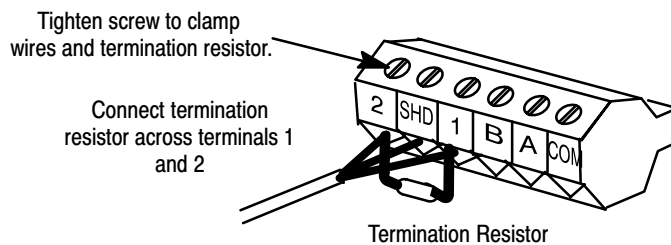

10835-1

Table 3.D
Terminator Requirements

System	Terminator Resistor
PLC-2, PLC-3, PLC-5 family, SLC 500 family	150 ohm - 57.6K and 115.2K baud 82 ohm - 230.4K baud

Extended Node Capability

If this is the last remote I/O adapter on the remote I/O link in a PLC system, you must use a terminating resistor to terminate both ends of the remote I/O link (scanner end and last block end). The size of the terminator is determined by the system configuration.

Older configurations can use a 150 ohm resistor at both ends. With newer devices that can support it, you can use an 82 ohm termination resistor at both ends. The 82 ohm terminators provide "extended node" capability which allows you to have up to 32 physical devices on the remote I/O link. (The number of logical racks capable of being addressed by the scanner is not affected.)



CAUTION: Devices that are operating at 230.4K baud must have 82 ohm terminators in place for proper operation.

Compatibility of 1771 I/O Products with Extended Node Numbers

Certain products are not compatible with extended node capabilities obtained with the use of 82 ohm terminators. The following table lists those products that are **not** compatible.

Device	Series
Scanners - 1771-SN	All
1772-SD	All
1772-SD2	Series A
1775-SR	All
1775-S4A	All
1775-S4B	All
Adapters - 1771-AS	All
1771-ASB	Series A
1771-DCM	All
Miscellaneous - 1771-AF	All
1771-AF1	All

Summary

In this chapter you learned how to physically mount your block I/O, make power wiring connections, make the input/output wiring connections to the block, and terminate the remote I/O link.

Configuring Your Block I/O for PLC Family Programmable Controllers

Chapter Objectives

In this chapter you will learn how to configure your block I/O when used with PLC family programmable controllers. This includes the following:

- setting the configuration switches
- addressing the block I/O


Setting the Configuration Switches

Each block I/O module has two 6-position DIP switches for setting:

- starting I/O group
- I/O rack number
- transmission (baud) rate
- last chassis
- last state
- DH-485 terminator

These switches are accessible by opening the door on the left side of the module (Figure 4.1).

Figure 4.1
Switch Settings

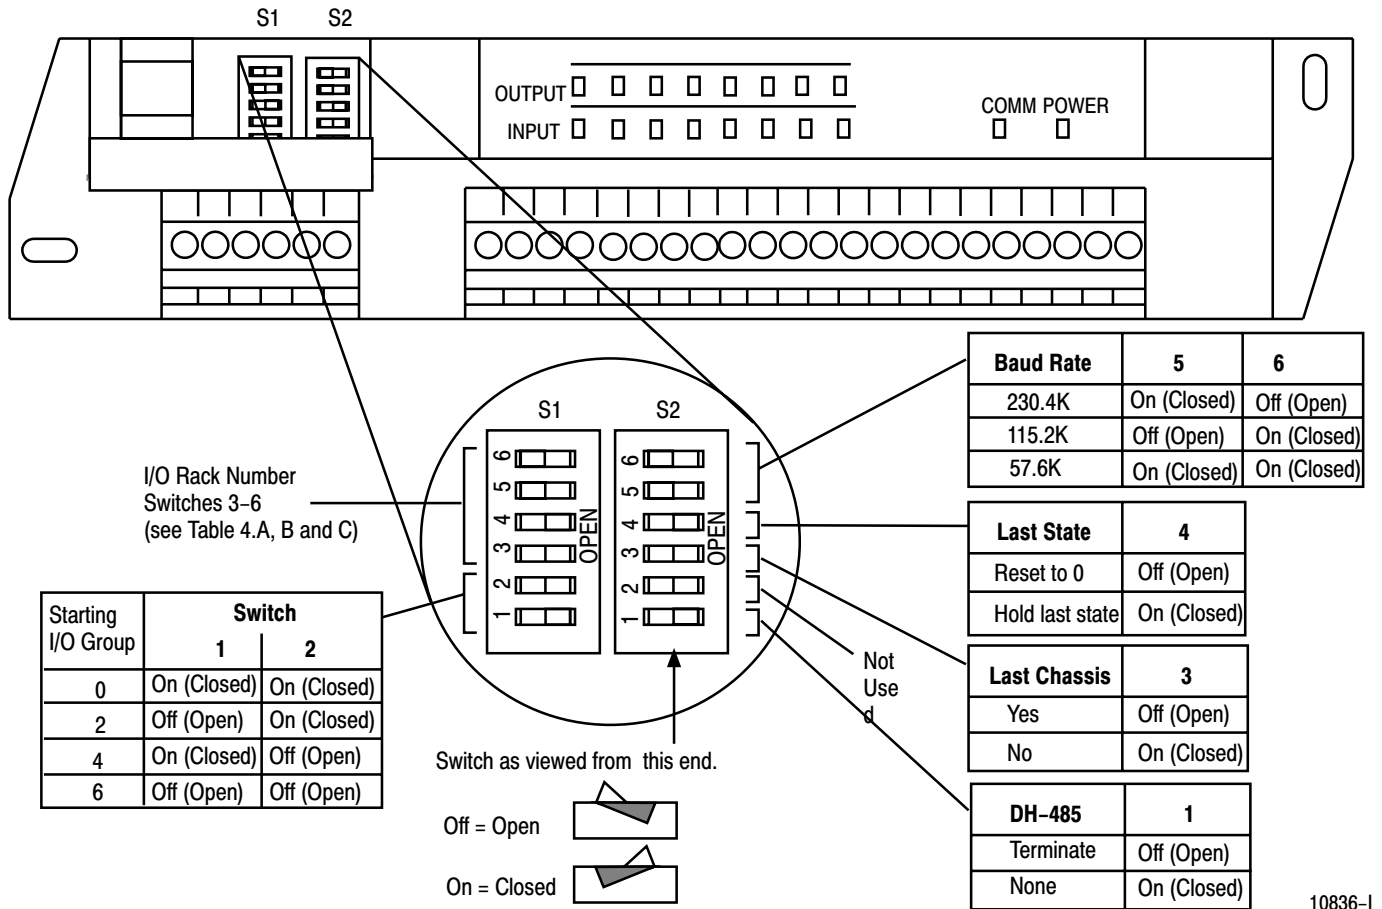

10836-1

Table 4.A
I/O Rack Number and First I/O Group Switch Selections for PLC-2 Family Processors

I/O Rack Number	Switch Number			
	3	4	5	6
1	On (Closed)	On (Closed)	On (Closed)	On (Closed)
2	Off (Open)	On (Closed)	On (Closed)	On (Closed)
3	On (Closed)	Off (Open)	On (Closed)	On (Closed)
4	Off (Open)	Off (Open)	On (Closed)	On (Closed)
5	On (Closed)	On (Closed)	Off (Open)	On (Closed)
6	Off (Open)	On (Closed)	Off (Open)	On (Closed)
7	On (Closed)	Off (Open)	Off (Open)	On (Closed)

Table 4.B
PLC-3 and PLC-5/250 I/O Rack Addressing


I/O Rack Number	Switch Number				I/O Rack Number	Switch Number			
	3	4	5	6		3	4	5	6
0	On (Closed)	On (Closed)	On (Closed)	On (Closed)	10	On (Closed)	On (Closed)	On (Closed)	Off (Open)
1	Off (Open)	On (Closed)	On (Closed)	On (Closed)	11	Off (Open)	On (Closed)	On (Closed)	Off (Open)
2	On (Closed)	Off (Open)	On (Closed)	On (Closed)	12	On (Closed)	Off (Open)	On (Closed)	Off (Open)
3	Off (Open)	Off (Open)	On (Closed)	On (Closed)	13	Off (Open)	Off (Open)	On (Closed)	Off (Open)
4	On (Closed)	On (Closed)	Off (Open)	On (Closed)	14	On (Closed)	On (Closed)	Off (Open)	Off (Open)
5	Off (Open)	On (Closed)	Off (Open)	On (Closed)	15	Off (Open)	On (Closed)	Off (Open)	Off (Open)
6	On (Closed)	Off (Open)	Off (Open)	On (Closed)	16	On (Closed)	Off (Open)	Off (Open)	Off (Open)
7	Off (Open)	Off (Open)	Off (Open)	On (Closed)	17	Off (Open)	Off (Open)	Off (Open)	Off (Open)

Table 4.C
PLC-5 I/O Rack Addressing

I/O Rack Number	Switch Number				I/O Rack Number	Switch Number			
	3	4	5	6		3	4	5	6
01	Off (Open)	On (Closed)	On (Closed)	On (Closed)	10	On (Closed)	On (Closed)	On (Closed)	Off (Open)
02	On (Closed)	Off (Open)	On (Closed)	On (Closed)	11	Off (Open)	On (Closed)	On (Closed)	Off (Open)
03	Off (Open)	Off (Open)	On (Closed)	On (Closed)	12	On (Closed)	Off (Open)	On (Closed)	Off (Open)
PLC-5/15 processors can scan racks 01-03					13	Off (Open)	Off (Open)	On (Closed)	Off (Open)
04	On (Closed)	On (Closed)	Off (Open)	On (Closed)	14	On (Closed)	On (Closed)	Off (Open)	Off (Open)
05	Off (Open)	On (Closed)	Off (Open)	On (Closed)	15	Off (Open)	On (Closed)	Off (Open)	Off (Open)
06	On (Closed)	Off (Open)	Off (Open)	On (Closed)	16	On (Closed)	Off (Open)	Off (Open)	Off (Open)
07	Off (Open)	Off (Open)	Off (Open)	On (Closed)	17	Off (Open)	Off (Open)	Off (Open)	Off (Open)
PLC-5/25 processors can scan racks 01-07					PLC-5/40 and 5/60 processors can scan racks 01-17				


Each block uses 2 words of output image table memory and 2 words of input image table memory. Each block occupies 1/4 rack of data table, with 4 blocks comprising 1 logical rack. Image table usage for one assigned rack number is shown in Figure 4.2 (IOBA) and Figure 4.4 (IOBB). An example of image table usage is shown in Figure 4.3 (IOBA) and Figure 4.5 (IOBB).

Figure 4.2
I/O Image Table for One Assigned Rack Number with 1791-IOBA

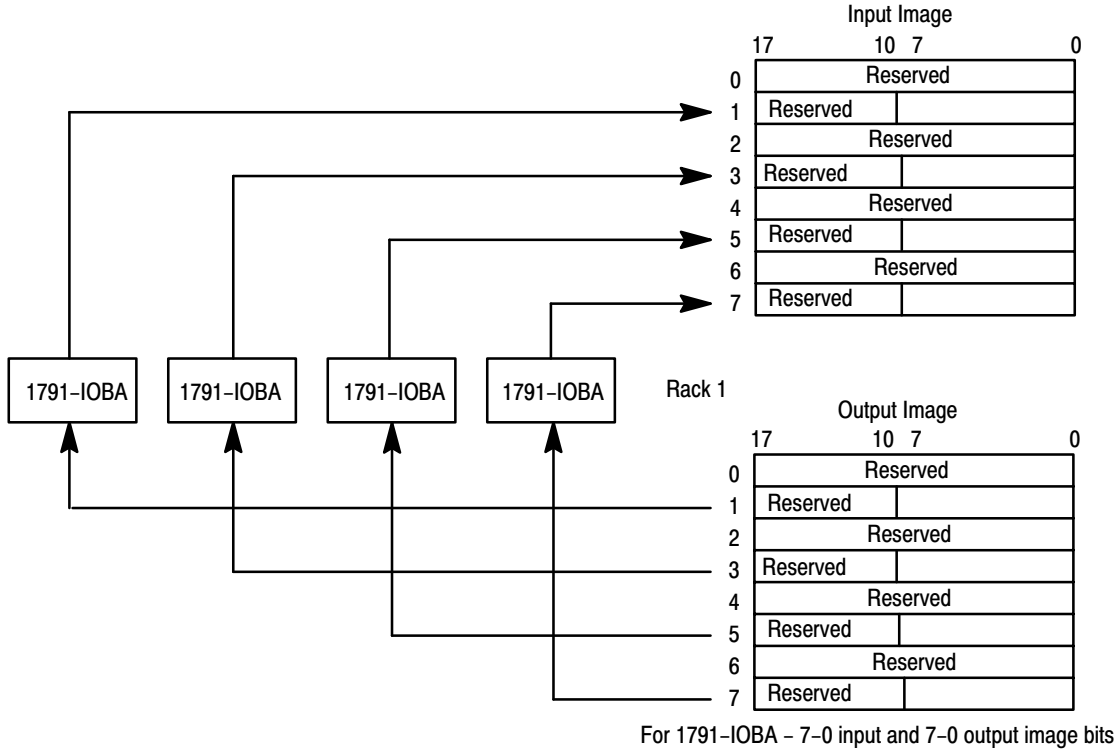


10837-I

Figure 4.3
Input Table Usage Example for One Starting I/O Group with 1791-IOBA

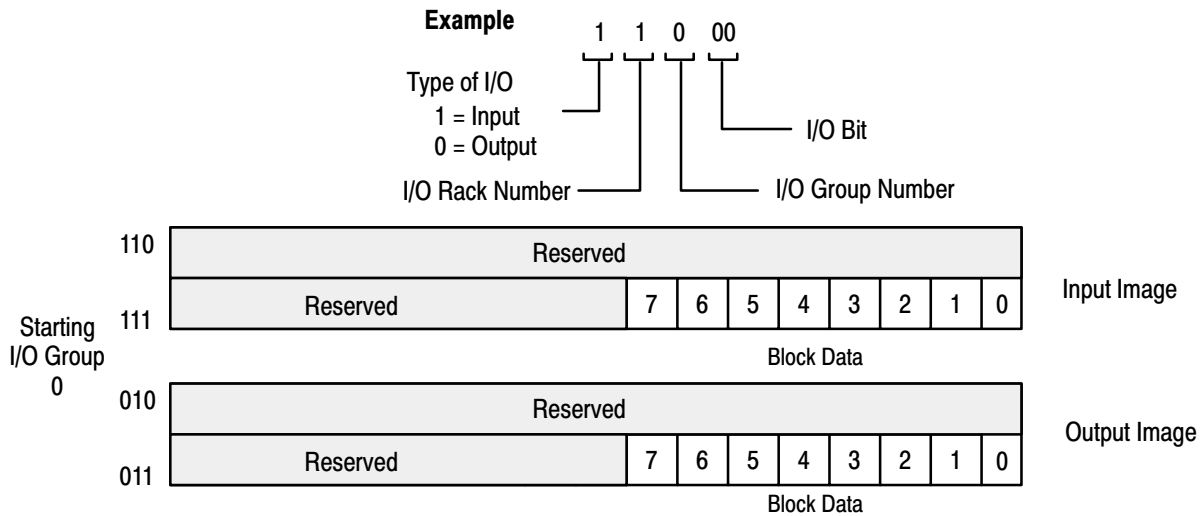


10838-I

Figure 4.4
I/O Image Table for One Assigned Rack Number with 1791-IOBB

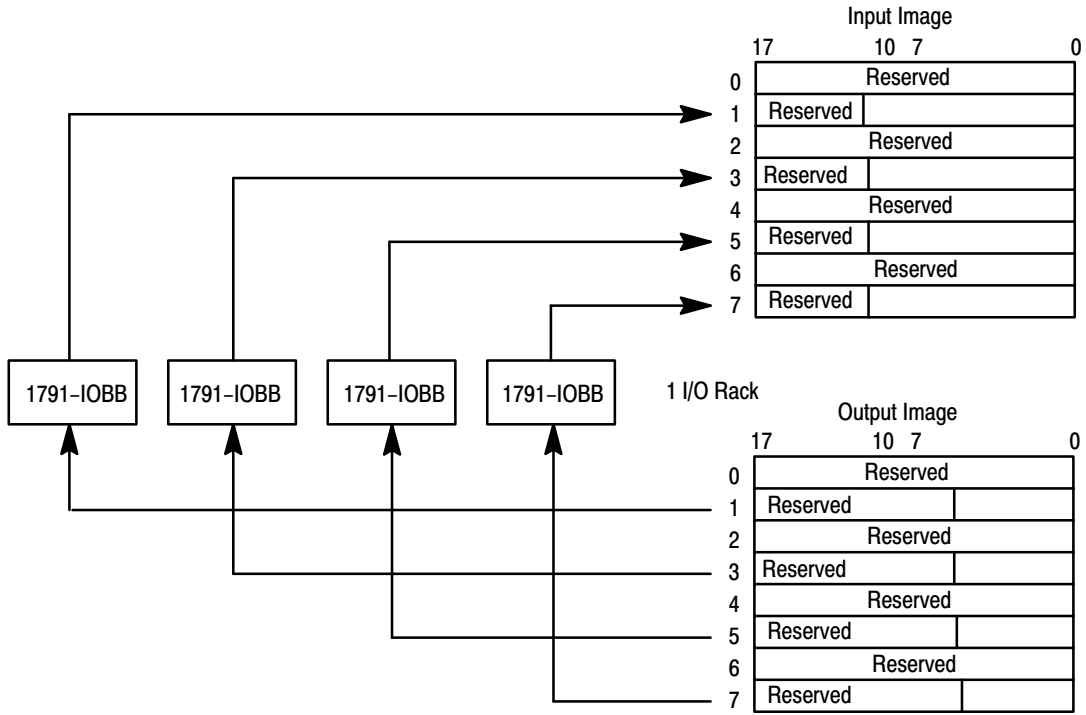

For 1791-IOBB – 11–0 input and 5–0 output image bits

Figure 4.5
Input Table Usage Example for One Starting I/O Group with 1791-IOBB

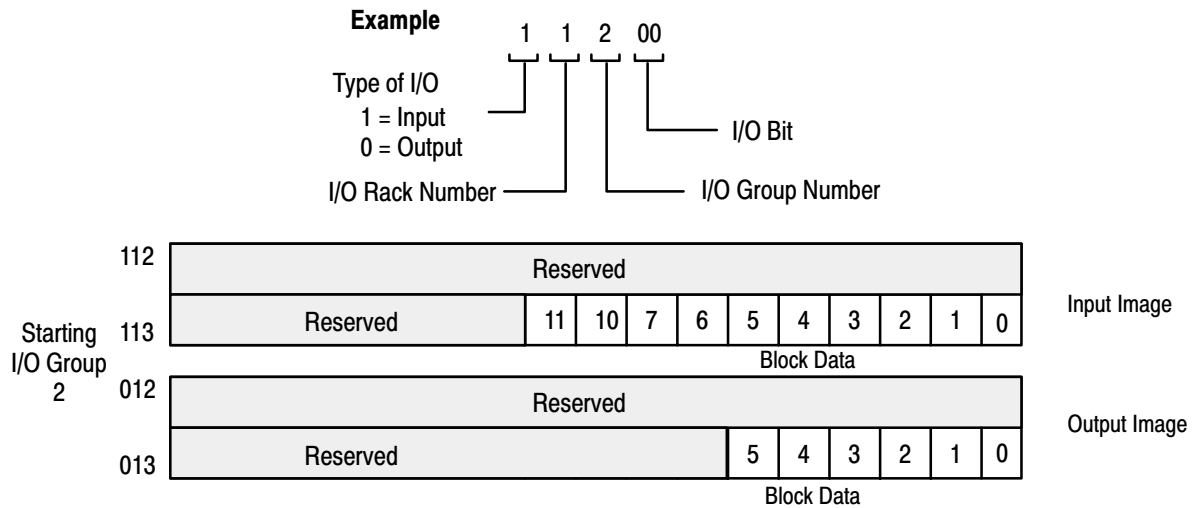

Chapter 4

Configuring Your Block I/O for PLC Family Programmable Controllers

Summary

In this chapter you learned how to set the configuration switches and address the block I/O. You also learned about input and output image use in memory.

Configuring Your Block I/O for SLC Controllers

Chapter Objectives

In this chapter you will learn to identify block I/O switches and their position.

Refer to publication 1747–ND012, Distributed I/O Scanner and Block, for complete information on switch settings and addressing of the block I/O.

Setting the Configuration Switches


Each block I/O module has two 6–position DIP switches for setting:

- block address
- transmission (baud) rate
- last state or reset
- DH–485 termination

These switches are accessible by opening the door on the left side of the module (Figure 5.1).

Chapter 5
Configuring Your Block I/O for
SLC Controllers

Figure 5.1
Switch Settings for Block I/O when used with the SLC 500 Controller

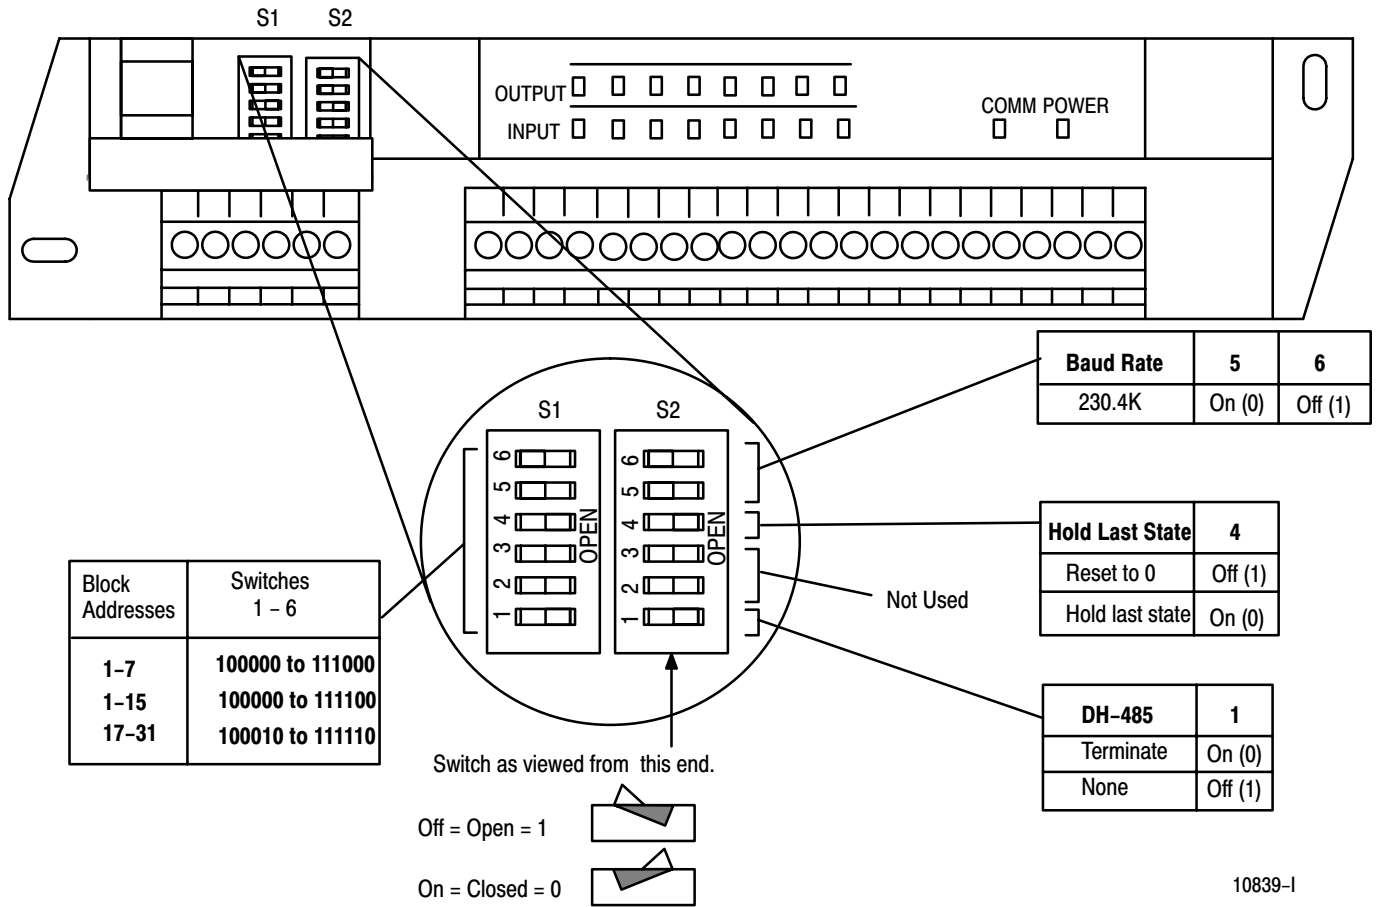

10839-1

Table 5.A
Block Addresses for Block I/O Used with SLC 500 Controllers

Block Address	Switch S1 Positions						Block Address	Switch S1 Positions					
	1	2	3	4	5	6		1	2	3	4	5	6
1	Off (1)	On (0)	On (0)	On (0)	On (0)	On (0)	17	Off (1)	On (0)	On (0)	On (0)	Off (1)	On (0)
2	On (0)	Off (1)	On (0)	On (0)	On (0)	On (0)	18	On (0)	Off (1)	On (0)	On (0)	Off (1)	On (0)
3	Off (1)	Off (1)	On (0)	On (0)	On (0)	On (0)	19	Off (1)	Off (1)	On (0)	On (0)	Off (1)	On (0)
4	On (0)	On (0)	Off (1)	On (0)	On (0)	On (0)	20	On (0)	On (0)	Off (1)	On (0)	Off (1)	On (0)
5	Off (1)	On (0)	Off (1)	On (0)	On (0)	On (0)	21	Off (1)	On (0)	Off (1)	On (0)	Off (1)	On (0)
6	On (0)	Off (1)	Off (1)	On (0)	On (0)	On (0)	22	On (0)	Off (1)	Off (1)	On (0)	Off (1)	On (0)
7	Off (1)	Off (1)	Off (1)	On (0)	On (0)	On (0)	23	Off (1)	Off (1)	Off (1)	On (0)	Off (1)	On (0)
8	On (0)	On (0)	On (0)	Off (1)	On (0)	On (0)	24	On (0)	On (0)	On (0)	Off (1)	Off (1)	On (0)
9	Off (1)	On (0)	On (0)	Off (1)	On (0)	On (0)	25	Off (1)	On (0)	On (0)	Off (1)	Off (1)	On (0)
10	On (0)	Off (1)	On (0)	Off (1)	On (0)	On (0)	26	On (0)	Off (1)	On (0)	Off (1)	Off (1)	On (0)
11	Off (1)	Off (1)	On (0)	Off (1)	On (0)	On (0)	27	Off (1)	Off (1)	On (0)	Off (1)	Off (1)	On (0)
12	On (0)	On (0)	Off (1)	Off (1)	On (0)	On (0)	28	On (0)	On (0)	Off (1)	Off (1)	Off (1)	On (0)
13	Off (1)	On (0)	Off (1)	Off (1)	On (0)	On (0)	29	Off (1)	On (0)	Off (1)	Off (1)	Off (1)	On (0)
14	On (0)	Off (1)	Off (1)	Off (1)	On (0)	On (0)	30	On (0)	Off (1)	Off (1)	Off (1)	Off (1)	On (0)
15	Off (1)	Off (1)	Off (1)	Off (1)	On (0)	On (0)	31	Off (1)	Off (1)	Off (1)	Off (1)	Off (1)	On (0)
16	Invalid												

Addressing the Blocks Using SLC Controllers

The SLC controller communicates with the block I/O using a Distributed I/O Scanner module (cat. no. 1747–DSN). The scanner can address up to 7 blocks using an SLC 5/01 Controller, and up to 30 blocks using an SLC 5/02 Controller. When used with the Distributed I/O Scanner module, block addresses must be contiguous. The actual number of blocks to which the scanner module will communicate is determined when programming the SLC controller.

Refer to the 1747–DSN Scanner module user’s manual for more information.

Summary

In this chapter you learned how to identify and set the configuration switches on the block.

Troubleshooting

Chapter Objectives

In this chapter you will learn about the LED indicators on the block I/O module, and how to use them to troubleshoot the unit.


LED Indicators

Each block I/O module has LED indicators (Figure 6.1) which provide indication of specific functions. Each module has the following:

- green communication indicator – indicates whether communication is occurring between processor or scanner and the block.
- red power indicator – indicates if power is applied to module and internal hardware status
- 16 I/O status indicators (8 input–8 output or 10 input–6 output) – reflect the state of the individual inputs and outputs (on or off)

The location of the indicators is shown in Figure 6.1. Refer to Table 6.A for status indications reported by the indicators.

Figure 6.1
Indicators on the Block I/O Module (1791-IOBA shown)

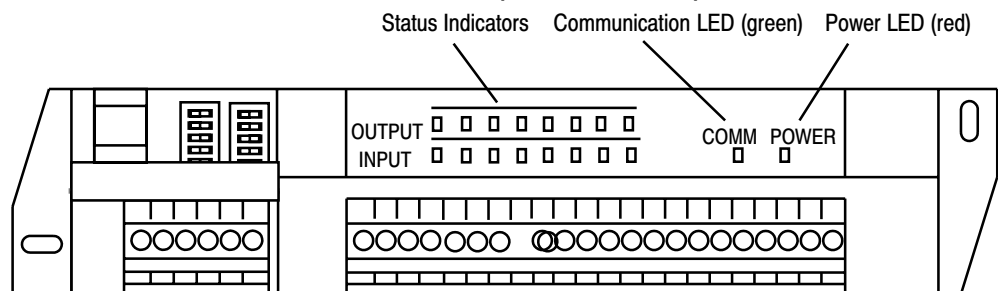

10846-1

Table 6.A
Troubleshooting Chart

Indication	Probable Cause	Corrective Action
Green COMM LED on Red POWER LED on I/O status LED on/off	Normal indication	None required
Red POWER LED flashing	Block failed self-test, or a major fault is detected.	Cycle power to the block. If problem persists, replace the block.
Red POWER LED off	No 24V dc power connected, or hardware fault.	Check 24V dc power to block
Green COMM LED off	No communication with processor, scanner etc.	Check that power LED is on. Make sure that proper number of blocks are configured.
Green COMM LED flashing	Reset command (or output disable bit for SLC) has been issued by processor or scanner.	Check program. Correct as necessary.
	SLC or programmable controller not in run mode.	Place in run mode.

Summary

In this chapter you learned about the LED indicators and how to use them to troubleshoot the block I/O module.

Specifications

General Specifications	
External power	200mA @ 24V dc; initial surge 5.5A for 10 μ sec
Environmental Conditions Operating Temperature Storage Temperature Relative Humidity	32 to 131°F (0 to 55°C) -40 to 185°F (-40 to 85°C) 5 to 95% noncondensing
Conductors Wire Size	14 gauge stranded (maximum) 3/64 inch insulation (maximum)
Power Dissipation	IOBA: 13.42 Watts (maximum); 9.46 Watts (typical) IOBB: 12.39 Watts (maximum); 8.73 Watts (typical)
Thermal Dissipation	IOBA: 45.9 BTU/hr (maximum); 32.4 BTU/hr (typical) IOBB: 42.4 BTU/hr (maximum); 29.8 BTU/hr (typical)
Remote I/O Isolation	850V dc (transformer) for 1 second
DH-485 Isolation	850V dc (optocoupler) for 1 second
Interconnect cable length	RIO: PLC 57.6K 10,000 cable-feet 115.2K 5,000 cable-feet 230.4K 2,500 cable-feet SLC 230.4K 2,500 cable-feet DH-485 4000 ft (1219 meters)
Cable requirements	RIO/DIO - Belden 9463 DH-485 - Belden 9842
1791-IOBA Input Specifications	
Number of Inputs	8
Input type	Sinking
Input voltage range	20.5 to 27.6V dc
On-state input current	6.3mA (minimum)
On-state input voltage	20.5V dc (minimum)
Off-state voltage	5.1V dc (maximum)
Off-state current	1mA dc (maximum)
Turn On time	1.5msec (maximum)
Turn Off time	1.0msec (maximum)

1791-IOBA Output Specifications	
Number of outputs	8
Output type	Source
Rated output voltage	10 to 30V dc
Maximum on-state voltage drop	1.5V dc @ 25°C
Maximum on-state current	0.5A
Minimum on-state current	15mA
Surge Current	3.0A for 10ms (maximum), 1 pulse per second max.
Off-state voltage	30V dc (maximum)
Off-state leakage current	0.5mA (maximum)
Turn on time	0.5ms (maximum)
Turn off time	1ms (maximum)

1791-IOBB Input Specifications	
Number of Inputs	10
Input type	Sinking
Input voltage	20.5 to 27.6V dc
On-state input voltage	20.5V dc (minimum)
On-state input current	6.3mA (minimum)
Off-state voltage	5.1V dc
Off-state current	1mA dc
Turn On time	1.5msec (maximum)
Turn Off time	1.0msec (maximum)

1791-IOBB Output Specifications

Number of outputs	6
Output type	Source
Rated output voltage	10 to 30V dc
Maximum on-state voltage drop	1.5V dc @ 25°C
Maximum on-state current	0.5A
Minimum on-state current	15mA
Surge Current (maximum)	3.0A for 10ms (max), 1 pulse per second max.
Off-state voltage	30V dc (maximum)
Off-state leakage current	0.5mA (maximum)
Turn on time	0.5ms (maximum)
Turn off time	1ms (maximum)

B

block addressing, SLC, [5-3](#)

C

combinations, acceptable processor and block I/O, [3-1](#)

compatibility, extended node numbers, [3-9](#)

configuration switches, [4-1](#)

SLC, [5-1](#)

connecting block I/O, in a PLC system, [2-3](#)

connecting wiring, [3-3](#)

1791-IOBA, [3-3](#)

1791-IOBB, [3-4](#)

D

description, [2-1](#)

DH-485 port, [2-2](#)

E

extended node capability, [3-8](#)

F

features, [2-1](#)

I

I/O rack addressing

PLC-2 family, [4-2](#)

PLC-3 and PLC-5/250, [4-3](#)

PLC-5, [4-3](#)

image table usage, [4-3](#)

1791-IOBA, [4-4](#)

1791-IOBB, [4-5](#)

L

LED indicators, [6-1](#)

M

mounting dimensions, [3-2](#)

P

power supply requirements, [3-5](#)

R

related publications, [1-2](#)

remote I/O link connector, [2-2](#)

remote I/O link wiring, [3-6](#)

S

series connections

PLC-2, PLC-3 and PLC-5, [3-6](#)

SLC, [3-7](#)

sinking inputs, [2-2](#)

description, [2-2](#)

sourcing outputs, [2-2](#)

description, [2-2](#)

specifications, [A-1](#)

status indicators, [2-2](#)

switch assemblies, [2-2](#)

T

termination resistor, [3-8](#)

troubleshooting chart, [6-2](#)

types of block I/O, [2-1](#)

W

wiring cable, [3-5](#)

wiring connections, definitions, [3-4](#)



ALLEN-BRADLEY

A ROCKWELL INTERNATIONAL COMPANY

As a subsidiary of Rockwell International, one of the world's largest technology companies — Allen-Bradley meets today's challenges of industrial automation with over 85 years of practical plant-floor experience. More than 13,000 employees throughout the world design, manufacture and apply a wide range of control and automation products and supporting services to help our customers continuously improve quality, productivity and time to market. These products and services not only control individual machines but integrate the manufacturing process, while providing access to vital plant floor data that can be used to support decision-making throughout the enterprise.

With offices in major cities worldwide

WORLD HEADQUARTERS

Allen-Bradley
1201 South Second Street
Milwaukee, WI 53204 USA
Tel: (414) 382-2000
Telex: 43 11 016
FAX: (414) 382-4444

EUROPE/MIDDLE EAST/AFRICA HEADQUARTERS

Allen-Bradley Europa B.V.
Amsterdamseweg 15
1422 AC Uithoorn
The Netherlands
Tel: (31) 2975/60611
Telex: (844) 18042
FAX: (31) 2975/60222

ASIA/PACIFIC HEADQUARTERS

Allen-Bradley (Hong Kong) Limited
Room 1006, Block B, Sea View Estate
28 Watson Road
Hong Kong
Tel: (852) 887-4788
Telex: (780) 64347
FAX: (852) 510-9436

CANADA HEADQUARTERS

Allen-Bradley Canada Limited
135 Dundas Street
Cambridge, Ontario N1R 5X1
Canada
Tel: (519) 623-1810
FAX: (519) 623-8930

LATIN AMERICA HEADQUARTERS

Allen-Bradley
1201 South Second Street
Milwaukee, WI 53204 USA
Tel: (414) 382-2000
Telex: 43 11 016
FAX: (414) 382-2400